

# FDOT Quantities From Design to Quantity Manager

Denise J Broom
Engineering CADD Systems Office








## **Objectives**

- Cover the workflow for developing and recording/managing quantities for FDOT projects using tools and resources in the FDOTSS4 workspace for MicroStation/GEOPAK or PowerGEOPAK.
  - FDOT Standards/Resources
  - Calculate Quantities with D&C Manager
  - Export to Quantity Manager Database
  - Label Areas
  - Add Quantities in Quantity Manager




#### Quantities Workflow

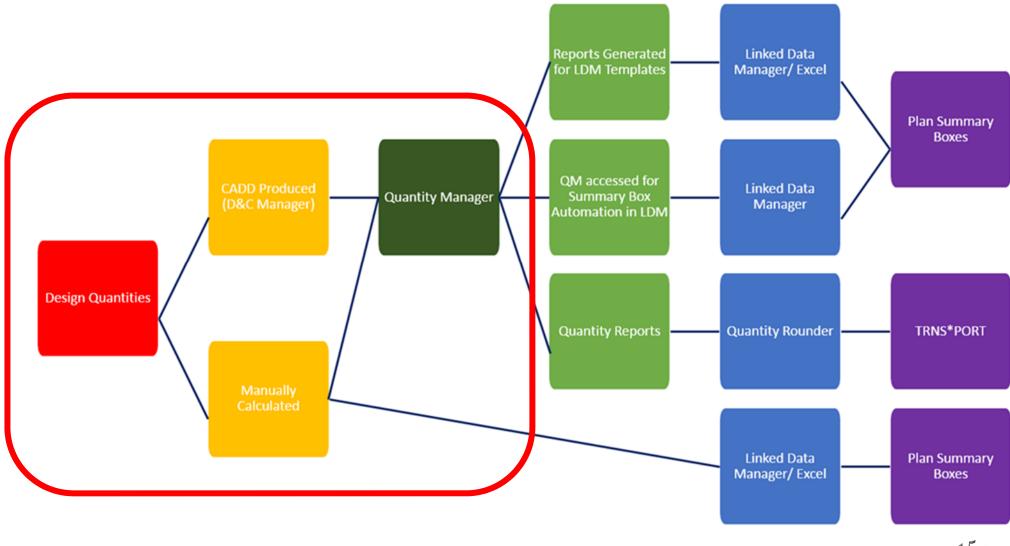

Recommended by the ECSO



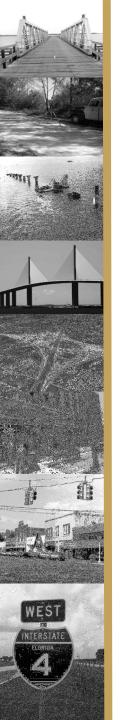


#### FDOT Standards

- Basis of Estimates Manual
  - Master Pay Item List
  - Pay Item Computation Methods
  - Chapter 8, Plan Summary Boxes
- Plans Preparation Manual
- CADD Manual (formerly CPCH)
  - D&C Manager






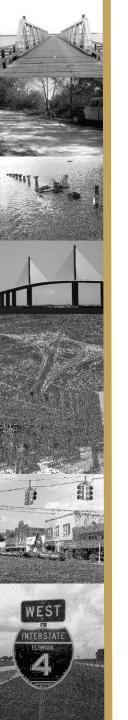


#### FDOT Standards

- Files
  - DSGN\*\*
    - Linear and Each items
  - OTDSRD\*\*
    - Area/Tonnage/Cubic Yard items
- Quantity Design Files are to be located in the appropriate Discipline directory of the project. This also applies to the Quantity Manager \*.mdb file.
- Create with the Create
   File/Project tool to insure correct
   locations and seed files.

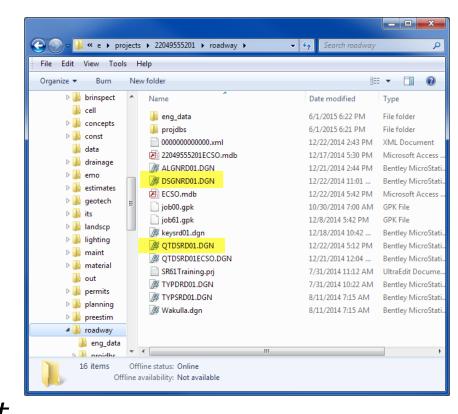



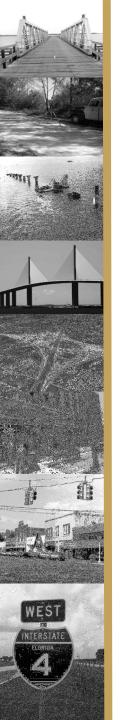

## Linear/Each Features

- Most linear and each quantity features are included in the plan view and therefore drawn in the DSGN\*\* file.
- These elements can be drawn using:
  - D&C Manager in the Design mode
  - Using Civil Features
    - Many of the FDOT Features are set up to use "Native Style". This
      means that in the background it is using the D&C settings to
      define the element. With most of the Civil Tools, this will include
      the adhoc attributes.
    - CHECK the adhocs set on the elements
      - No ability to modify the default values when placing with Civil Tools. Do they need to be modified?
        - Use the 3pc AdHoc Attribute tool to make changes
        - Or Set using the D&C Manager









#### Area Quantities

QTDSRD\*\* Set Up


- Recommend...
  - Setting up the Default model with all the reference files attached that may be needed for calculations.

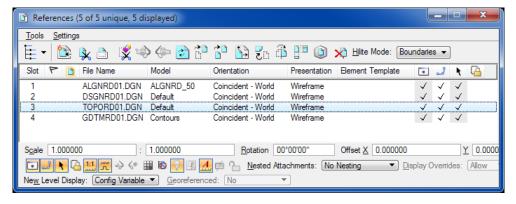

• Copy the set up Default model to create the models for individual quantities/pay items.

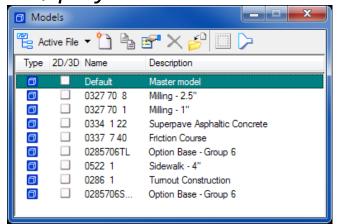





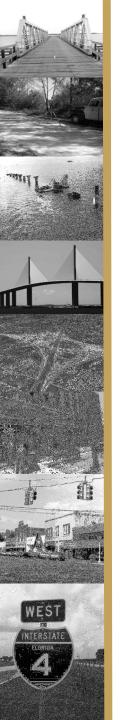

#### Area Quantities

- Recommend using the Create Region tool to create area shapes with Place Influence from the D&C Manager
  - D&C Manager Shape tool does NOT "play well" with Civil Elements.
  - Make sure to toggle off the setting for Associative Region Boundary. D&C will NOT recognize the shape if you toggle this option on!!!
  - Adjust the Adhoc Values before creating the shapes.

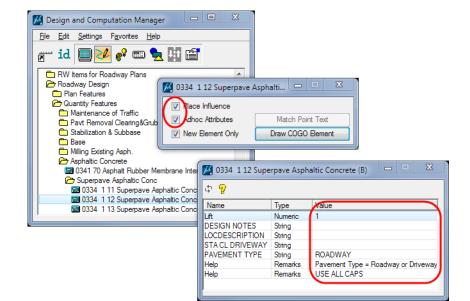

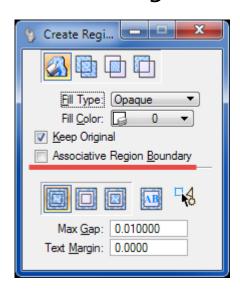








#### Calculate Quantities

- Use the D&C Manager
- Can calculate by single item, Category or Collection Set
- Make sure to use the option for Chain
  - Automated quantities must have a station associated with the quantity for LDM to include in the summary box.

Plan Quantity Computation
Job: 00 Q Extents: Active Design File ▼ Inside ▼ □
Chain ▼ SR61 ▼ "以 Begin Station: 698+80.82 ↔  ▼ Range: 500.00 ▼ End Station: 726+42.21 ↔



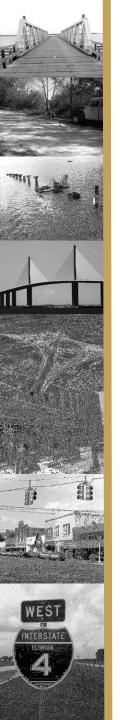

## Export Quantities

- Computation Results dialog allows the option to Export the quantities in multiple formats
  - To export to Quantity Manager the Export Format needs to be set to DBMS
  - Make sure to modify the Groupings to the correct Web Trns\*port Preconstruction (wT) category. (See BOE Chapter 9)

7	Computation	Results				<u></u>	D   X
							<u> </u>
	Item	Description			Quantity	Unit	Export
	0334 1 22	Superpave Asph	naltic Concrete (Traffic B	, PG	2503.6400	TN	✓
k	Export Format:	DBMS 🔻	22049555201.mdb	_ :	ireate ▼	Ехр	oort 🔲 🖳
	Run:		Groupings 0200		•	Disp	olay

Items are categorized by pay item range:

Item Numbers (Specification Sections)	SUBJECT/GRO	UP	TRNS*PORT Category / Design Group/ Plans
100-102	MOT		0200 Roadway
103	Temporary Struc	tures	_ ′
104		rainage	
	Control Fr	nvironmental	_
106-108	Environmental	Coordinator	_
		Water/Erosion Control	
		Air Quality	_
		Decontamination/Hazardous Materials	_
109	Field Office		_
110-199	"Dirt" Earthwork	Roadway	_
		Erosion Control Topsoil/Vegetation	_
200-299	Base Courses	ropsoli/vegetation	_
300-399		. Concrete Pavement	_
except 346-347	Concrete	, concrete r avement	0100 Structures or
CXCCPt 040-041	Concrete		0200 Roadway
400-499	Structures		0100 Structures
except 425-449	Drainage Structu	ires	0200 Roadway
500-515		ruction- Structures	0100 Structures
516-559		ruction- Roadway Items	0200 Roadway
560-569		ruction- Structural Paint	0100 Structures
570-599	Incidental Constr	0200 Roadway or	
			0600 Landscaping
600-699	Traffic Control De	evices (Signals)	0500 Signals
700-714	Traffic Control		0300 Signing
715	Traffic Control- L	ighting	0400 Lighting
720-740	Incidental Construction- Other Incidental Construction- Traffic Monitoring (TMS)		0200 Roadway
741-749			
750-770	Incidental Constr	ruction- Other	
780-789	Intelligent Transp	portation Systems (ITS)	0550 ITS
800-899	Mass Transit (Ra		0900 Mass Transit
1000-1999	Utilities		0100 Structures

NOTE: While pay item ranges are generally grouped by category, some items may be used in multiple categories. Refer to the specific items for details.






#### Label Area ID's

- Labeling Area ID's is REQUIRED.
- Use the VBA to label these areas
  - Found on the FDOT Plans Development > Quantities Task Menu
  - OR on the FDOT Menu under Actions > Label Shapes with ID

Label Shapes With ID	
Level: TextLabel	
Color: ByLevel (0)	
Weight: ByLevel (2)	
Font: FDOT	
Justification: Center Center	
TH: 0.07	
TW: 0.07 💆 😍	
Label Shapes Exit	

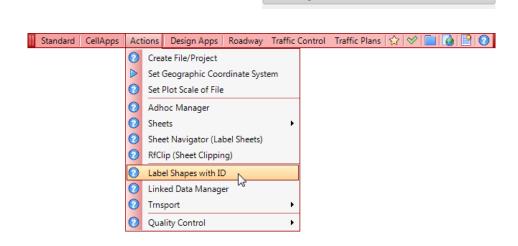

3 FDOT Plans Development

Typical Sections

**Existing Features** 

Drainage Plans

Traffic Control

Survey

Key Sheets Roadway Plans

↑ IN 38, \$P, \$P, ID, F, \$\times \$P\$ \$\times\$


🦍 🎤 🛅 🕾 🗎 🚃



 Create a selection set & then click Label Shapes.




## = = ^

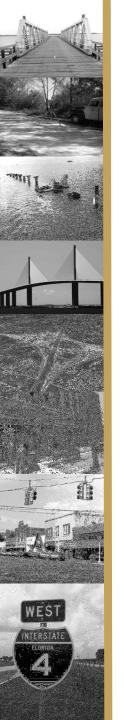


## Quantity Manager

- GEOPAK application used to manage quantities.
- Access options:
  - Right click in the MicroStation window and select Quantity Manager from the pop up menu
  - Select GEOPAK > ROAD > Quantity Manager from the MicroStation menu
  - Select the Quantity Manager icon on the FDOT Plans Development > Quantities Task Menu

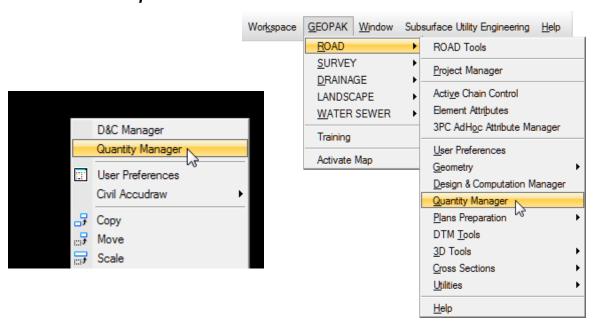






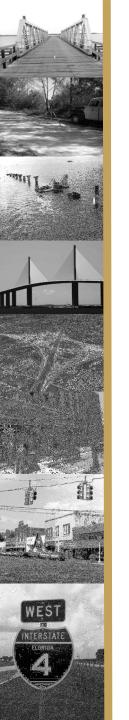

## Quantity Manager

- Right click on the Quantity or Element Pane headers to change the column options
- Right click in the Pay Item Pane to get context sensitive menu options to add, edit and delete categories, items and quantities

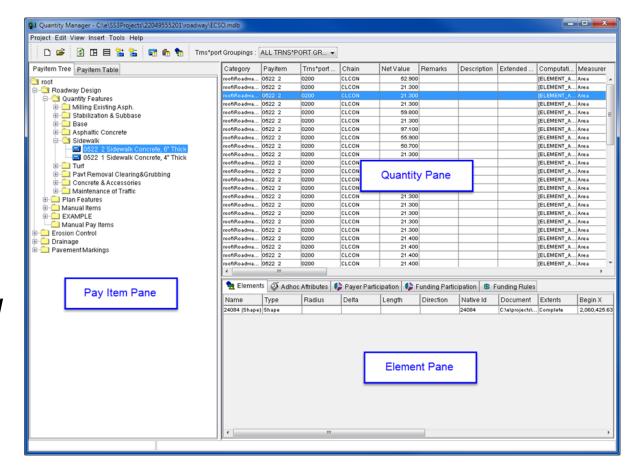






## Quantity Manager


• New Quantity Properties dialog box

New Quantity Properties	- For Payitem: 0327 70 1		X
General Location Ad	hoc Attributes		
Measurement Basis:	Each ▼		Create
Measurement Value:	0.000		Close
Computed Quantity:	0.000		
Rounded Quantity:	0.000		
Deduction Quantity:	0.000		
Net Quantity:	0.000		
Boundary Type:	None ▼		
Boundary Name:	<b>▼</b> ]	Boundary	
Run Name:			
Trns*port Groupings:	0200 🔻	Trns*port Gr	
Date / Time:	2014-12-22 16:45:56	Set Current	
Remarks:			
Description:			
Extended Description:			

New Quantity Properties - For Payitem: 0327 70 1	X
General Location Adhoc Attributes	
Baseline Chain:  Minimum Station  Station:  Offset  Maximum Station  Station:  Region:  Offset	Create
VERY IMPORTANT TO INCLUDE FOR AUTOMATION	

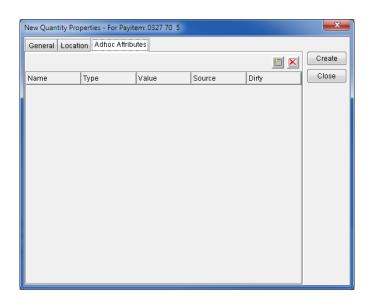



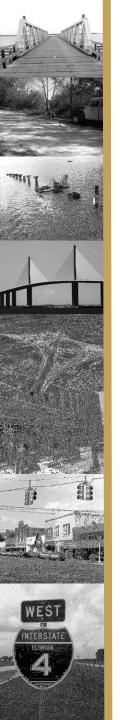

### Questions???

Thank-you for joining today's session.

Need some HELP? Contact me...

(850) 414-4751

E-mail: Denise.Broom@dot.state.fl.us

OR: ecso.support@dot.state.fl.us

http://www.dot.state.fl.us/ecso

#### FDOT CADD Support Forum On-line

http://communities.bentley.com/communities/user\_communities/fdot\_ cadd\_support/default.aspx

esign Trair