



PARTIAL ELEVATION VIEW

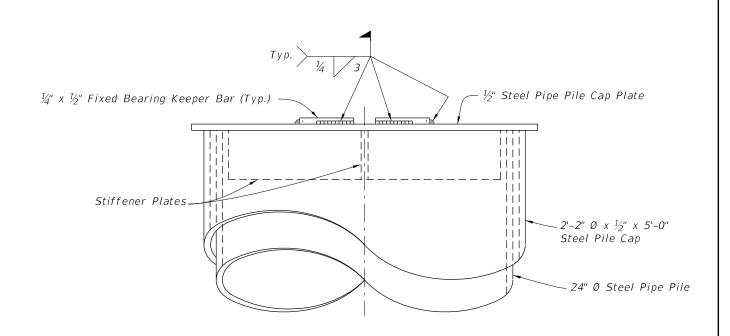

## **END VIEW**
 
## Note:

Use Shim Plates as required to provide equal bearing seat elevations across the bent. Vary thickness of Shim Plate across the pile cap plate to provide a level bearing area in the transverse direction.



FIXED BEARING KEEPER BAR DETAIL

= FIXED BEARING DETAILS ==

LAST REVISION IN 11/01/25

DESCRIPTION:

FDOT

FY 2026-27 STANDARD PLANS

