



BRIFEN★USA

BRIFEN★USA

BRIFEN USA, INC.

WIRE ROPE SAFETY FENCE

Brifen TL-4 Z-Post System and
MASH Gating Terminal (MGT)

PRODUCT MANUAL

(Installation & Repair Procedures)

Rev: April 2023

IMPORTANT - Confirm which product you are using and that you have the most current product specific manual. This can be determined by the information and date printed on the front cover.



WARNING: *The local highway authority, owners, and contractors are RESPONSIBLE for determining the appropriate design policies for the installation, maintenance, and repair of the Brifen WRSF system. Brifen USA is a material supplier and does not provide highway design services.*

Important: *These instructions are for standard installation specified by the appropriate highway authority. In the event the system installation, maintenance, or repair would require a deviation from standard parameters, contact a Brifen USA representative.*

The Brifen Wire Rope Safety Fence (WRSF) System includes TL-4 Z-Post Length of Need (LON) and MASH Gating Terminal (MGT). This system has been tested to American Association of State Highway and Transportation Officials (AASHTO) Manual for Assessing Safety Hardware, 2nd Edition – 2016 (MASH) criteria, and are eligible for Federal-aid reimbursement for use on the National Highway System (NHS).

This manual must be available onsite to the workers overseeing and/or installing the product. For additional copies, contact Brifen USA, Inc. at 1-866-427-4336. Brifen reserves the right to make changes to this manual at any time.



This document covers the installation, maintenance, and repair of the 4 Rope (Cable) Brifen Wire Rope Safety Fence (WRSF) System with TL-4 Z-Post (LON) and MASH Gating Terminal (MGT). Installation procedures for the other Brifen Systems are similar, therefore, drawings for the system being installed should be reviewed before the start of work, as post type and size, rope heights, etc. may vary.



CAUTION: *Terminal and line post foundation sizes are determined by soil classification, condition, temperature extremes, etc. If loose, wet, or otherwise questionable soils are encountered at the site, please contact the responsible agency representative or Brifen USA, Inc. for recommended foundation modifications.*

LIMITATIONS AND WARNINGS

Brifen USA, Inc., in accordance with AASHTO MASH, contracts with ISO 17025 A2LA accredited testing facilities to conduct crash tests, evaluate those tests, and submit the test results to the FHWA for review.

The Brifen TL-4 Z-Post System and MASH Gating Terminal have been evaluated as eligible for FHWA reimbursement according to the requirements and guidelines of MASH. The MASH eligibility requirements include a variety of crash tests to evaluate product performance by testing certain impact conditions.

The system is tested according to the test matrix criteria of MASH as designated by AASHTO and FHWA. These tests are not intended to represent the performance of systems when impacted by every vehicle type or in every impact condition. Each departure from the roadway is unique.

Brifen USA, Inc. expressly disclaims any warranty or liability for injury or damage to persons or property resulting from any impact, collision or harmful contact with its products, other vehicles, or nearby hazards or objects by any vehicle, object, or person, whether the products were assembled in consultation with Brifen USA, Inc. or by third parties.

The system is intended to be assembled, delineated, and maintained in accordance with this manual, associated drawings, and specific state and federal guidelines. **It is the responsibility of the authority specifying the use of a highway product to select the most appropriate product configuration for its site specifications.**

Evaluation of the site layout, vehicle mix, speed, traffic direction, and visibility are some of the elements that should be considered in the selection process.

After an impact occurs, the system must be evaluated and repaired to its original specified condition, as soon as possible. Product selection, approval, proper installation, and maintenance of any Brifen system is the sole responsibility of the specifying highway authority.



Safety Alert Symbols appear throughout this manual and indicate important statements that must be read and followed. Failure to do so could result in serious injury or death.

WARNING: Do not install, maintain, or repair the system until you have thoroughly and completely read this manual and understand it. Please call Brifen USA, Inc. at (866)427-4336 if you do not understand any portion of these instructions or this manual.

WARNING: Safety methods including appropriate traffic control devices and personal protective equipment (PPE) specified by the appropriate highway authority must be used to protect all personnel while at the installation, maintenance, or repair site.

WARNING: Ensure that your installation site meets all appropriate Manual on Uniform Traffic Control Devices ("MUTCD") and local standards.

WARNING: Use only Brifen USA, Inc. parts that are specified for use with the system for installing, maintaining, or repairing the system. Do not use parts from other systems even if those systems are other Brifen systems unless approved by Brifen USA, Inc. Do not modify the system in any way. These configurations may not have been tested or been approved for use.

IMPORTANT: Brifen USA, Inc. makes no recommendation whether the reuse of any part is appropriate or acceptable following an impact.

IMPORTANT: It is the responsibility of the applicable owner/agency/specifier to inspect the System after installation is complete to make certain that the instructions provided in this manual have been properly followed.

TABLE OF CONTENTS

| | |
|---|-----------|
| ABOUT | 1 |
| CONTACT INFO..... | 1 |
| INTRODUCTION..... | 2 |
| PREPARATION | 3 |
| PARTS LIST..... | 3 |
| RECOMMENDED TOOLS..... | 5 |
| SITE REVIEW/LAYOUT | 6 |
| INSTALLATION | 7 |
| END ANCHOR FOUNDATIONS | 7 |
| MGT AND LINE POST FOUNDATIONS | 9 |
| MGT POST INSTALLATION | 10 |
| LINE POST INSTALLATION..... | 11 |
| INSTALLING THE CABLES | 12 |
| STARTING END TERMINAL | 13 |
| TRAILING END TERMINAL..... | 15 |
| POST CAPS AND REFLECTOR BLADES | 16 |
| TENSIONING THE CABLES | 17 |
| CONSTRUCTION TENSIONING..... | 17 |
| FINAL TENSIONING | 18 |
| REPAIR | 19 |
| MAINTENANCE | 19 |
| REPAIRING POSTS | 20 |
| INSTALLING NEW POST WITH THE ROPE SPREADER TOOL | 21 |
| PROCEDURES TO REMOVE VEHICLES FROM ROPES..... | 22 |
| OTHER REMOVAL METHODS | 22 |
| APPENDIX | 23 |
| TOLERANCES | 23 |
| TROUBLESHOOTING | 24 |
| TECHNICAL DRAWINGS..... | 25 |
| TENSION LOG | 28 |
| BRIFEN INSPECTION FORM | 29 |

ABOUT US

CONTACT INFO



Telephone: 405-751-8062 (Local)
1-866-427-4336 (Toll-Free)

Fax: 405-751-8338

Email: sales@brifenusacom

Website: www.brifenusacom

Address: 12501 N Santa Fe Ave
Oklahoma City, OK 73114

INTRODUCTION

Brifen Wire Rope Safety Fence (WRSF) is a high-tension median or roadside cable (wire rope) barrier system widely used around the world and in many U.S. states. It is available in several designs. This manual discusses the **TL-4 Z-Post LON and MASH Gating Terminal**.

The ¾" galvanized wire ropes are pre-stretched during manufacturing to reduce stretching during impact, and thus are more easily maintained. The four ropes are interwoven around the line posts, with all ropes securely connected to the terminal at each end. The ropes are not attached to the posts; nylon pegs hold the ropes up on the sides of the posts, positioning the ropes at the proper heights.

Brifen WRSF is unique among cable barriers due to the patented interweaving of the wire ropes. Each pre-stretched wire rope is highly tensioned, which, together with the weave, creates high post/rope friction. This causes each post to act as a "mini-anchor," which helps limit the extent of damage during impacts, eliminates the need for intermediate anchors, and assures satisfactory performance even around curves.



A major benefit of interweaving the wire ropes is that deflections are more predictable, even when long sections (typical in real-world installations) are impacted. Research has shown that with straight (non-woven) systems, deflections increase with system length.



Brifen's MASH Gating Terminal or "MGT" is also unique with its no release cable connections, thus minimizing lost tension from impacts and maintenance equipment.


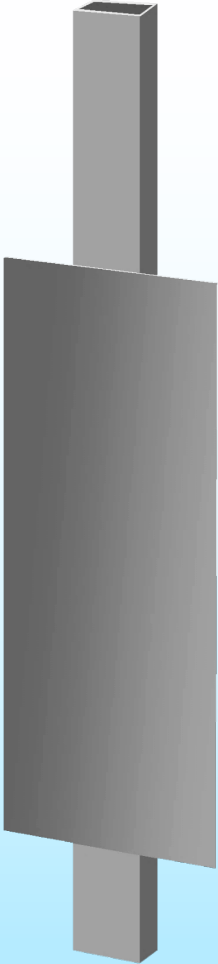





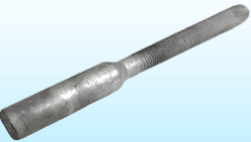
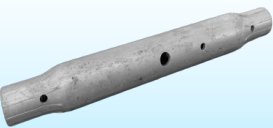
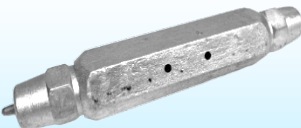

Brifen Drawings (Included in this Manual) should be carefully reviewed prior to starting the installation.

PREPARATION

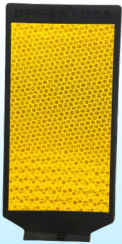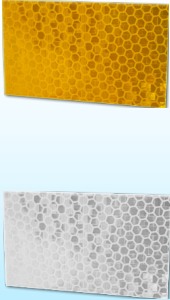PARTS LIST

| | | | | | | | | | |
|--|--|--|--|---|---|--|--|---|--|
| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">MGT-4</p>  | <p style="writing-mode: vertical-rl; transform: rotate(180deg);">O11-1</p>  | <p style="writing-mode: vertical-rl; transform: rotate(180deg);">O11-2</p>  | <p style="writing-mode: vertical-rl; transform: rotate(180deg);">O11-3</p>  | <p style="writing-mode: vertical-rl; transform: rotate(180deg);">Z11</p>  | <p>MGT Anchor Assembly (4 Rope TL-4) Includes Anchor Plate and 4 ea. 3/8" Anchor Bolts w/ hardware</p> | <p>MGT Post-1 28" O-Post (No Dimples)</p> | <p>MGT Post-2 40" O-Post (No Dimples)</p> | <p>MGT Post-3 50" O-Post Welded Tabs for each rope</p> | <p>Line Post 56" Z-Post</p> |
| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">O80-Axx (Amber) O80-Wxx (White)</p>  | <p style="writing-mode: vertical-rl; transform: rotate(180deg);">A82</p>  | <p style="writing-mode: vertical-rl; transform: rotate(180deg);">O80</p>  | <p style="writing-mode: vertical-rl; transform: rotate(180deg);">A42</p>  | <p style="writing-mode: vertical-rl; transform: rotate(180deg);">O41</p>  | <p>MGT Reflector Blade 6" Single/ Double Sided</p> | <p>LON Prismatic Reflector</p> | <p>MGT Post Cap LON Post Cap Required on All Posts</p> | <p>LON Locating Peg</p> | <p>MGT Plastic Excluder LON Plastic Excluder</p> |

| | | | |
|--|--|---|--|
| <p>Z40</p>  | <p>Z44</p>  | <p>Z21</p>  | <p>Z91</p>  |
| <p><i>LON Steel Socket</i></p> | <p><i>LON Driven Z-Post Socket with soil plate (length varies)</i></p> | <p><i>LON Driven Z-Post with soil plate</i></p> | <p><i>LON Bolt Down Z-Post Surface Mount requires 4 ea. Anchor Bolts (by others)</i></p> |
| <p>O40-S</p>  | | | |
| <p><i>MGT Steel Socket with Plastic Cap</i></p> | | | |

| | | | |
|--|---|--|---|
| <p>A51(x)</p>  | <p>A52</p>  | <p>A53</p>  | <p>A71</p>  |
| <p><i>Swaged Threaded Terminal Left (A51L) and Right (A51R)</i></p> | <p><i>Turnbuckle (Rigging Screw)</i></p> | <p><i>Cable Splice</i></p> | <p><i>Push Lock Fitting</i></p> |

PREPARATION

RECOMMENDED TOOLS


















Recommended PPE

It is recommended that the following personal protective equipment (PPE) be provided for the safe installation of Brifen:

- Safety footwear
- Gloves
- Hearing protection
- High visibility clothing
- Hard hat if required

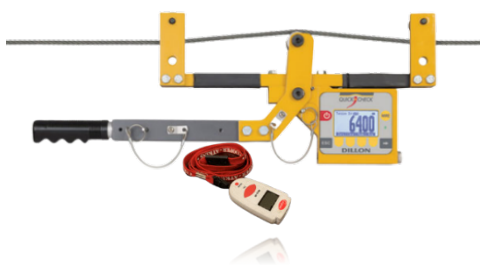Items with part numbers available for purchase from Brifen USA, Inc.:

| | | | | | |
|---|---|---|--|---|---|
| <p>T-05</p>  |  | <p>T-19</p>  |  | <p>T-18</p>  |  |
| <p>Klein Pry Bar</p> | <p>Measuring Tape</p> | <p>Cable U-Bolts (Minimum of 8ea.)</p> | <p>Hammer</p> | <p>Eye-Bolt</p> | <p>Copper Anti-Seize</p> |
|  | <p>T-23</p>  |  |  | | |
| <p>Post Level</p> | <p>Klein Parallel Jaw Grip</p> | <p>Wrenches Various Sizes (12" Minimum)</p> | <p>Chop Saw or other abrasive cutter</p> | | |
|  | <p>T-28</p>  | <p>T-01</p>  | | | |
| <p>Cable Spreader</p> | <p>T-20</p>  |  | | | |
| | <p>Cable Spreader Manual Pump</p> | <p>Come-Along 1.5-ton Capacity or greater</p> | | | |



Important: It is the responsibility of the state/specifying agency design engineer to ensure that the Brifen WRSF System placement conforms to the AASHTO Roadside Design Guide.

Important: The Beginning of Length of Need for the system was determined during MASH Test 3-35 at MGT Post-3, which is 36'-6" from the center of the End Anchor Plate.

Important: Brifen USA, Inc. does not direct grading. Proper site grading must be completed before the installation of the system. Local specifying agency guidelines OR the AASHTO Roadside Design Guide should be followed, whichever is more stringent.

Prior to beginning installation, the proposed site should be carefully checked. The area should be relatively smooth, with compacted soil and no edge drop-offs, abrupt slope changes, holes, debris, etc. that could prevent a vehicle from impacting the Wire Rope Safety Fence with all wheels on the ground and suspension normal. Some filling and/or grading and compaction may be necessary. The ropes are recommended to be placed at design height above ground, and the maximum deviation is ± 1 inch.



Important: Sockets should be installed flush with grade in order to maintain proper rope heights.

Placement in the bottom of a median ditch is generally not recommended due to conflicts with drainage inlets and dikes, which create difficulty in maintaining correct rope heights. Also, these locations are typically wet and offer poor support for post and anchor foundations. Offsets from median ditches should preferably be 10' or more, but within 1' of the ditch bottom may be acceptable. Slopes on the traffic approach side should be typically no steeper than 6:1.

For roadside applications, the preference is that the distance to the hinge point behind the fence is sufficient to accommodate the barrier's design

deflection and provide adequate lateral support for the system. Adequate clearance to rigid obstacles such as bridge piers, sign supports, power poles, trees, slopes, etc. is critical. It is important to select the proper post spacing for the minimum design deflection desired. With 7-foot post spacing, minimum clearance should be at least 8 feet, but 10 feet or more is preferable. By reducing the post spacing in the vicinity of an obstacle, clearances can be reduced, if needed, per specifying agency requirements.

When the WRSF must be placed in the vicinity of other barriers, special considerations are required. An example is a barrier at bridge approaches. If the side slopes are relatively flat and the other barrier is parallel to the roadway, the Wire Rope Safety Fence can be tapered over, and the end terminal placed behind the other barrier. A minimum clearance of 10' from the end treatment of the parallel barrier is recommended. If the other barrier is flared, the WRSF can be terminated on the traffic side using the MGT.



INSTALLATION

The major steps in the installation of Brifen's TL-4 Z-Post System and MASH Gating Terminal are as follows:

- Constructing the terminal foundations
- Constructing the post socket foundations
- Installing the terminal posts
- Installing the line posts
- Installing the wire ropes
- Tensioning the wire ropes

END ANCHOR FOUNDATIONS



Potential Hazards: deep excavation, movements from machinery.

Recommended Control Measures: Maintain an exclusion zone around moving machinery, do not leave deep excavations unattended.

Important: Foundation sizes vary, depending on soil type and condition, water table depth, temperature extremes, etc. If loose, wet, or otherwise questionable soils are encountered at the site, please contact the responsible agency representative or Brifen USA for advice on sizes.

Important: All plans and drawings should be reviewed for end terminal locations and system offsets from the edge of the travel lane and from obstacles. End terminal and post foundation concrete should be the strength specified and adequate cure time must be allowed, typically at least one week or until strength test cylinders indicate minimum concrete strength has been attained before tensioning the WRSF.



IMPORTANT: The concrete anchor block must be flush with the existing grade.

A **neat excavation** (vertical sides and flat bottom) for the end terminal foundation is required, with **minimum disturbance of the natural ground**. If surrounding soil is disturbed, loose materials must be removed and the foundation either:

- 1) over-excavated and forms set, reinforcing steel and concrete placed and, later (after form removal), backfilled using compaction equipment to attain 95% density, or
- 2) over excavated, with vertical sides and flat bottom, and the loose material removed.

After reinforcing steel placement, the entire over-excavation is then filled to flush with the ground line using extra concrete.


Review shop drawings and/or project specific drawings for proper placement of anchor frame and reinforcing steel (by others) in foundation. The 4 anchor frame bolts (1" x 36" long) **must** be placed into the wet concrete. The bottom of each bolt will have a nut that is factory welded. The anchor plate **must not** be buried in the concrete; it should sit level on top of the concrete surface so that, if necessary, it can be unbolted, removed, and replaced. The area should be shaped to drain. All concrete placements should comply with agency requirements.

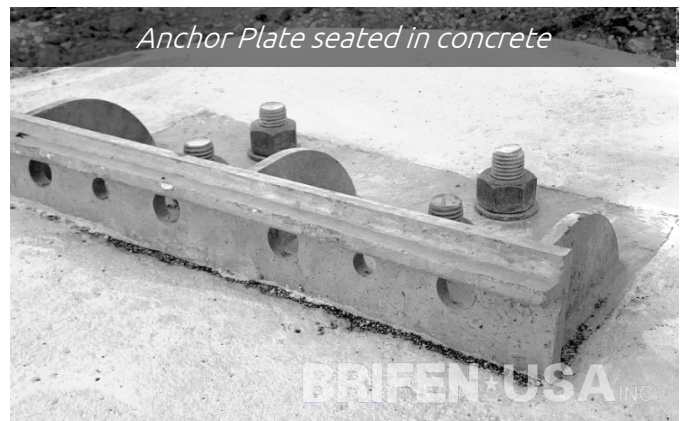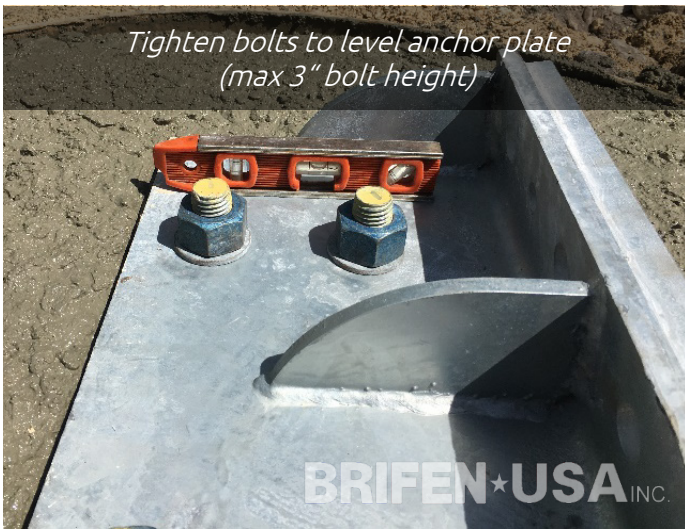

INSTALLATION

MGT AND LINE POST FOUNDATIONS

MGT End Terminal

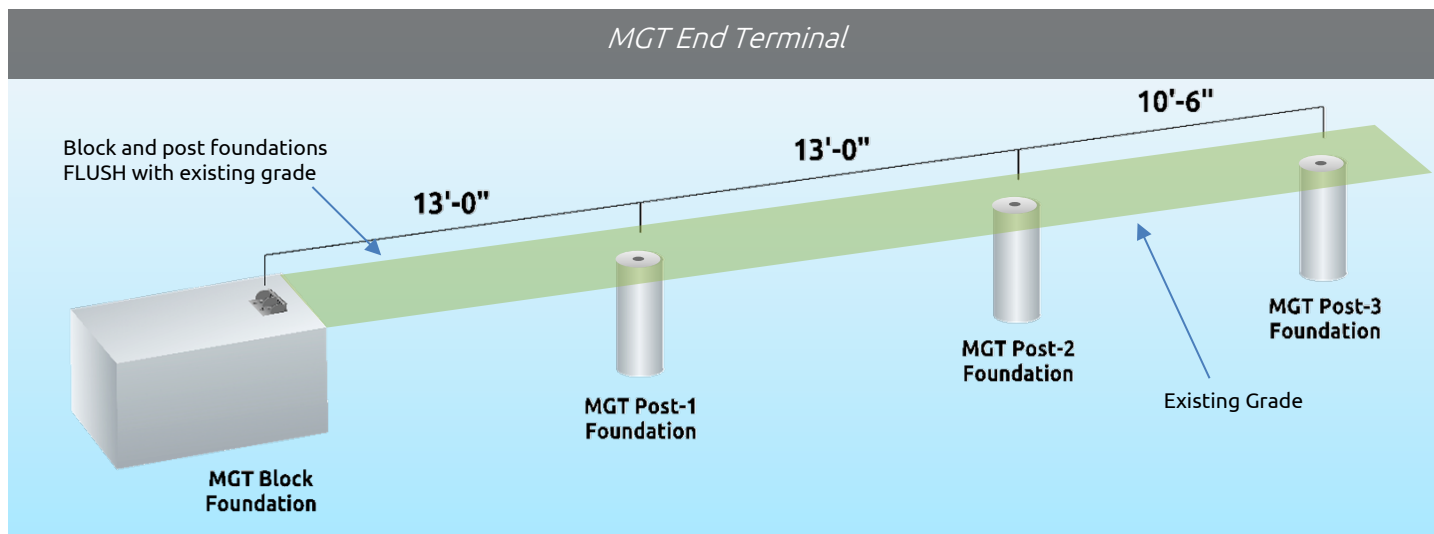

Potential Hazards: deep excavation, movements from machinery.

Recommended Control Measures:

Maintain an exclusion zone around moving machinery, do not leave deep excavations unattended.




The concrete shall have a minimum 28-day strength of 3000 psi or per agency specifications.

NOTE: The reinforcing ring may be omitted if the socket is placed in a continuous concrete mow strip.

1. Using a string line start at the center of the anchor plate location to establish the position of the terminal post foundations.
2. MGT Post-1 is 13'-0" from the center of the anchor plate.
3. MGT Post-2 is 13'-0" from MGT Post-1.
4. MGT Post-3, known as the Hook Post, is 10'-6" from MGT Post-2.
5. After the Hook Post, the first Line Post foundation is spaced at the distance specified by the agency or in the plans. All subsequent foundations placed at the same spacing typically until the ending terminal is reached. Using an auger, drill the post foundations to a depth specified by agency or plans and remove spoils.
6. Pour concrete into the hole to within 1-2 inches of the **finished surface level or grade**.
7. Insert the post socket into the center of the concrete ensuring the top of the socket is aligned with the finish surface level, perpendicular to the roadway and in alignment with other sockets.
8. Place the reinforcing ring (supplied by others) in the center of the post hole at a depth of 2 inches from the surface. The ring can be omitted if placed in a continuous concrete mow strip.
9. Insert a post or jig with attached level into the socket to ensure the socket is vertically plumb.

Jig used to vertically align post socket in concrete

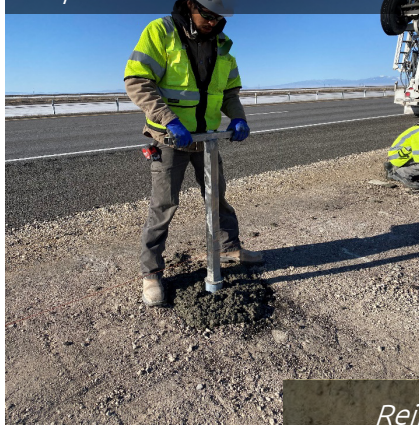

Reinforcing Ring (By Others)



MGT POST INSTALLATION



Potential Hazards: Injury from movements and posture, hand injury from pinch points.

Recommended Control Measures: Observe correct techniques (bend at the knees), wear gloves.





NOTE: MGT Post-1 and Post-2 will not have retainer clips as there are no dimples and ropes will be free-floating. Not all ropes may contact the posts.

MGT Post-3 (Hook Post) will have welded tabs and will have 2 ropes installed on one side and 2 on the other.

The MASH Gating Terminal (MGT) has 3 steel posts with different heights.

- **MGT Post-1:** 28" tall, positioned 13'-0" from the center of the anchor plate
- **MGT Post-2:** 40" tall, positioned 13'-0" from MGT Post-1
- **MGT Post-3 (also known as the Hook Post):** 50" tall, positioned 10'-6" from MGT Post-2. This post has four (4) staggered, protruding tabs that position each of the four (4) wire ropes.

1. Slide an excluder over the bottom of each post.
2. Beginning at the starting MGT anchor, insert the terminal posts into their respective sockets. The posts should gradually taper upwards to full height.
3. The Hook Post is orientated with the bottom protruding tab on the same side as the first starting D rope coming out of anchor plate.

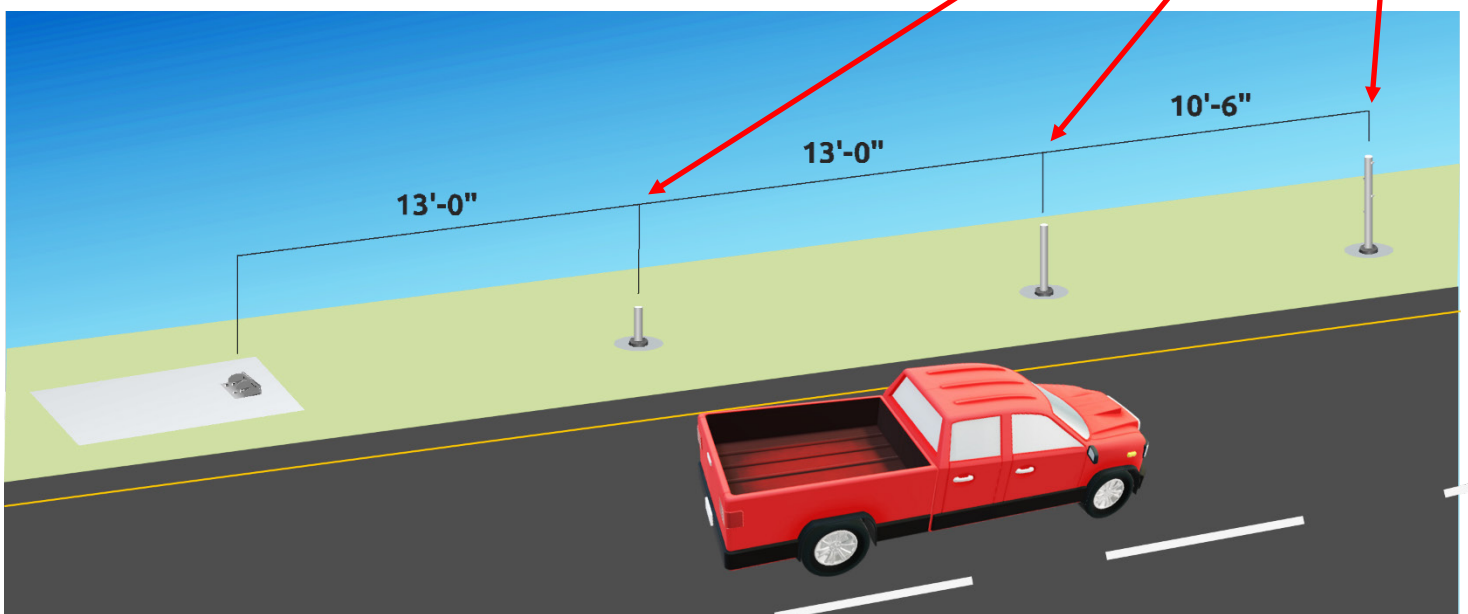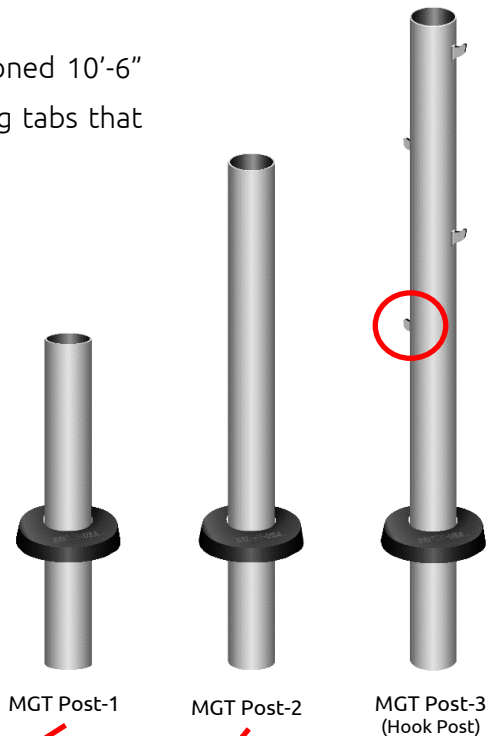


INSTALLATION

LINE POST INSTALLATION

Posts located in the Length of Need (LON) are known as Line Posts and are 56" tall and feature holes for three (3) locating pegs, and a slot on top.

1. Insert the Line Posts with excluder in their respective sockets.
2. Tap in a nylon "locating peg" into the pre-drilled hole on the side of the post at each corresponding heights of the 3 cables.
3. Continue to next post but alternate sides when installing pegs.

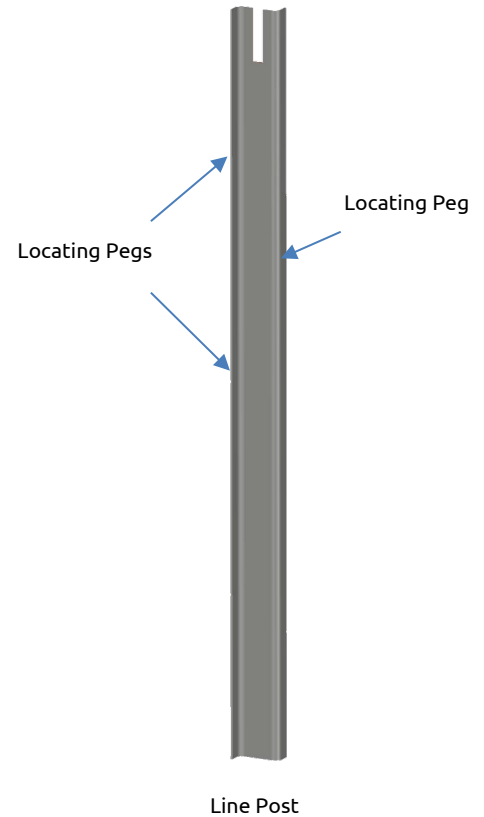

It is recommended that post caps and reflectors be installed on posts AFTER ropes have tension.



INSTALLING THE CABLES




Potential Hazards: Injury from movements and posture, hand injury from pinch points.



Recommended Control Measures: Observe correct techniques (bend at the knees), wear gloves.



Important: The ropes can be installed individually or 2-4 at a time. The D rope is always installed first, continuing the order from the ground up.

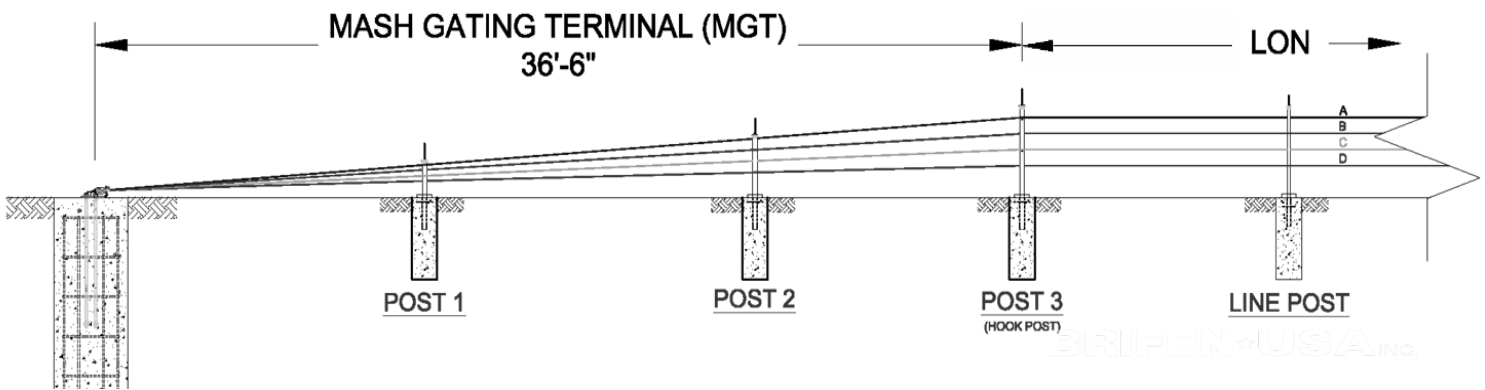


The ropes (normally in 1000' lengths) are delivered on large reels, four (4) lengths per reel, with Left and Right hand swaged threaded fittings factory attached. The rope sections will be connected using a "turnbuckle" (rigging screw). Ropes are connected to the starting MGT anchor frame, left to right, in the order **D, C, B, A**. Each of the ropes are connected to the trailing/downstream MGT end terminal using shorter "tail ropes", sized to fit the length of the total wire rope fence (run or section). These tail ropes are delivered on separate reels, marked for a specific fence and not interchangeable. Brifen will supply a fence cabling map/guide based on the project-specific fence lengths **that have been field verified by the contractor prior to fabrication** to assist in assembly.



INSTALLATION

STARTING END TERMINAL

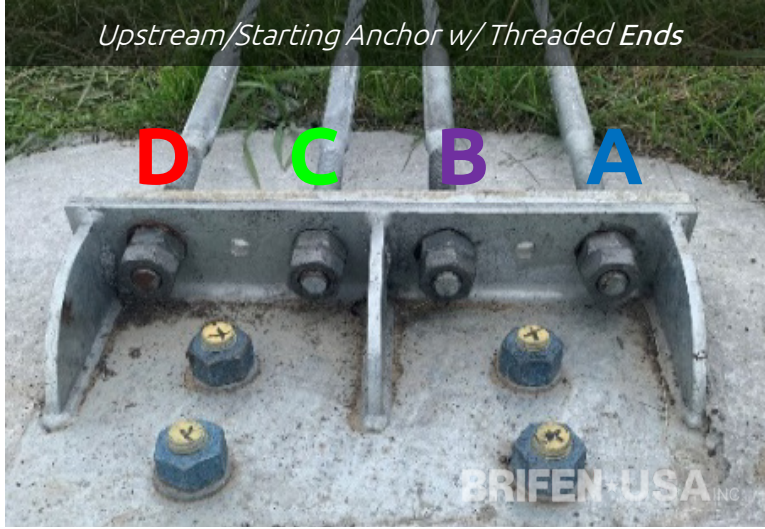

Important: Rigging screws shall not be located within the terminal section.

Note: At least three (3) threads of the MGT end fitting should show through the locking nut.

For clarity, these instructions describe the installation of 1 rope at a time. Installing 2-4 at a time can be done with the proper equipment and manpower. Ropes are installed D, C, B, A; with D being the bottom rope and A the top rope.

1. Using a truck or trailer fitted with a cable reel frame and starting with the D rope, insert the RH threaded swaged fitting directly from the reel into the LEFT hole in the anchor frame.
2. Secure the 2 nuts on the threaded fitting leaving at least 3 threads exposed. Rope D and A will not weave prior to MGT Post-1. Rope B and C weave around all posts.
3. Then alternate sides starting with MGT Post-2.



Note: MGT Post-1 and Post-2 do not have protruding pins or dimples. The wire rope will simply rest against the side of these posts as they taper up to full height.

Note: Rope D is positioned on the bottom resting on the lowest hook.

4. Pull and interweave the rope until you get to the end of the 1000' section where there will be a LH threaded fitting.



5. At each Line Post use a locating peg to rest the rope at the right height.
6. At the location of the rigging screw, ensure the cable slack is pulled tight. Using a parallel jaw cable puller attached to the cable about one post space from the threaded fitting, pull out the rope slack using a winch, vehicle or other equipment and temporarily clamp the rope to a post using a U-bolt or other clamping method (by others). One clamp per rope per post.
7. A turnbuckle will be needed to connect the LH fitting at the end of the first rope to the RH fitting of the next rope section. Coat all threaded ends with a copper anti-seize lubricant before engaging the turnbuckle for easier tightening.
8. Attach the turnbuckle to both threaded end fittings, ensuring at least 1" of thread is secured or until threads are visible in the turnbuckle inspection hole (if present).



Note: Occasionally turnbuckles will land at line posts, and this is normal and has been crash-tested.

Note: The rope position or order on the trailing anchor plate **may be opposite** to the starting anchor as this is determined by the number of the Line Posts.

9. Repeat the process of weaving and resting the **D** rope on the bottom locating peg of the Line Posts until reaching the trailing end anchor.
10. At the trailing anchor, ensure the cable slack is removed from the rope along the system as described above.
11. Repeat steps 1-10 with ropes **C** and **B** using the opposite weave pattern to the rope below.
12. For Rope **A**, follow steps 1-4 until you reach the first line post then the cable will be placed in the slot in the top of all the line post until you get to the trailing end terminal. Starting with the hook post at the trailing end terminal begin weaving the cable the opposite of the cable below.

Klein Parallel Jaw Grip



BRIFEN★USA INC.

U-bolt used as a temporary clamp



BRIFEN★USA INC.

Rigging screws can be located at post



BRIFEN★USA INC.

INSTALLATION

TRAILING END TERMINAL

At the trailing/downstream end it is important to pull any remaining slack from the rope prior to making the final connection. If a come-along is used to pull rope slack, it can be hooked to the frame by use of a temporary 5/8" x 8" eyebolt placed in one of the 2 smaller non-rope holes on the anchor frame face. This or other methods can be used to pull any remaining slack prior to making the final rope cut and hardware connection.



On the trailing end, slide each rope through its respective hole in the end anchor plate. Pull the rope tight as described above and cut off any excess rope leaving 2-3 feet extending past the anchor frame. Slide the barrel end of the mechanical **Push Lock Fitting** onto the rope from the backside of the frame to secure the rope. This fitting should be pushed tight against the frame and the end nut securely tightened **by hand**. Do not cut excess rope until the Construction tensioning (page 17) has been completed.



NOTE: the eyebolt must be removed after installation.




Important: Keep body parts clear of abrasive blade cutting device.

Ensure proper personal protective equipment (PPE) is worn. Failure to follow this warning could result in serious injury or death.



Note: Turnbuckles (Rigging Screws) shall not be located in the MASH Gating Terminal (MGT) that is between the MGT end anchor Plate and MGT Post-3 (Hook Post). **Push Lock Fitting should be HAND TIGHTENED ONLY**

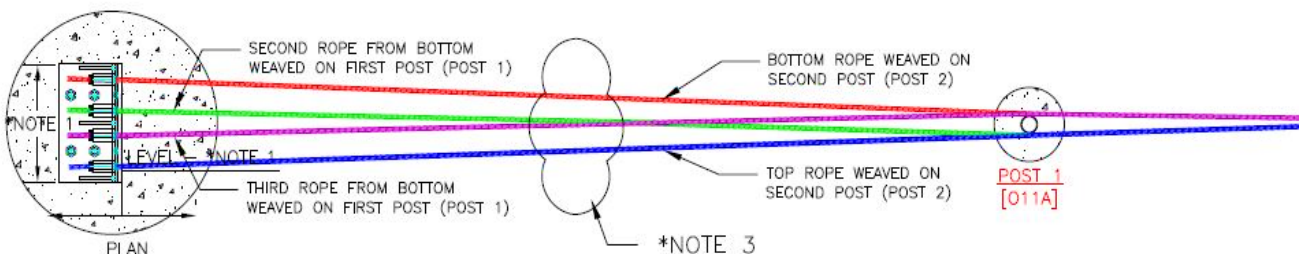

POST CAPS AND REFLECTOR BLADES



POST CAPS ARE TO BE PLACED ON EVERY POST

IT IS RECOMMENDED THAT CAPS AND REFLECTOR BLADES BE INSTALLED AFTER INITIAL TENSION APPLIED TO ROPES.

MGT POST CAPS

Only the post in the MGT section will have the round post cap [O80] installed.

Clip-on blades with reflective sheeting (per agency requirements) will be locked onto the post caps at the spacing and color specified. Reflective colors shall meet the MUTCD and project specifications. Specifying agency shall stipulate size, color, and post frequency.

Brifen is the only manufacturer that supplies the reflector already installed on the MASH Reflector Blades.



The closed end of the post cap will always face the road centerline with the slot always perpendicular to traffic.

Since a cable system can be installed on the left-hand (median) or right-hand side of the road, **in applications** with reflectors on only one side of the blade, it is **IMPORTANT** to determine which way the post cap **MUST** be installed so that the reflector blade slides into the post cap groove correctly.

When only one side of the blade requires reflectivity, the reflector will be factory installed on the U-shaped side of the blade. In this case, the post cap must be installed with the wedged groove perpendicular to traffic and the narrow portion facing the road centerline.

LON POST CAPS

For all line post install the Rectangle shaped post cap [Z80]. Reflector decals will be placed on the side of the post cap at every 3 to 5 post, or per agency requirements.

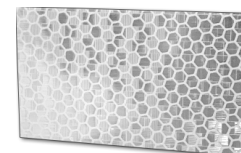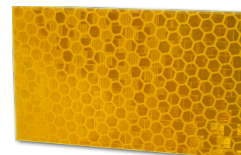

Important: Ensure delineation (reflective sheeting) used on the Brifen WRSF System meets state/specifying agency's MUTCD for proper delineation.

TENSIONING

CONSTRUCTION TENSIONING



Potential Hazards: Hand injury from pinch points. Once the tension meter is engaged, make certain to reinstall the lock pin.


Recommended Control Measures: Wear gloves.

Important: Do not allow bystanders or workers to stand near the system when under tension or in circumstances where the cable may be impacted or cut.

Important: Proper cable tension is critical to system performance. A calibrated tension meter and accurate infrared thermometer must be used to obtain the proper tension.



Tensioning Meter

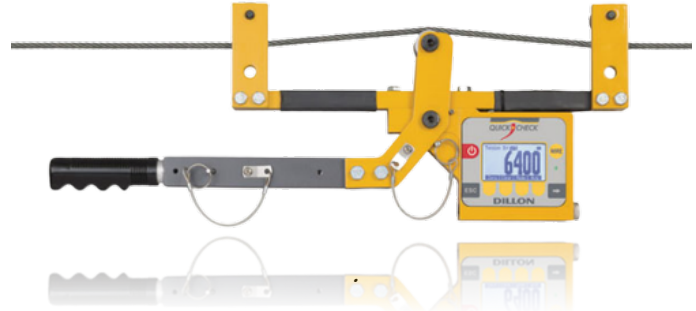

Infrared Thermometer



The Dillon Tension meter, purchased through Brifen USA, Inc. comes with an infrared thermometer

| ROPE TENSION TABLE | | |
|--------------------|---------------|--------------|
| ROPE TEMP.(°F) | TENSION (LBS) | TENSION (kN) |
| 0 | 5700 | 25.4 |
| 5 | 5550 | 24.7 |
| 10 | 5400 | 24.0 |
| 15 | 5250 | 23.4 |
| 20 | 5100 | 22.7 |
| 25 | 4950 | 22.0 |
| 30 | 4800 | 21.4 |
| 35 | 4650 | 20.7 |
| 40 | 4500 | 20.0 |
| 45 | 4350 | 19.3 |
| 50 | 4200 | 18.7 |
| 55 | 4050 | 18.0 |
| 60 | 3900 | 17.3 |
| 65 | 3750 | 16.7 |
| 70 | 3600 | 16.0 |
| 75 | 3450 | 15.3 |
| 80 | 3300 | 14.7 |
| 85 | 3150 | 14.0 |
| 90 | 3000 | 13.3 |
| 95 | 2850 | 12.7 |
| 100 | 2700 | 12.0 |
| 105 | 2550 | 11.3 |
| 110 | 2400 | 10.7 |
| 115 | 2250 | 10.0 |
| 120 | 2100 | 9.3 |
| 125 | 1950 | 8.7 |
| 130 | 1800 | 8.0 |
| 135 | 1650 | 7.3 |
| 140 | 1500 | 6.7 |

During the construction phase, it has been found that by applying an initial tensile force of approximately 120% of that required per the Tension Chart or vibrating the ropes by rapping the line posts with a hammer or by use of a mechanical vibrator will aid in Final Tensioning. This accelerates the creep and redistribution of the tensile force by reducing the friction between the posts and the interwoven ropes.

It is not necessary to record tension during the construction phase of tensioning



NOTE: The Final (second) tensioning is recommended after approximately a two or three-week period.

After Construction Tensioning has been completed, approximately a two-to-three-week period, the rope tension will decrease as a result of the rope harmonizing. When measuring for the Final Tensioning the rope tension may be plus or minus of the tension table

Follow the steps outlined below using only the tension values from the chart (page 17). Once the tension meter readings at a given turnbuckle are set, then move to the next turnbuckle and complete checking the entire fence.

1. Ensure that the Turnbuckles have the minimum thread engagement of 1" or are visible in the inspection hole and that the slack has been taken out of the ropes.
2. Check that each rope is securely fastened to the end anchor frames.
3. Start at either end of the fence close to the vicinity of a turnbuckle. Turn on the Dillon Tension Meter (optional). Pull out the pin and open the lever arm and hang on the top **A** rope. Ensure that all 3 sheaves (rollers) are riding on the rope, then close the lever arm and re-insert the lock pin. The center sheaves will deflect the rope, displaying the current rope tension.
4. Aim the infrared thermometer at the **D** rope and read the temperature rounding up or down to the nearest 5-degree increment. Refer to the Brifen Rope Tension Table to determine the proper rope tension that coincides with the rope temperature.

5. Connect 3 pipe wrenches to one rope. One on the right-hand fitting, one on the left-hand fitting, and one at the turnbuckle.
6. Adjust the Turnbuckle until the targeted rope tension has been reached. Release the Dillon lever arm and move the tension meter to the next rope below. Repeat the above procedures for the remaining ropes.



7. Record the results being sure to log the date, time, rope temperature and rope tension settings on the Tension Log provided (page 32).



Brifen is a low maintenance barrier. Except for repairs due to impacts, it is recommended that a routine inspection be undertaken to assess the following:

- Tension checked if ropes appear to sag
- No damaged ropes or hardware
- Debris has not accumulated around the barrier which may impede the function of the barrier.
- Vegetation around the barrier is appropriately maintained.
- Post caps and locating pegs have not dislodged
- The system is appropriately delineated.



When checking tension during routine maintenance or after a repair you **MUST** check the tension at every turnbuckle within the specific fence first, then use an average of all the readings taken for each rope at the turnbuckles for that fence.



NOTE: Do not adjust rope tension based on one reading as rope migrates with temperature swings and during impacts.

If the average tension for a given rope is outside the 20% tolerance from the table on page 17, then adjust the tension lower or higher, as needed, starting at the turnbuckle with the lowest or highest reading.

The rope temperature should be checked at each turnbuckle location since rope temperature may vary widely from the ambient temperature and previously tensioned ropes.

The turnbuckles should have been lubricated before assembly to facilitate adjustment and/or removal during maintenance or repair of the safety fence. If lubricant is needed, a copper anti-seize lubricant is recommended.

In the event of an impact, damage to the Brifen system is to be assessed and appropriate repairs made according to agency policy.

If an impact is within 150 ft of the end terminal, then the Hook Post and end anchor should be inspected for damage.

In the unlikely event that, following a vehicle impact it is necessary to remove the Brifen ropes to assist in vehicle recovery see Note on page 22.





DO NOT CUT THE ROPES UNDER TENSION. Reduce rope tension by removing 5-10 posts first, which introduces slack. Remove more posts, if necessary, to manage ropes.

REPAIRING POSTS

The following are instructions for repairing mid-run hits to Brifen WRSF after the vehicle(s) have been removed from the system. Please see Vehicle Removal (page 22) if vehicles are still present before repairing WRSF.





1. Remove bent or damaged post(s). If a post is tight in a socket, use a pry bar to break it loose and then lift post straight up. Posts frozen in sockets may need to be heated (weed burner, torch, steam, etc.)
2. If there are an odd number of posts needing to be replaced, every other post can be inserted through the ropes (now un-woven). Excluders (gaskets) should be in place on the posts before insertion.
3. If there are an even number of posts needing to be replaced, the weave will still be present.
 - Remove one more post; at this point, the weave will not be present, and every other post can be dropped down through the ropes.
 - For the remaining posts, follow the procedures for interweaving the posts through the ropes as described on the following pages.

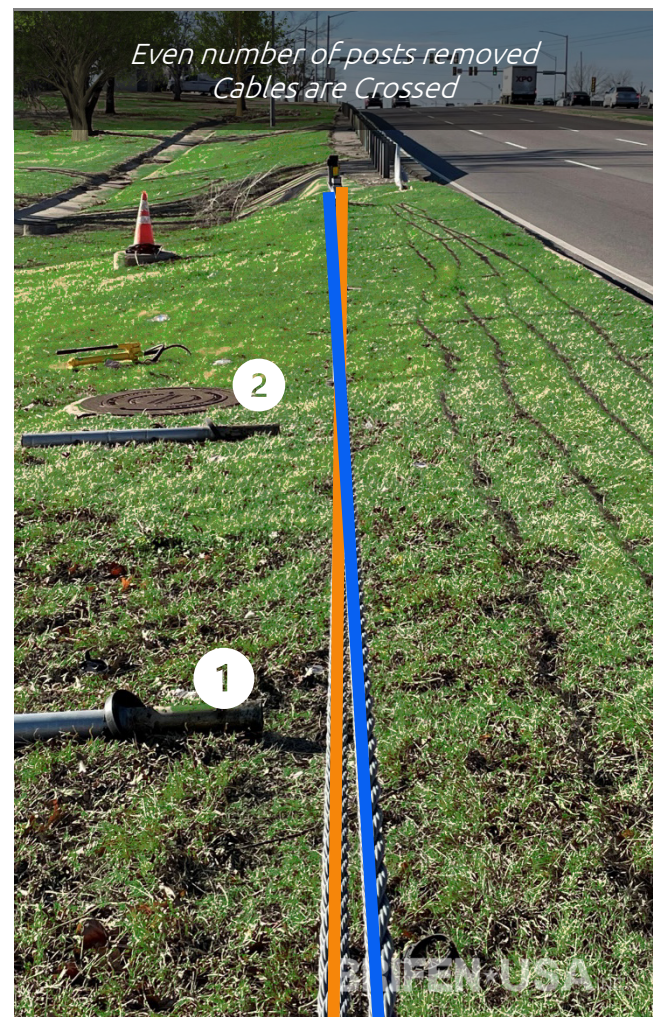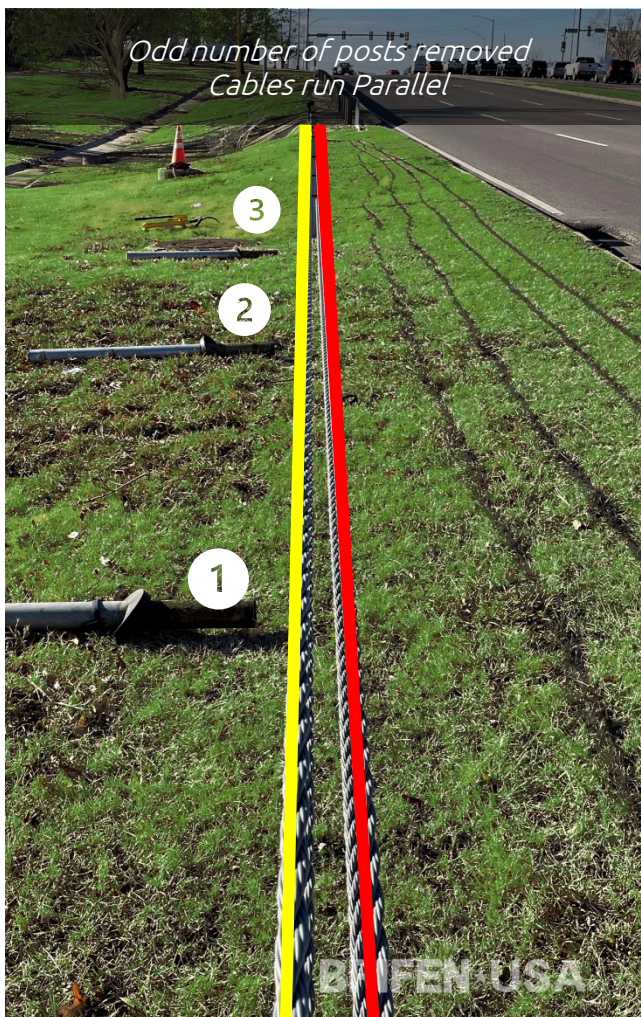

REPAIR

INSTALLING NEW POST WITH THE ROPE SPREADER TOOL

1. After determining which side of the fence to place the tool, Typically, the Rope Spreader Tool is used on Ropes **B**, **C** and **D**, as shown in the picture.
2. Actuate the spreader tool and spread open the 3 ropes (Rope **C** pushes away from unit).
3. After placing the excluder (gasket) on the post, insert the new Z-post into the socket. Pull Rope **A** up and over the post to slide into the slot.
4. Disengage and remove Spreader Tool. Allow the ropes to rest on the post then tap in locating pegs at the height for each cable on the sides of the post.
5. Repeat this procedure for the remaining posts.
6. Install a new post cap. Install reflector if needed.

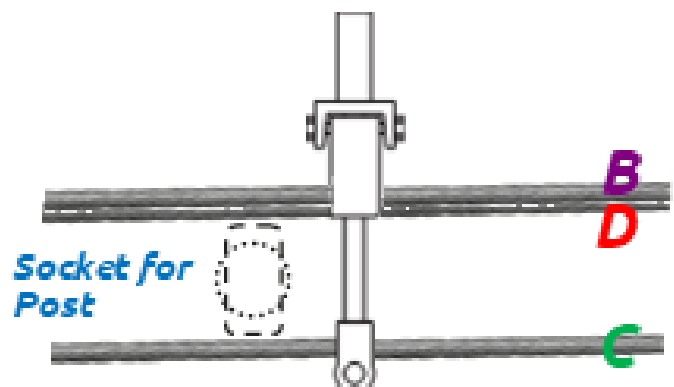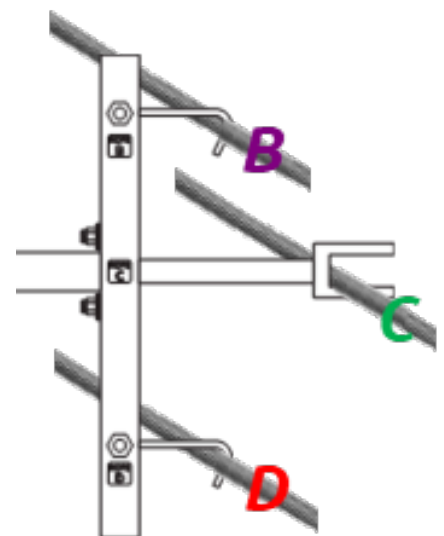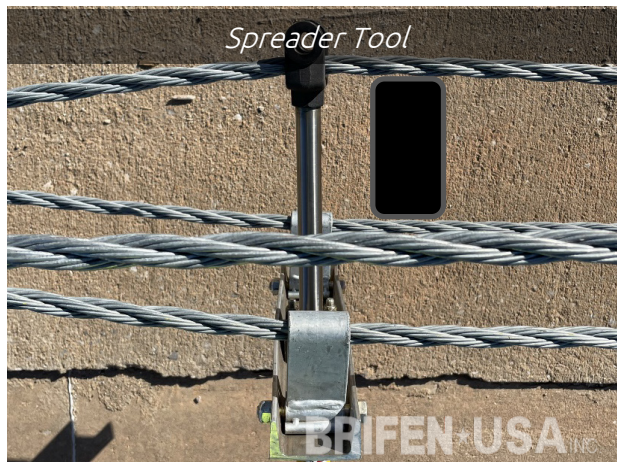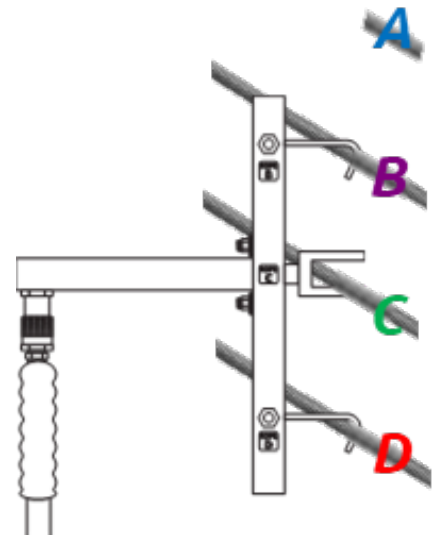

PROCEDURES TO REMOVE VEHICLES FROM ROPES

Most vehicles will be able to drive away or are towed from the scene. In the event a vehicle remains caught in the system, the safest and simplest method is to use a tow truck to pull the vehicle out of the system from the direction it entered. No re-tensioning would be required.

Example Scenario:

- **Problem:** Wire rope slid under the hood and then became lodged under the pick-up's bumper. The truck then pulled away from the system causing more tension in the rope than normal. The rope could not be removed at this point.
- **Solution:** Wire rope was too tight to remove with a pry bar. Four bolts were removed from the truck's bumper, which allowed the rope to be removed from the truck. It took one worker approximately 30 minutes to free the truck from the wire ropes and repair the fence. The WRSF was back in service before the wrecker left the area. No re-tensioning was required.



OTHER REMOVAL METHODS

- Wrecker could pull the truck back in line with the fence, allowing ropes to be picked up from behind bumper and removed. No re-tensioning required.
- Remove several nearby posts using the Rope Spreader Tool, which will un-weave ropes creating slack.
- If the tool is not available, posts may be cut between the ground and the bottom rope. Be aware of rope forces on the post when deciding which side of the post to cut. Removal becomes easier with each post removed. No re-tensioning would be required.
- Turnbuckles may be loosened using pipe wrenches to reduce tension. However, this will require re-tensioning.



In a life-threatening situation only, and as a last resort, cutting ropes may be necessary. However, if this is required, cut only at the center of nearby turnbuckles so as not to damage the ropes. If a vehicle tangled in the ropes has deflected the ropes, the tension may be greater than normal. Before attempting to disengage the ropes or before cutting any ropes, remove additional posts and/or loosen nearby turnbuckles to relieve tension.

- Re-tensioning will be required if turnbuckles were loosened. If turnbuckles have not been loosened, then re-tensioning should not be necessary. However, if tension is checked immediately after repair, it may be lower than normal since the ropes have migrated during the impact and they need some time to settle out (harmonize) and tension stabilize.

APPENDIX


TOLERANCES

| Description | Tolerance |
|---|--|
| Post Foundations | Flush with ground line |
| Post Sockets | ± 1" to the ground line |
| Post Vertical Alignment | 4" maximum from vertical alignment, measured from grade to top of post |
| Line Post Spacing | 1ft +/-; spacing per agency Specification not to exceed 21-0' |
| Rope Heights | ± 1" |
| Rope Length between turnbuckles | 1000 ft (+10%) |
| Rope Tension | ± 20% from Tension Table |
| MGT Post Vertical Alignment | 3" maximum from vertical alignment, measured from grade to top of post |
| MGT Post Spacing | ± 3" |
| Horizontal & Vertical Transitions (including centerline) | 50:1 Recommended; 25:1 Allowable |




| Type of Damage | Description of the Damage | Solution |
|---------------------------|--|--------------------------------------|
| Damage to posts. | The post is bent or distorted. | The post is to be replaced. |
| | The protruding tabs of the Hook Post are damaged. | |
| Damage to wire cable. | The wire rope is bent or distorted. | The wire rope is to be replaced. |
| | Any strand of the wire cable is broken. | |
| Damage to end fittings. | The end fitting is deformed. | The end fitting is to be replaced. |
| | The thread of the end fitting is damaged. | |
| Damage to rigging screws. | The body of the rigging screw is cracked or distorted. | The rigging screw is to be replaced. |
| Damage to post fittings. | The ground cover is deformed, split, or cracked. | The item is to be replaced. |
| | The post cap is deformed, split, or cracked. | |
| | The locating peg is deformed, split, or cracked. | |

NCHRP 350 TL-4 LENGTH OF NEED & MASH GATING TERMINAL

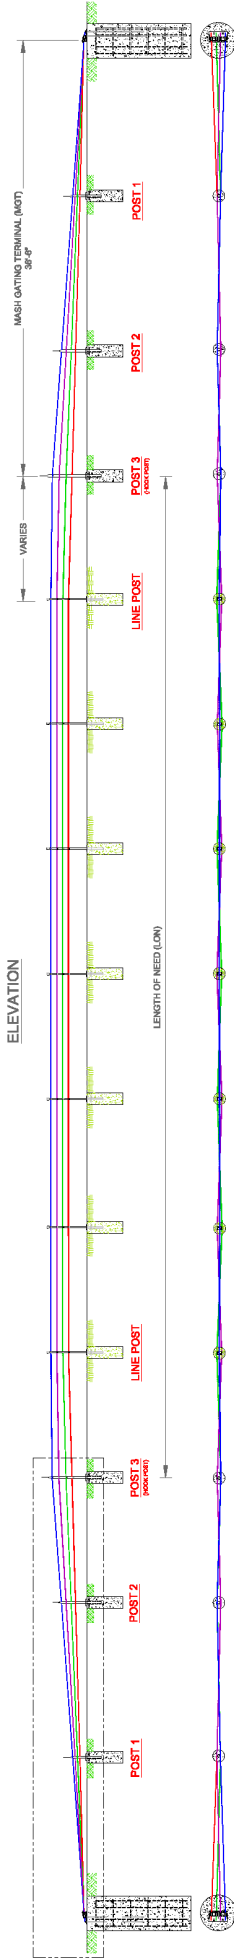

MASH GATING TERMINAL (MGT) DETAIL

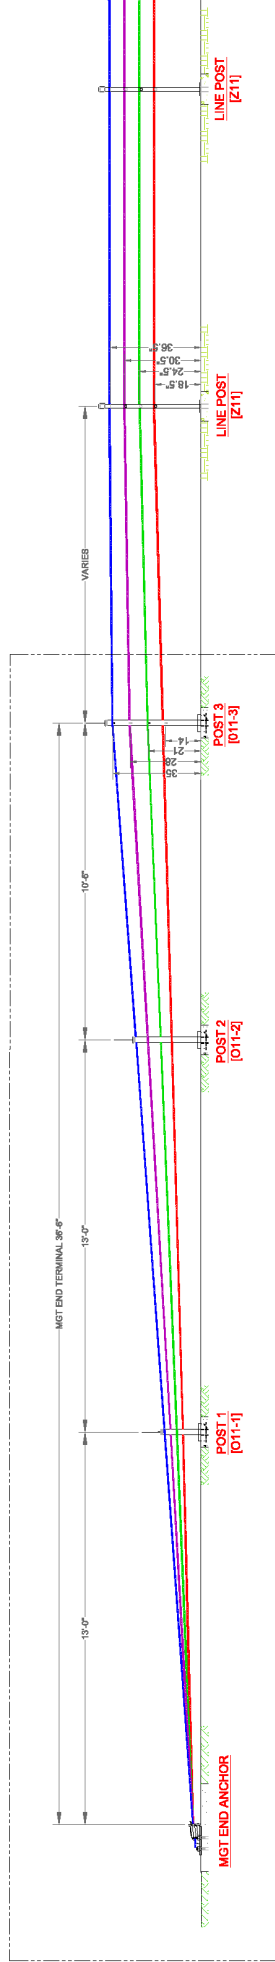

ROPE TENSION TABLE

| ROPE TEMP (°F) | TENSION (LBS) | TENSION (kN) |
|----------------|---------------|--------------|
| 0 | 5700 | 25.4 |
| 10 | 5400 | 24.0 |
| 20 | 5100 | 22.7 |
| 30 | 4800 | 21.4 |
| 40 | 4500 | 20.0 |
| 50 | 4200 | 18.7 |
| 60 | 3900 | 17.3 |
| 70 | 3600 | 16.0 |
| 80 | 3300 | 14.7 |
| 90 | 3000 | 13.3 |
| 100 | 2700 | 12.0 |
| 110 | 2400 | 10.7 |
| 120 | 2100 | 9.3 |
| 130 | 1800 | 8.0 |
| 140 | 1500 | 6.7 |

GENERAL NOTES:

- THE BRIFEN WIRE ROPE SAFETY FENCE SYSTEM (MRSF) 4 ROPE Z-POST LENGTH OF NEED (LON) HAS BEEN SUCCESSFULLY TESTED TO NCHRP 350 TL-4 CONDITIONS ON SLOPES 6:1 OR FLATTER AND NCHRP 350 TL-3 CONDITIONS ON SLOPES 4:1 TO 6:1. REFER TO FHMA ELIGIBILITY LETTER (HSSD/B-82). THE BRIFEN MASH GATING TERMINAL (MGT) HAS BEEN SUCCESSFULLY TESTED TO MASH 2016, SECOND EDITION. REFER TO FHMA ELIGIBILITY LETTER (HSST1/CC-137).
- BRIFEN WRSF DRAWINGS, SPECIFICATIONS, AND PRODUCT MANUALS SHOULD BE REVIEWED PRIOR TO STARTING INSTALLATION. FOR ADDITIONAL INFORMATION OR QUESTIONS, CONTACT BRIFEN USA, INC. AT 1-866-427-4336.
- BRIFEN WRSF SHALL BE INSTALLED ON SMOOTH SURFACE WITHOUT HUMPS, DROP-OFFS, HOLES, ETC THAT MAY INTERFERE WITH THE STABILITY OF AN ERRANT VEHICLE AT CONTACT WITH THE FENCE. GRADING, FILL, AND COMPACTION MAY BE REQUIRED TO ASSURE THAT ROPES ARE INSTALLED AT THE DESIGN HEIGHT.
- THE POST SPACING SHALL BE DETERMINED BY THE SPECIFYING AGENCY. POST SPACING MAY BE DECREASED TO AVOID OBSTRUCTIONS OR UTILITIES. IN NO EVENT SHALL THE POST SPACING EXCEED 21'-0".
- THE MASH GATING TERMINAL IS 36'-6" FROM THE CENTER OF THE END ANCHOR TO THE HOOK POST (POST 3). THE LENGTH OF NEED SHALL THEN START AT POST 3. THE MGT POST (POST 1, 2, AND 3) ARE TO BE SET IN CONCRETE SOCKETED FOUNDATIONS.
- PURSUANT TO MASH TESTING CRITERIA, ALL END TERMINAL TESTS ARE CONDUCTED ON LEVEL TERRAIN. PLACEMENT OF END TERMINALS ON SLOPES MAY RESULT IN NON CRASH WORTHY PERFORMANCE IN SOME CONDITIONS.
- ANCHOR, LINE POST DIMENSIONS AND STEEL REINFORCEMENT WILL BE DETERMINED ON PROJECT SPECIFIC SOIL CLASSIFICATION, PROPERTIES AND TEMPERATURE EXTREMES. CONTACT BRIFEN USA, INC. FOR ADDITIONAL INFORMATION.


The information herein is proprietary to BRIFEN USA, and shall not be disclosed, duplicated or used otherwise without the express written consent of BRIFEN USA, Inc.




| Revision | | BRIFEN NCHRP 350 TL-4 Z-POST WITH TL-3 MASH GATING TERMINAL INSTALLATION & LAYOUT DETAILS | |
|----------|-----------|---|----|
| No. | Date | By | JR |
| 1. | 7/30/2021 | JR | |
| 2. | 8/9/2021 | JR | |
| 3. | | | |
| 4. | | | |
| 5. | | | |

| | | | | | |
|------------|-----------|----------|-----|------------------|------|
| Date | 6.21.2021 | Drawn By | JAR | Scale | None |
| VERSION 16 | | Dwg. No. | | MASH350-OP-27-01 | |
| Sheet No | | | | 1 OF 3 | |


MASH GATING TERMINAL (MGT) DETAIL

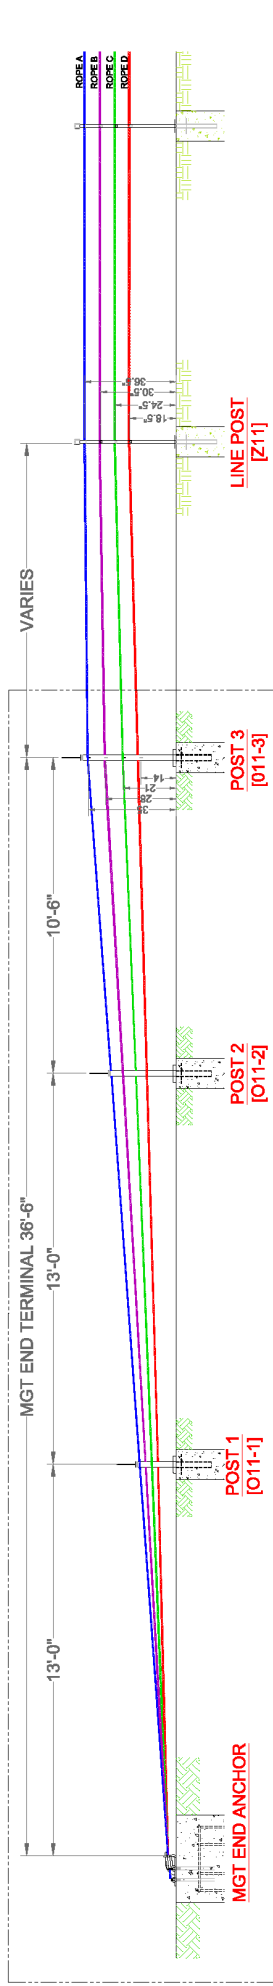

MGT END ANCHOR ROPE WEAVE DETAIL

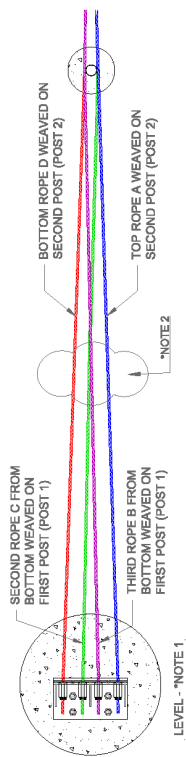


MGT END ANCHOR CONNECTIONS

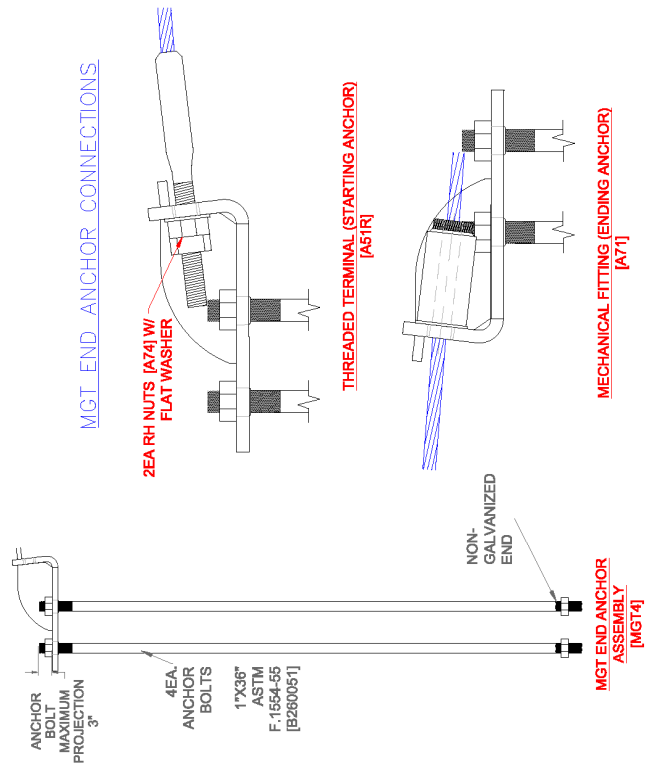


NOTE

1. MASH GATING TERMINAL (MGT) END ANCHOR PLATE SHALL BE INSTALLED LEVEL (FRONT TO BACK WHEN VIEWED FROM THE END OF THE FENCE). IF MGT END ANCHOR IS PLACED ON A SLOPE, THE PLATE SHOULD BE INSTALLED TO MATCH THE SLOPE (LEFT TO RIGHT WHEN VIEWED FROM THE END OF THE FENCE).
2. SINCE ROPES ALTERNATE SIDES OF EACH SUCCESSIVE POST, THE TRAILING END TERMINAL MAY HAVE ROPES REVERSED DEPENDING ON ODD OR EVEN NUMBER OF POSTS IN FENCE.
3. SIZE AND DESIGN OF MGT END ANCHOR, POST 1-3, AND LINE POST FOUNDATIONS (POST MOUNTING METHOD), ARE BEST DETERMINED BY PROJECT SPECIFIC SOIL INFORMATION AND GEOTECHNICAL EVALUATION. IF UNEXPECTED ROCK IS ENCOUNTERED, PLEASE CONTACT BRIFEN. BRIFEN RECOMMENDS IF CONCRETE FOUNDATIONS ARE SPECIFIED, THE 28 DAY COMPRESSIVE STRENGTH SHALL BE A MINIMUM OF 3000 PSI. END TERMINAL FOUNDATION AND POST 1-3 FOUNDATIONS SHALL ALWAYS BE APPROPRIATE SIZED CONCRETE FOUNDATIONS.
4. THESE HOLES ARE FOR THE TEMPORARY EYE BOLT [T18] FOR A WINCH ATTACHMENT DURING INITIAL INSTALLATION ONLY.

MGT ANCHOR BOLT TEMPLATE

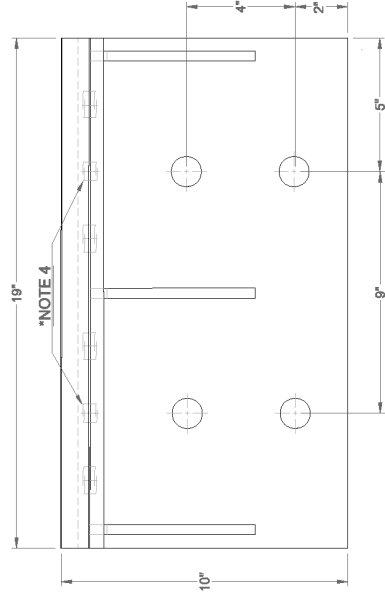

MASH GATING TERMINAL (MGT) POST DETAILS

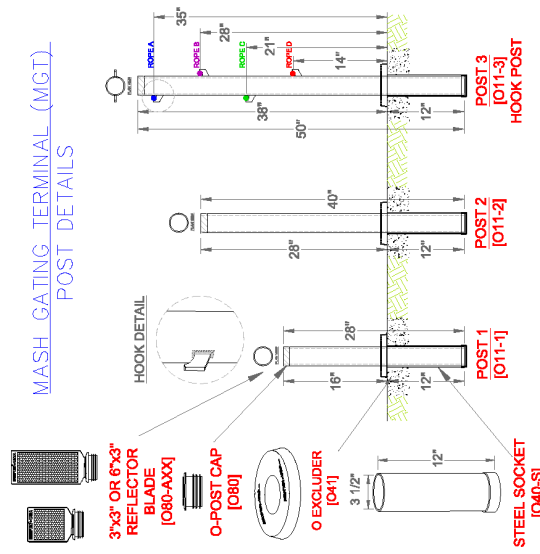


The information herein is proprietary to BRIFEN USA, and shall not be disclosed, duplicated or used otherwise without the express written consent of BRIFEN USA, Inc.

BRIFEN USA INC.

| BRIFEN TL-3 MASH GATING TERMINAL INSTALLATION & LAYOUT DETAILS | | | |
|--|--------------------------------------|-----------------------|----|
| Revision | | Date | By |
| No. | Date <td>7/30/2021 <td>JR</td> </td> | 7/30/2021 <td>JR</td> | JR |
| 1. | Date <td>6/21/2021 <td>JR</td> </td> | 6/21/2021 <td>JR</td> | JR |
| 2. | Date <td></td> <td></td> | | |
| 3. | Date <td></td> <td></td> | | |
| 4. | Date <td></td> <td></td> | | |
| 5. | Date <td></td> <td></td> | | |

| | | | | | |
|----------|-------------------|----------|-----|-------|------|
| Date | 6.21.2021 | Drawn By | JAR | Scale | None |
| Version | VERSION 16 | | | | |
| Dwg. No. | MASH1650-OP-ZP-01 | | | | |
| Sheet No | 2 OF 3 | | | | |

LINE POST ASSEMBLY [Z11]

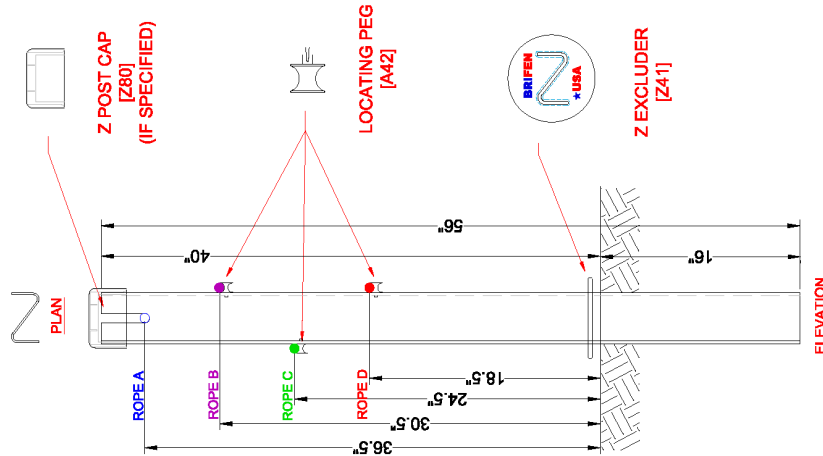


NOTES SPECIFIC TO LINE POST ASSEMBLY

1. ROPE HEIGHTS SHALL BE ±1" TO GROUND LINE.
2. POST SHALL BE ±4" FROM VERTICAL PLUMB.
3. POST CAPS SHALL BE USED IF SPECIFIED.
4. REFLECTORS SHALL BE SPACED ACCORDING TO AGENCY SPECIFICATIONS.
5. REFLECTORS CAN BE PLACED ON THE POST CAP OR POST.

SOCKET ASSEMBLY


CONCRETE FOOTING

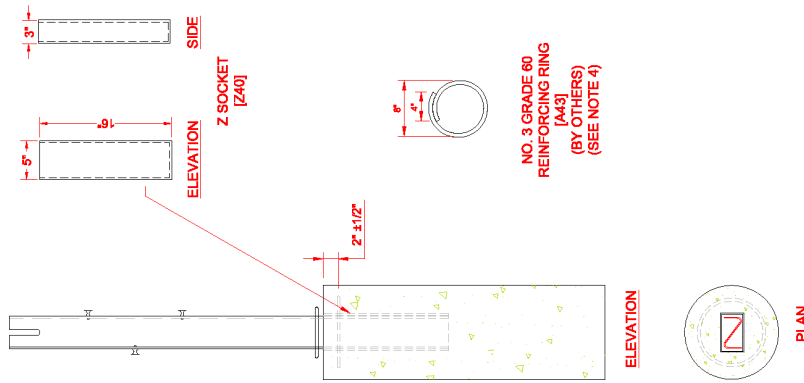

NOTES SPECIFIC TO CONCRETE FOOTING

1. SIZE OF FOOTING WILL BE DETERMINED BY SOIL CONDITIONS, FOUNDATION TYPE AND PROJECT CONDITIONS.
2. CONCRETE BASED ON AGENCY SPECIFICATIONS.
3. CONCRETE BY OTHERS.
4. REINFORCING RING (BY OTHERS) WILL BE USED ACCORDING TO FOUNDATION SIZE AND TYPE. THE REINFORCING RING MAY BE OMITTED IF THE FOOTING IS PLACED IN A CONTINUOUS CONCRETE MOW STRIP.
5. FOOTING SHALL BE FLUSH WITH THE GROUND LINE, TO A MAXIMUM OF 1 INCH BELOW OR ABOVE GROUND LINE.
6. SOCKET SHALL BE ±2° OF VERTICAL PLUMB.


DRIVE SOCKET [Z44]

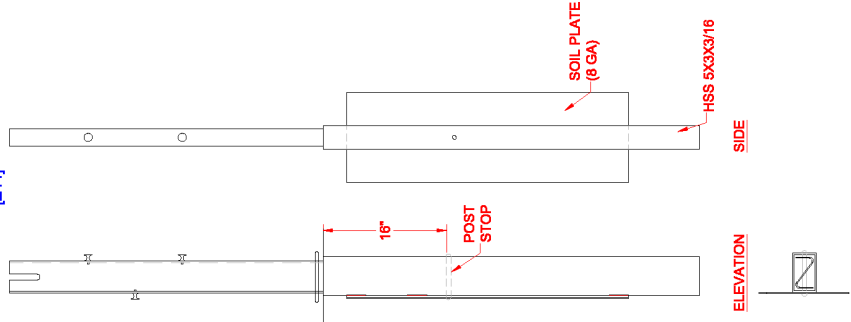

NOTES SPECIFIC TO DRIVE SOCKETS

1. SIZE OF SOIL PLATE WILL BE DETERMINED BY SOIL CONDITIONS AND PROJECT CONDITIONS.
2. THE SOIL PLATE SHALL BE PARALLEL TO ROADWAY AND CAN FACE TOWARD OR AWAY FROM THE TRAVEL LANE.
3. SOCKET SHALL BE FLUSH WITH THE GROUND LINE, TO A MAXIMUM OF 1 INCH BELOW OR ABOVE GROUND LINE.
4. SOCKET SHALL BE ±2° OF VERTICAL PLUMB.
5. SOCKETS SHALL BE DRIVEN IN A MANNER TO NOT DISTORT OR DESTROY THE TOP OF SOCKET TO A DEGREE THAT PLACES THE SOCKET OR LINE POST OUT OF CONSTRUCTION TOLERANCES.

TURNBUCKLE & MECHANICAL THREADED TERMINALS

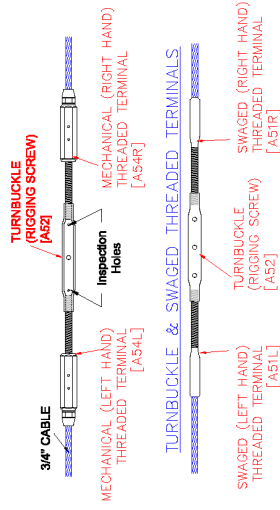

NOTES SPECIFIC TO ROPE CONNECTION DETAIL

1. THE WIRE ROPE TERMINALS SHALL BE THREADED A MINIMUM OF 1" INTO RIGGING SCREW.

The information herein is proprietary to BRIFEN USA, and shall not be disclosed, duplicated or used otherwise without the express written consent of BRIFEN USA, Inc.



| Revision | | BRIFEN NCRPP 350 TL-4 Z-POST INSTALLATION & LAYOUT DETAILS | |
|----------|-----------|--|-------|
| No. | Date | By | Scale |
| 1. | 7/30/2021 | JR | None |
| 2. | 8/9/2021 | JR | None |
| 3. | | | |
| 4. | | | |
| 5. | | | |

| | | | | | |
|------------|-----------|------------------|-----|----------|------|
| Date | 6.21.2021 | Drawn By | JAR | Scale | None |
| VERSION 16 | | Dwg. No. | | Sheet No | |
| | | MASH350-OP-ZP-01 | | 3 OF 3 | |

Brifen Inspection Form

MASH GATING TERMINAL

| Direction: _____ | Fence# | | | | | | | | | | | | |
|--|--------|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|
| | | Start | End | Start | End | Start | End | Start | End | Start | End | Start | End |
| Anchor Location | | | | | | | | | | | | | |
| 1) Is the anchor plate level and free of concrete? | | | | | | | | | | | | | |
| 2) Are ropes in anchor in correct sequence? | | | | | | | | | | | | | |
| 3) Is MGT Post-3 (Hook Post) oriented correctly? | | | | | | | | | | | | | |
| 4) Is the weave correct between MGT End Anchor and MGT Post-1? Ropes A & D DO NOT WEAVE while Ropes B & C do weave | | | | | | | | | | | | | |
| 5) No turnbuckles in MGT? | | | | | | | | | | | | | |
| 6) Are there two nuts on swaged fitting with minimum 3 threads exposed? | | | | | | | | | | | | | |
| 7) Do MGT Posts-1, 2 and 3 all have caps and excluders? | | | | | | | | | | | | | |
| 8) Is anchor installed without flare? | | | | | | | | | | | | | |
| 9) MGT Posts-1, 2 and 3 properly ascend in height and spaced accordingly? Center of Anchor Plate to MGT-Post-1: 13'-0" MGT Post-1 to MGT Post-2: 13'-0" MGT Post-2 to MGT Post-3/Hook: 10'-6" | | | | | | | | | | | | | |
| 10) Is there any damage that would affect the performance of the Brifen WRSF? | | | | | | | | | | | | | |

TL-4 Z-Post LENGTH OF NEED

| | | | | | | | |
|---|--|--|--|--|--|--|--|
| 1) Are the cables woven properly? | | | | | | | |
| 2) Are the turnbuckles properly threaded? | | | | | | | |
| 3) Is the fence at the proper tension? +/- 20% | | | | | | | |
| 4) Are the posts oriented in the proper direction with ropes resting on pegs? | | | | | | | |
| 5) Do all line posts have locating pegs, caps, and excluders? | | | | | | | |
| 6) Is the post spacing per plans? | | | | | | | |
| 7) Is there any damage that would affect the performance of the Brifen WRSF? | | | | | | | |

Because
our
families
drive
where
you do.

BRIFEN★**USA** INC.

WIRE ROPE SAFETY FENCE

For more information on Brifen USA products and services, visit us on the web at www.brifenusacom. Materials and specifications are subject to change without notice. Please contact Brifen USA to confirm that you are referring to the most current revision.

www.brifenusacom

**12501 N Santa Fe Ave
Oklahoma City, OK 73114**

**405-751-8062
1-866-427-4336**