

Florida Turnpike Enterprise Next Generation Turnpike State Model (TSM_NextGen_v4)

QUICK SET-UP GUIDE
FLORIDA'S TURNPIKE ENTERPRISE

TSM_NEXTGEN_v4 MODEL REQUIREMENTS

The model requirements are shown in Tables 1-2.

Table 1 Computer Requirements for Model

HARDWARE	REQUIREMENTS
RAM	196 GB
CPU	Minimum CPU @ 2.67GHz or higher; Minimum Cores 48
DISK SPACE	250 – 500 GB

Table 2 Software Requirements for Model


SOFTWARE	REQUIREMENTS
PTV VISUM	PTV Visum Expert 2023 (SP 1-3)
JAVA	jdk-1.8

1. MODEL SETUP

This section explains the setup procedures. The user must unzip the model to the C: drive location, as shown below. Figure 1 shows the model subfolders and the version files.


- C:\TSM_NextGen_v4).

Figure 1 TSM Folder Structure

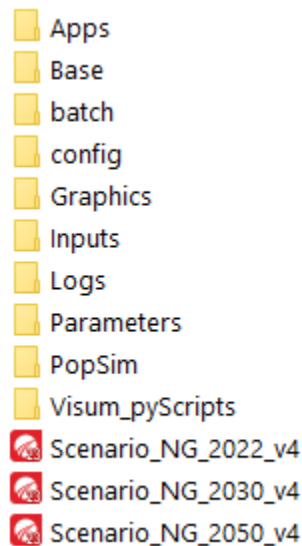

The Version File [* .ver] is the primary type opened by Visum that includes all the network data contained within the base network, roadway, zones, matrices, and other associated files. The model includes three version files: the Base Year 2022, and Future Years 2030 and 2050, respectively. If the user wants to open the version file, go to the File → Menu → and select Open (See Figure 2). Then, double-click the *.ver file.

Figure 2 Opening a *.ver file in Visum

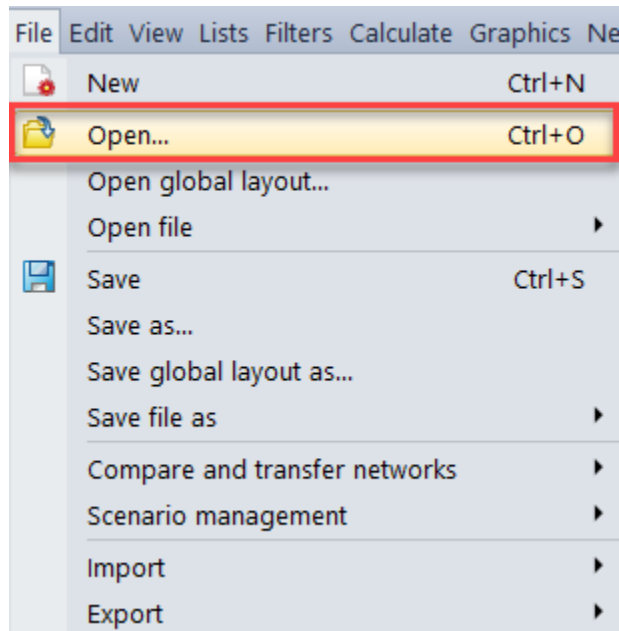

In the “Procedure Sequence”, the user will find the predefined model components. Run the model by pressing the ► symbol in the upper left corner of the “Procedure Sequence” window (See Figure 3).

Figure 3 Procedure Sequence Window

