



SOD FLUME (SODDING OVERLAPPED)

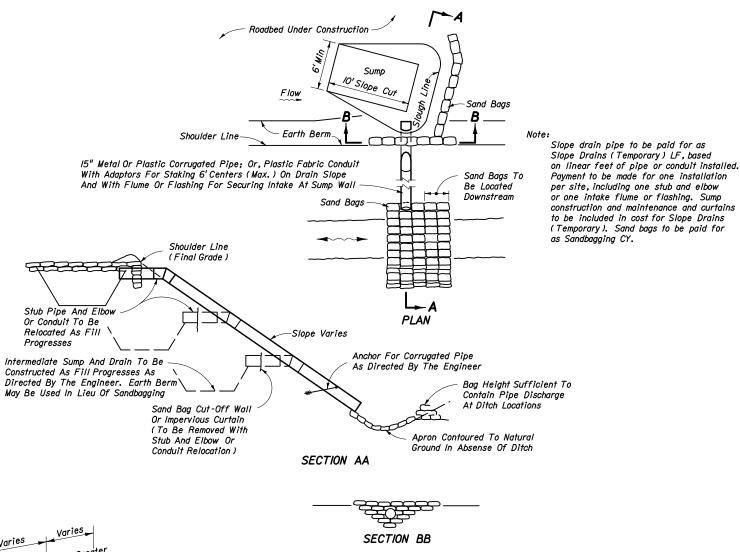

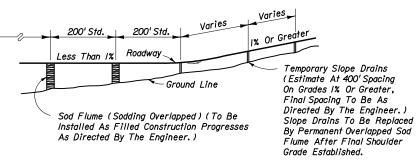

ELEVATION

SLOPE DRAIN APPLICATION



2006 FDOT Design Standards

TEMPORARY SLOPE DRAIN AND SOD FLUME

TEMPORARY SLOPE DRAIN

100