


1. Spillway to be paid for as shoulder gutter.
2. If spillway empties into a shallow or median ditch, the detail should be modified as necessary.

DETAIL OF CONCRETE SPILLWAY AT END OF SHOULDER GUTTER
 (TO BE USED WHERE INLETS, PIPES & ENDWALLS ARE IMPRACTICAL)

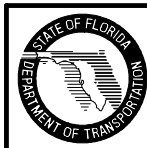

2006 FDOT Design Standards

| | |
|---------------------|---------------------|
| Last Revision 00 | Sheet No. 1 of 1 |
|---------------------|---------------------|

CONCRETE SHOULDER GUTTER SPILLWAY

Index No.
284