


BUILD-UP DIAGRAM FOR CREST VERTICAL CURVE SPANS
- CONTROL AT Q SPAN
(ALONG Q FLANGE) (CASE 3)

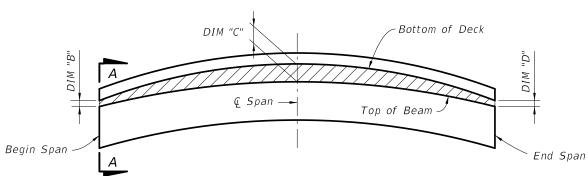


BUILD-UP DIAGRAM FOR CREST VERTICAL CURVE SPANS
- CONTROL AT BEGIN OR END SPAN
(ALONG Q FLANGE) (CASE 4)


## BEAM CAMBER AND BUILD-UP NOTES:

The build-up values given in the table are based on theoretical beam cambers. The Contractor shall monitor beam cambers for the purpose of predicting camber values at the time of the deck pour. If the predicted cambers based on field measurements differ more than  $+/-\frac{1}{2}$ " from the theoretical "Net Beam Camber @ 120 Days" shown in the Data Table, obtain approval from the Engineer to modify the build-up dimensions as required. When the measured beam cambers create a conflict with the bottom mat of deck steel, notify the Engineer a minimum a 21 days prior to casting.

DIM "A" includes the weight of the Stay-In-Place Formwork.

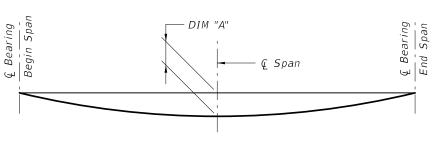

DEAD LOAD DEFLECTION DIAGRAM
(ALONG Q BEAM)

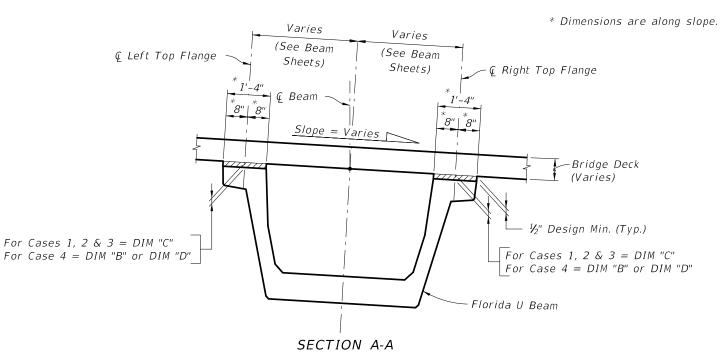

NOTE: Work this Index with the Build-up and Deflection Data Table for Florida U Beams in Structures Plans.

BUILD-UP OVER BEAMS
(LOOKING AHEAD STATION)

REVISIONS

DATE BY DESCRIPTION DATE BY DESCRIPTION

01/01/11 GJM Deleted "INSTRUCTION TO DESIGNERS" note. Added SECTION A-A location to BUILD-UP DIAGRAMS; Changed note at & Flanges in SECTION A-A.



2010 Interim Design Standard

Interim Date

01/01/11 1 of 1 20299

Sheet No.

BUILD-UP & DEFLECTION DATA FOR FLORIDA U BEAMS