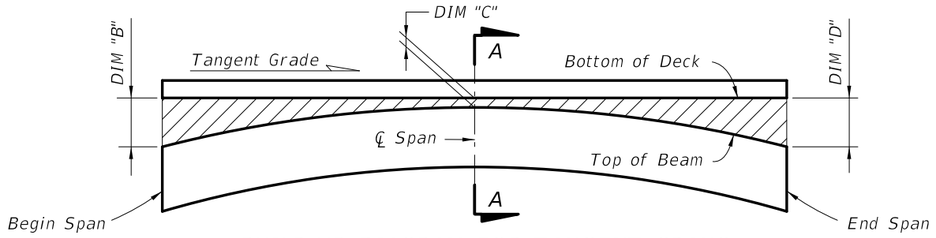

BUILD-UP DIAGRAM FOR TANGENT SPANS
(ALONG ℄ FLANGE) (CASE 1)

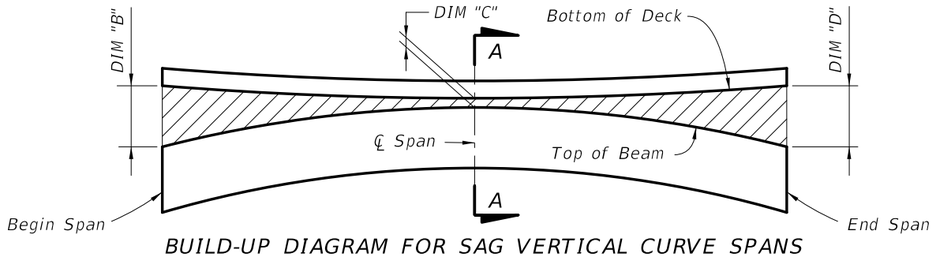

BUILD-UP DIAGRAM FOR SAG VERTICAL CURVE SPANS
(ALONG ℄ FLANGE) (CASE 2)

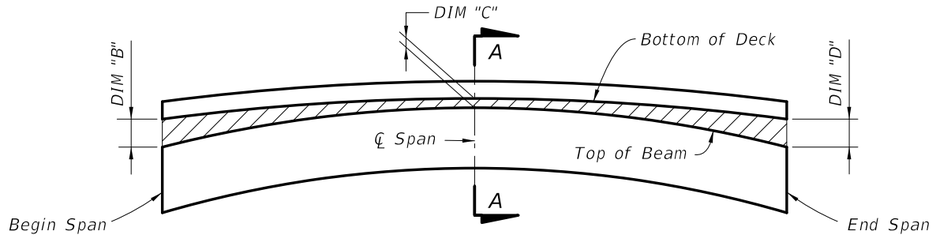

BUILD-UP DIAGRAM FOR CREST VERTICAL CURVE SPANS
- CONTROL AT ℄ SPAN
(ALONG ℄ FLANGE) (CASE 3)

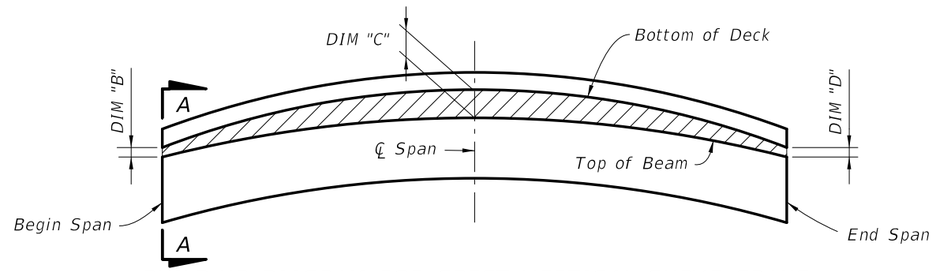

BUILD-UP DIAGRAM FOR CREST VERTICAL CURVE SPANS
- CONTROL AT BEGIN OR END SPAN
(ALONG ℄ FLANGE) (CASE 4)

BEAM CAMBER AND BUILD-UP NOTES:

The build-up values given in the table are based on theoretical beam cambers. The Contractor shall monitor beam cambers for the purpose of predicting camber values at the time of the deck pour. If the predicted cambers based on field measurements differ more than +/- ½" from the theoretical "Net Beam Camber @ 120 Days" shown in the Data Table, obtain approval from the Engineer to modify the build-up dimensions as required. When the measured beam cambers create a conflict with the bottom mat of deck steel, notify the Engineer a minimum a 21 days prior to casting.

DIM "A" includes the weight of the Stay-In-Place Formwork.

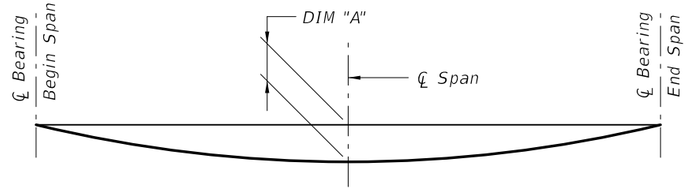

DEAD LOAD DEFLECTION DIAGRAM
(ALONG ℄ BEAM)

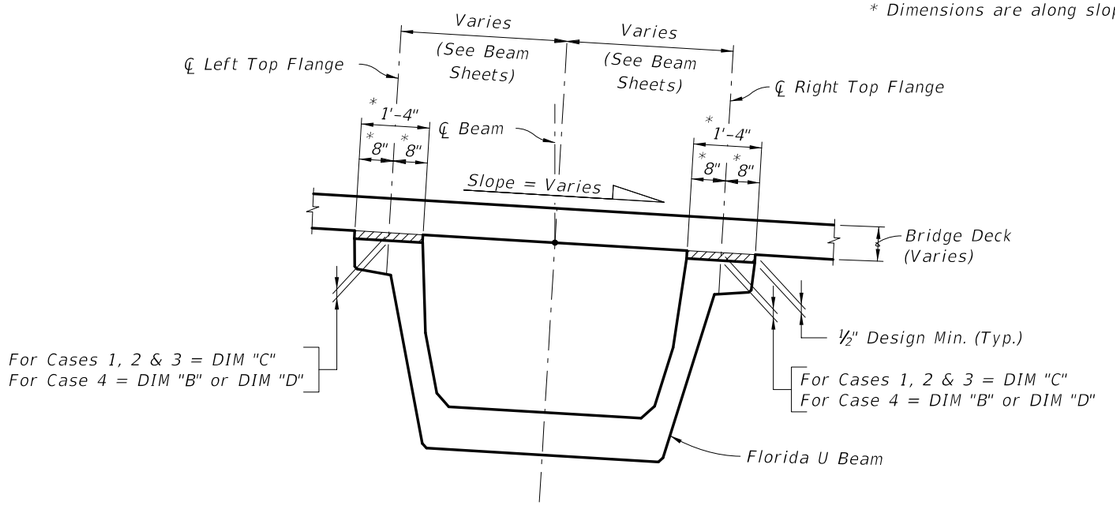

SECTION A-A
BUILD-UP OVER BEAMS
(LOOKING AHEAD STATION)

NOTE:
Work this Index with the Build-up and Deflection Data Table for Florida U Beams in Structures Plans.

REVISIONS

DATE	BY	DESCRIPTION	DATE	BY	DESCRIPTION
01/01/11	GJM	Deleted "INSTRUCTION TO DESIGNERS" note. Added SECTION A-A location to BUILD-UP DIAGRAMS; Changed note at ℄ Flanges in SECTION A-A.			

STATE OF FLORIDA DEPARTMENT OF TRANSPORTATION

2010 Interim Design Standard

BUILD-UP & DEFLECTION DATA FOR FLORIDA U BEAMS

Interim Date 01/01/11

Sheet No. 1 of 1

Index No. 20299