



FY 2012/2013

07/01/05

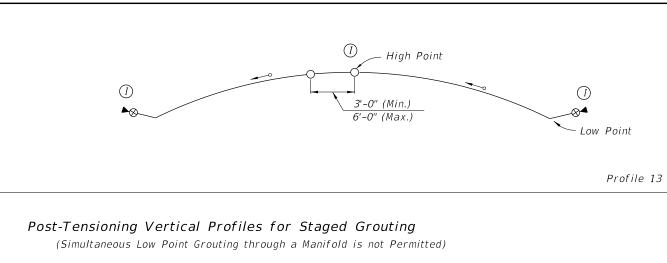


High Point 6'-0" (Max.) Low Point


Profile 14

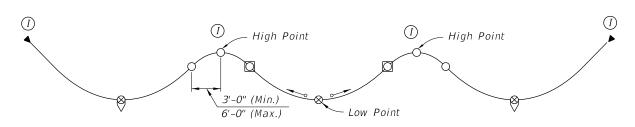

Profile 15

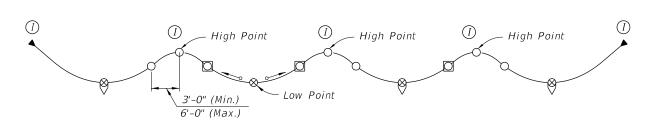


Profile 16

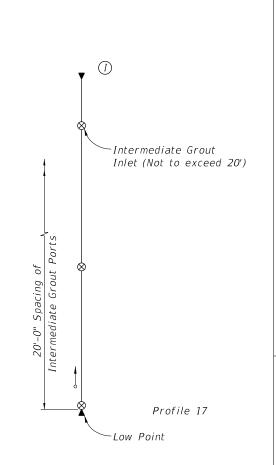

NOTES: Grouting Procedures

- 1. Take into account longitudinal grade, if any, and establish direction of grouting.
- 2. Orient end anchors so that grout outlet is at the top.
- 3. Provide grout outlets at all anchors.
- 4. Provide grout inlet at low point of all tendon profiles.
- 5. For tendons longer than 150 feet, additional grout outlets are required.
- 6. Incorporate the information on these drawings into the grouting operations plan.
- 7. In the grouting plan, show
- a. Direction of grouting
- b. Locations of grout inlets & outlets
- c. Staged grouting operations
- d. Sequence of opening & closing vents
- e. Procedures for time delayed grout phasing of the
- 8. After grouting, inspect all anchors and high points for voids.
- 9. Vacuum grout voids and seal post-tensioning system in accordance with the specifications.

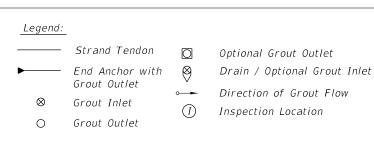

LAST REVISION 07/01/05

DESCRIPTION:



FDOT DESIGN STANDARDS FY 2012/2013

21801