

Tangent

50

50

100

CONDITION NOTES

Taper

25

25

25

Tangent

50

50

50

Taper 25

30

50

- 1. The RIGHT LANE CLOSED and lane reduction signs are to be removed or fully covered when no work is being performed and the center lane is opened to traffic.
- 2. For work performed in the median or outside lane, refer to Index 102-613.

25

30 to 45

50 to 70

3. When the lane closure exceeds a continuous 24 hour period, all existing pavement markings within the realignment which conflict with the revised traffic pattern are to be removed and removable pavement marking used for marking new edge lines and centerline.

GENERAL NOTES

- 1. When a side road intersects the highway within the TTC zone, additional TTC devices shall be placed in accordance with other applicable TCZ Indexes.
- 2. For general TCZ requirements and additional information, refer to Index 102-600.

DURATION NOTES

1. Temporary pavement markings may be omitted for work operations less than 3 days.

Buffer	Space	and Ta _l	per Length
Speed (mph)	Buffer Space	Taper Length (12' Lateral Transition)	
	Dist. (ft.)	L (ft.)	Notes (Merge)
25	155	125	$L = \frac{WS^2}{60}$
30	200	180	
35	250	245	
40	305	320	
45	360	540	
50	425	600	L = WS
55	495	660	
60	570	720	
65	645	780	
70	730	840	

When Buffer Space cannot be attained due to geometric constraints, the greatest attainable length shall be used, but not less than 200 ft.

For lateral transitions other than 12', use formula for L shown in the notes column. Where:

- L = Length of taper in feet
- W = Width of lateral transition in feet
- S = Posted speed limit (mph)

CONDITIONS

WHERE ANY VEHICLE, EQUIPMENT, WORKERS OR THEIR ACTIVITIES ENCROACH ON ANY PORTION OF A CENTER LANE OF A MULTILANE HIGHWAY, AND TWO DRIVING LANES ARE MAINTAINED ON THE TRAVEL

REVISION 11/01/17

FDOT

FY 2018-19 STANDARD PLANS

MULTILANE, WORK WITHIN

INDEX

102-614

DESCRIPTION:

SYMBOLS

Work Zone Sign

Channelizing Device (See Index 102-600)


Lane Identification + Direction of Traffic

Advance Warning Arrow Board

Work Area

TRAVEL WAY, CENTER LANE

SHEET

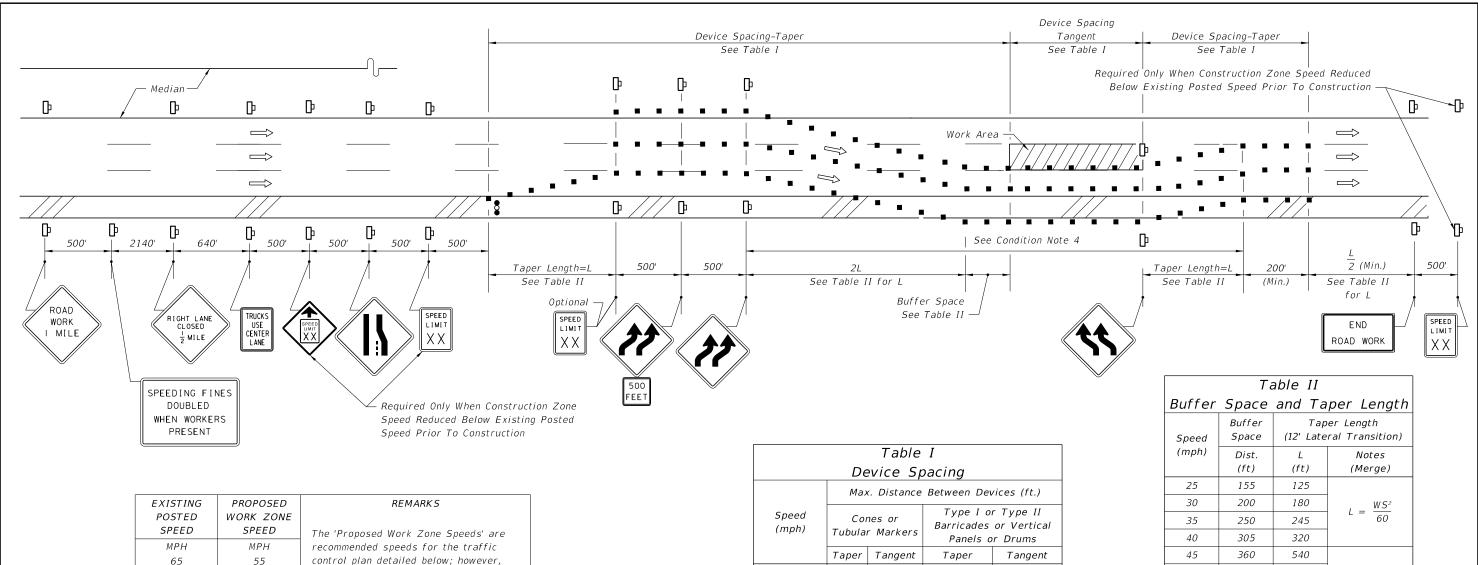

25

25

25

50

50

50

25

30

50

50

50

100

25

30 to 45

50 to 70

CONDITION NOTES

1. See General Notes, Sheet 1.

where the Engineer deems other speeds

are appropriate, the applicable speeds.

- 2. Length of time that traffic is using shoulder should be minimized. For example, remove lane closure and lane shift at night (unless performing night work) if practical.
- 3. The RIGHT LANE CLOSED, lane reduction and reverse curve signs are to be removed or fully covered when no work is being performed and the travel way is open to traffic.
- 4. When the lane closure exceeds a continuous 24 hour period, all existing pavement markings within the realignment which conflict with the revised traffic pattern are to be removed and removable pavement markings used for marking new edge lines and centerlines.
- 5. For general TCZ requirements and additional information, refer to Index 102-600.

45 360 540 50 425 600 55 495 660 L = WS60 570 720 65 780 645

When Buffer Space cannot be attained due to geometric constraints, the greatest attainable length shall be used, but not less than 200 ft.

For lateral transitions other than 12', use formula for L shown in the notes column. Where:

L = Length of taper in feet

W = Width of lateral transition in feet

S = Posted speed limit (mph)

730

CONDITIONS

WHERE ANY VEHICLE, EQUIPMENT, WORKERS OR THEIR ACTIVITIES ENCROACH ON ANY PORTION OF A CENTER LANE OF A MULTILANE HIGHWAY, AND TWO DRIVING LANES ARE MAINTAINED, AND, THE OUTSIDE SHOULDER PAVEMENT IS TEMPORARILY USED AS A TRAVEL LANE.

70

SYMBOLS

Work Area

Channelizing Device (See Index 102-600)

55

45

45

35

Work Zone Sign

Advance Warning Arrow Board

DESCRIPTION:

REVISION 11/01/17

FDOT

FY 2018-19 STANDARD PLANS

MULTILANE, WORK WITHIN TRAVEL WAY, CENTER LANE INDEX

SHEET

102-614 2 of 2