


NOTES:

1. X = Work Zone Sign Distance, see Index 102-600 for "X" value.
2. Use mitered end sections for any end sections within the clear zone.
3. Match cross slope of existing shoulder for widening.
4. Provide 2' of unpaved shoulder outside of the widening.
5. No more than two (2) access openings will be allowed on each project.
6. Do not vary from the plan detail without approval of the Engineer.

SYMBOLS:

- Work Zone Sign
- Lane Identification and Direction of Traffic

| LENGTH OF ACCESS LANES | | |
|------------------------|----------|----------|
| Grade | D (feet) | E (feet) |
| 2% or less | 590 | 1540 |
| 3 to 4% Upgrade | 530 | 2310 |
| 3 to 4% Downgrade | 710 | 925 |

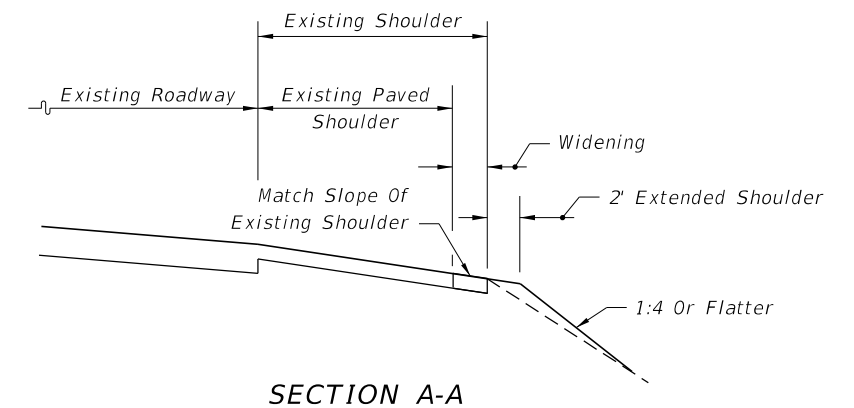

10/12/2020 6:25:38 AM