




PLAN

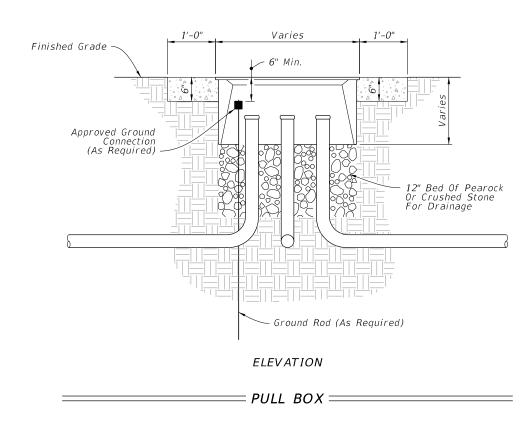

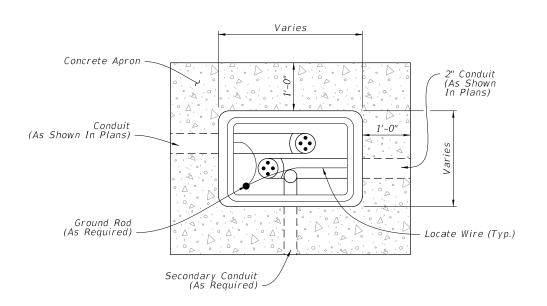

PLAN

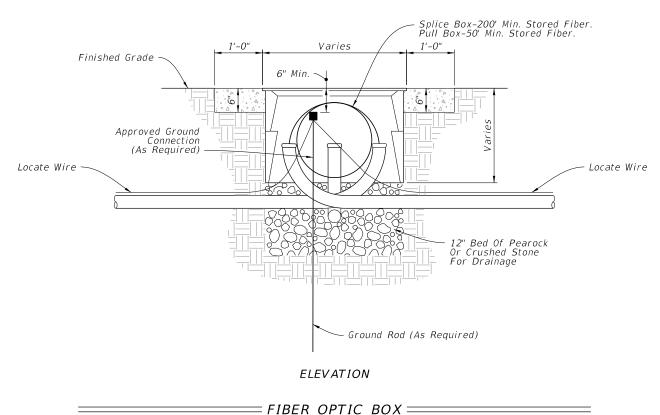

NOTES:

- 1. Provide fiber optic splice boxes with cable hanger racks designed to support cables and splice enclosures.
- 2. Install a 1'-0" wide (Min.) concrete apron around all boxes using Class NS concrete. Slope the apron away from the box.
- 3. Where multiple pull boxes are placed side by side, maintain at least 8" between the pull boxes.
- 4. Rectangular boxes shown, others similar.

LAST REVISION 11/01/18

DESCRIPTION:

FDOT

FY 2021-22 STANDARD PLANS

1 of 1