



11/01/21

## NOTE:


The sections and profiles shown are examples of superelevation transitions. Similar schemes should be used for roadways having other sections.


LINE	DESCRIPTION
T	Inside Travel Lane
U	Inside Lane Line
V	Inside Median Edge Pavement
W	<b>←</b> Construction
X	Outside Median Edge Pavement
Y	Outside Lane Line
Z	Outside Travel Lane
Inside And Outside Are Relative	
To Curve Center	

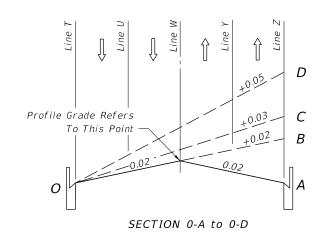


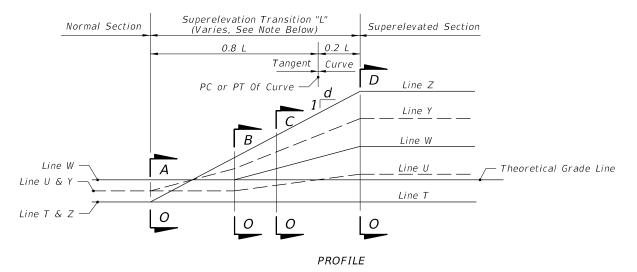

TWO LANES EACH DIRECTION

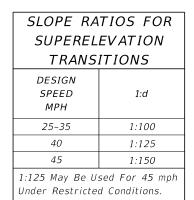

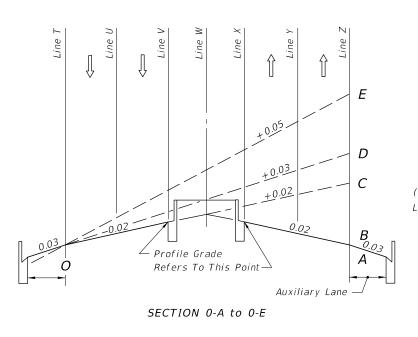

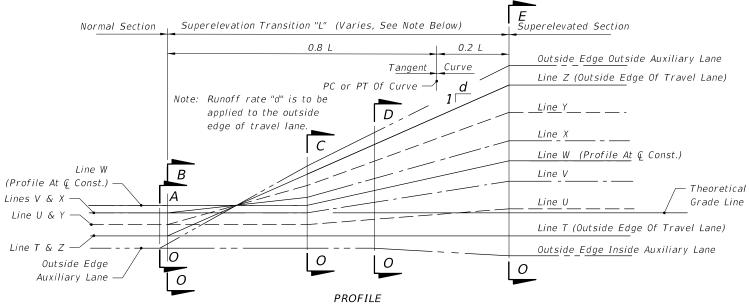

TWO LANES EACH DIRECTION WITH MEDIAN AND AUXILIARY LANE

EXAMPLE SUPERELEVATION SECTIONS AND PROFILES FOR LOW SPEED HIGHWAYS =

**REVISION** 11/01/21

DESCRIPTION: