


= ROADWAY WITH UTILITY STRIP =

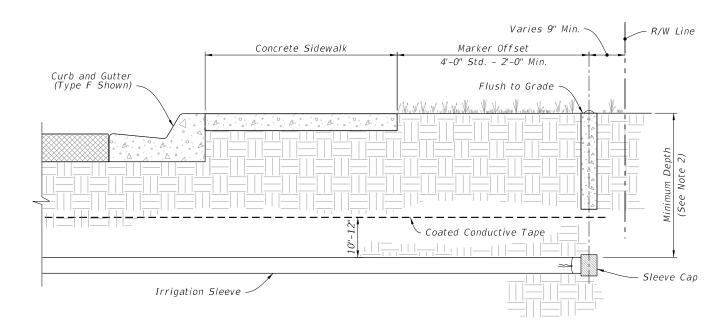


ROADWAY WITHOUT UTILITY STRIP =

NOTES:

DESCRIPTION:

- 1. Work this Index with Specification 591.
- 2. Install Sleeve with the minimum depth measured from the top of the Irrigation Sleeve as shown in the Plans or specified in Index 630-001.
- 3. When installing Irrigation Sleeves in a median crossover, place sleeves along the centerline.
- 4. Irrigation Sleeves for Electrical Control Wire and Irrigation Pipe must be no further than 12" apart.
- 5. Install Utility Strip Breaks only when shown in the Plans.

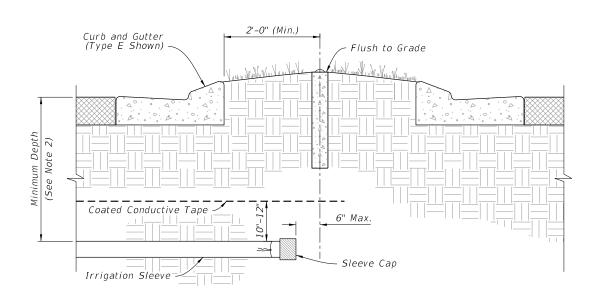

ROADWAY CROSS SECTION =

ROADWAY MEDIAN OR ROUNDABOUT =

LAST **REVISION** 11/01/19

FDOT

FY 2022-23 STANDARD PLANS