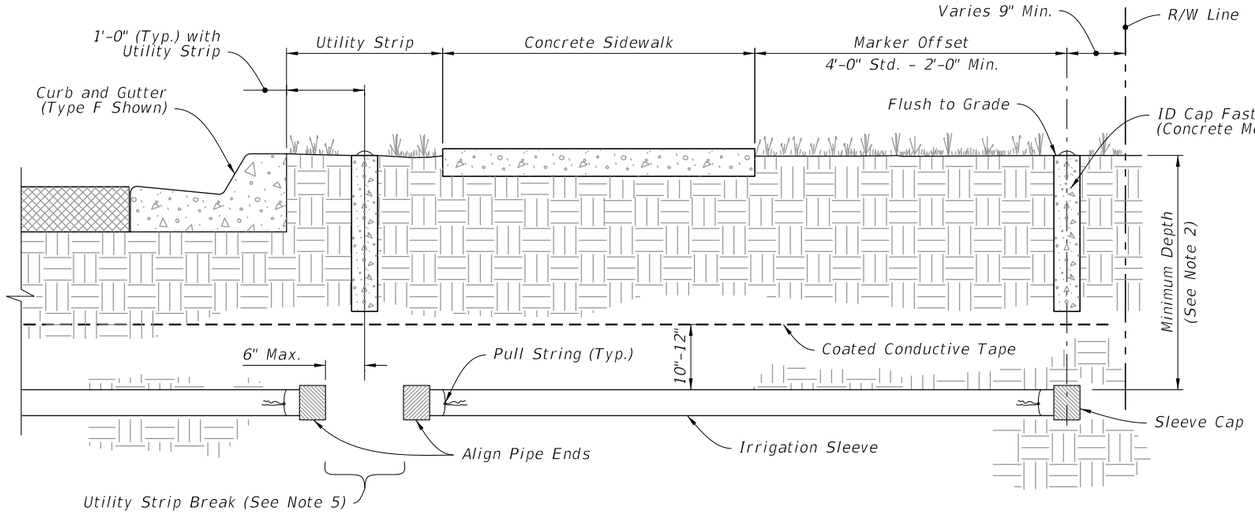

ROADWAY WITH UTILITY STRIP

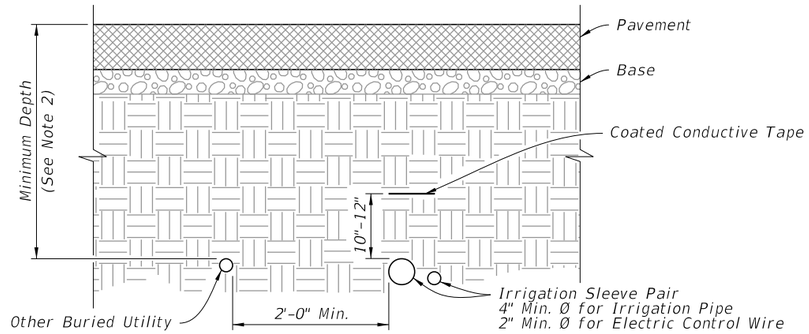

ROADWAY CROSS SECTION

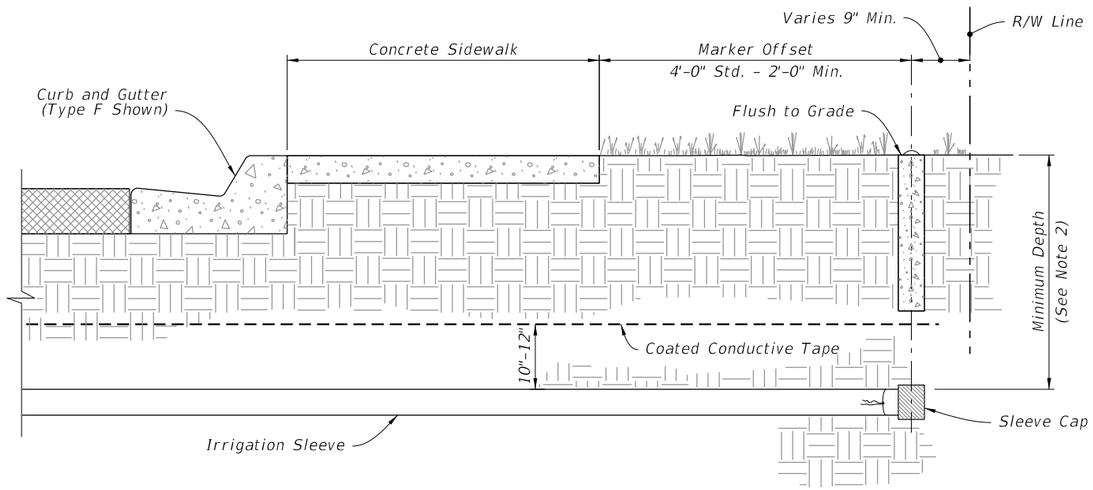

ROADWAY WITHOUT UTILITY STRIP

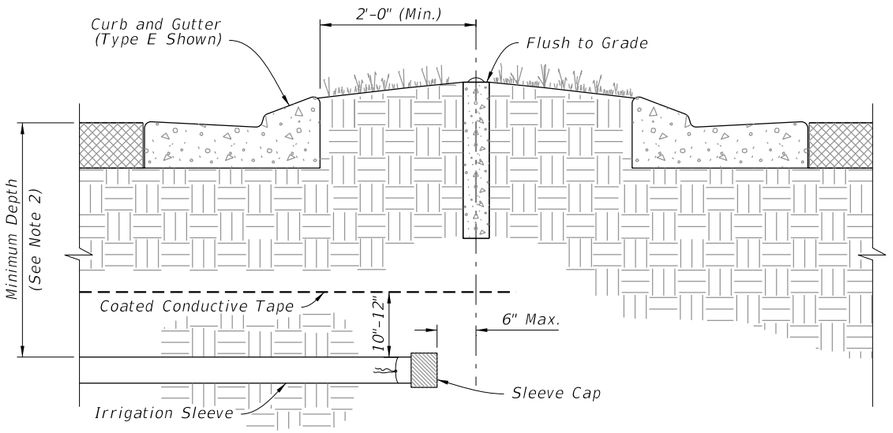

ROADWAY MEDIAN OR ROUNDABOUT

NOTES:

1. Work this Index with Specification 591.
2. Install Sleeve with the minimum depth measured from the top of the Irrigation Sleeve as shown in the Plans or specified in Index 630-001.
3. When installing Irrigation Sleeves in a median crossover, place sleeves along the centerline.
4. Irrigation Sleeves for Electrical Control Wire and Irrigation Pipe must be no further than 12" apart.
5. Install Utility Strip Breaks only when shown in the Plans.

9/10/2024 2:13:23 PM

LAST REVISION	REVISION	DESCRIPTION:	FDOT	FY 2025-26 STANDARD PLANS	LANDSCAPE IRRIGATION SLEEVES	INDEX	SHEET
11/01/19						591-001	1 of 1