


10/14/2025 9:38:39 AM

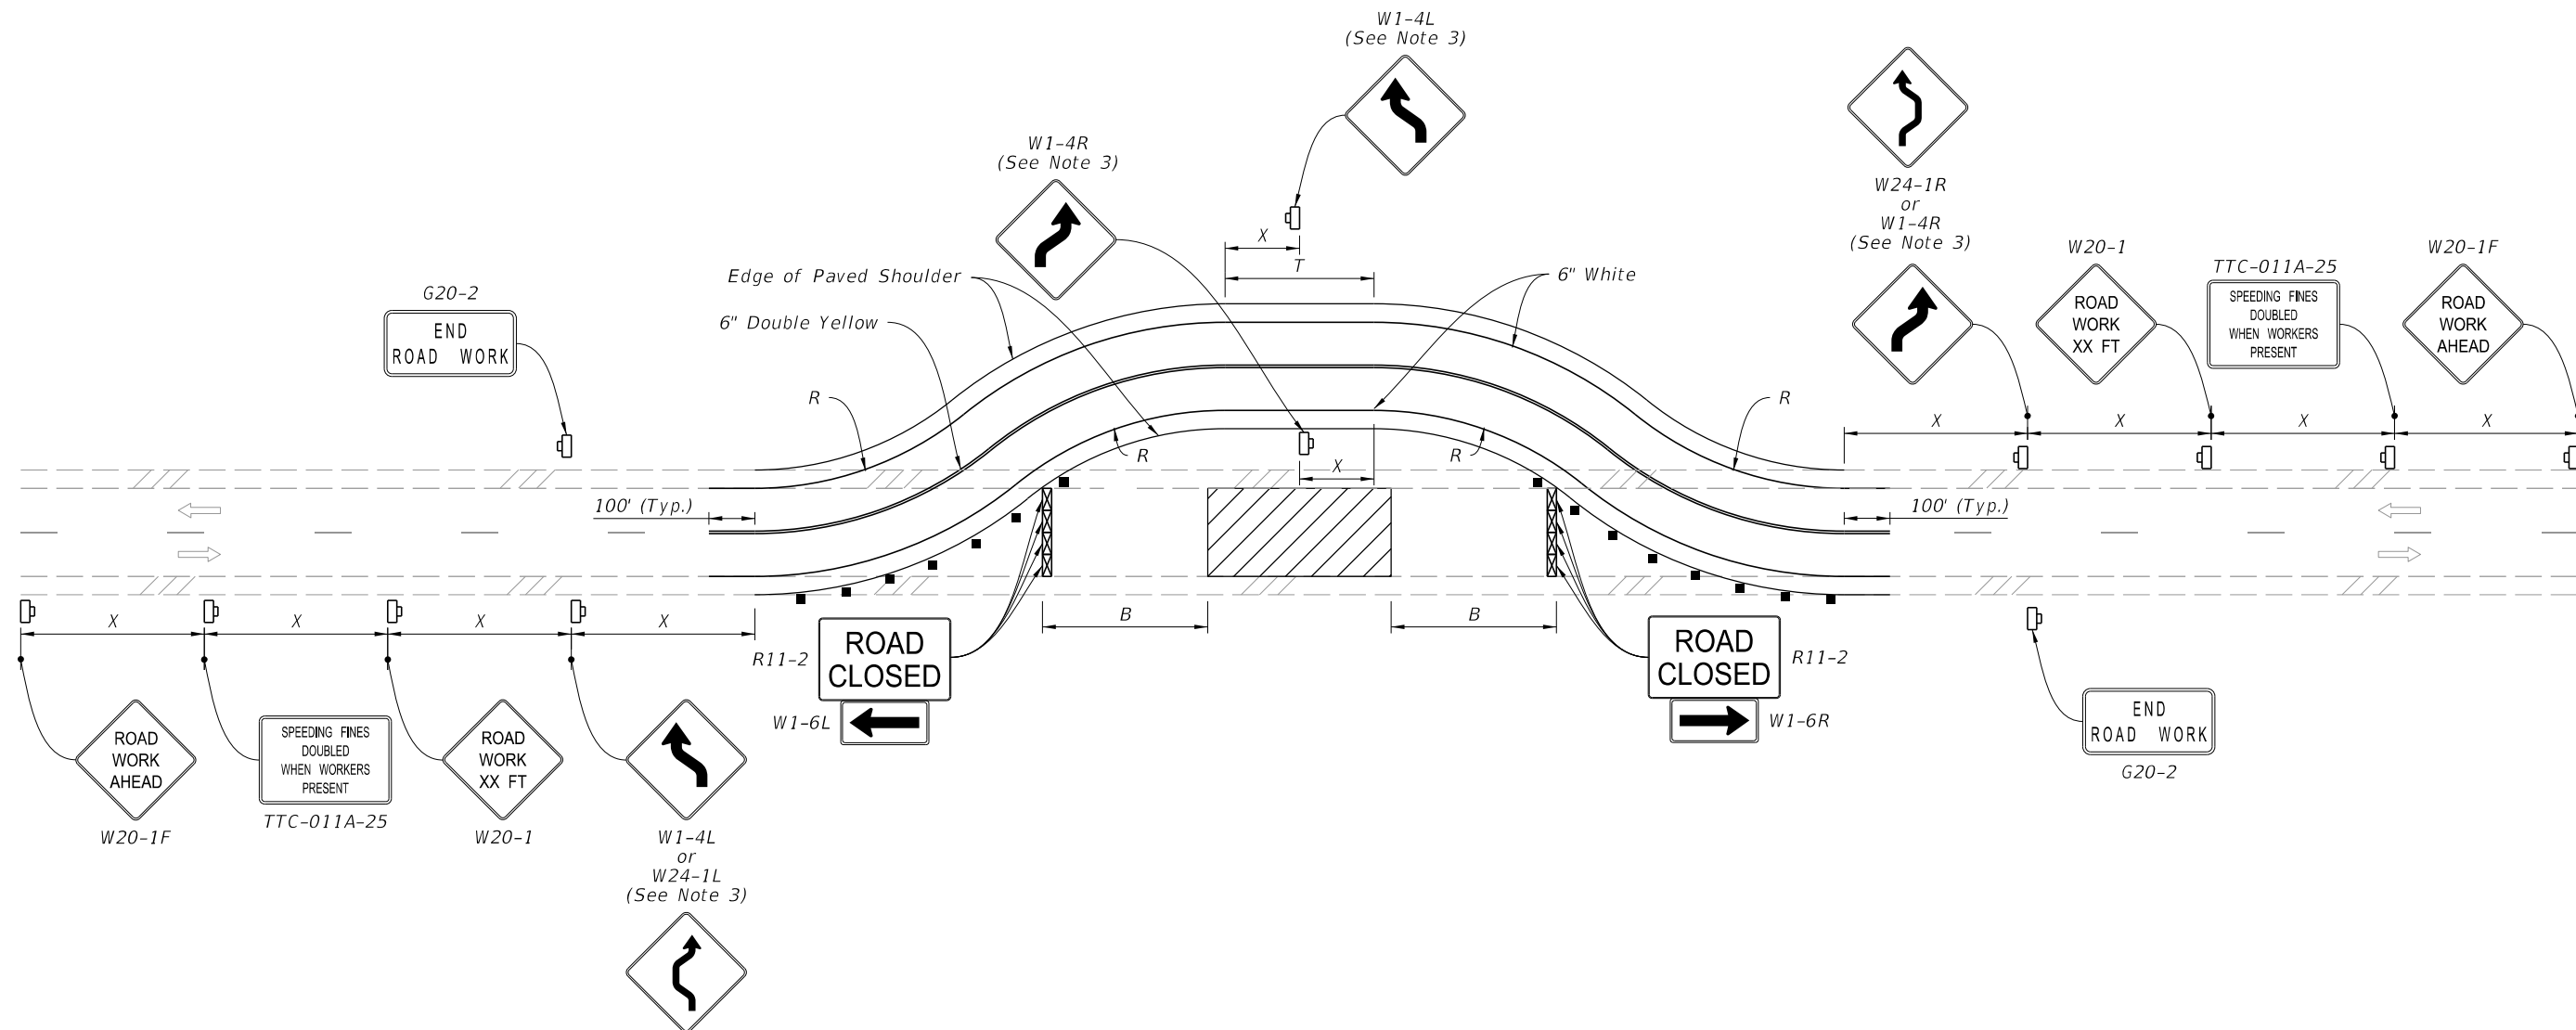

SYMBOLS:

- Work Area
- Channelizing Device (See Index 102-600)
- Work Zone Sign
- Type III Barricade
- Lane Identification and Direction of Traffic

NOTES:

- This Index applies to Two-Lane, Two-Way Roadways with temporary diversions.
- B = Buffer Length
 X = Work Zone Sign Distance
 R = Radius of Curve
See Index 102-600 for " B ", " X ", and channelizing device spacing values.
See Plans for " R " values.
- If the tangent distance " T " is less than 600', for each direction use a "Double Reverse Curve" sign (W24-1) instead of the first "Reverse Curve" sign (W1-4) and omit the second "Reverse Curve" sign.

LAST REVISION	DESCRIPTION:	FDOT	FY 2026-27 STANDARD PLANS	TWO-LANE, TWO-WAY TEMPORARY DIVERSION CONNECTION	INDEX	SHEET
11/01/25					102-608	1 of 1