


9/28/2026 11:47:20 AM

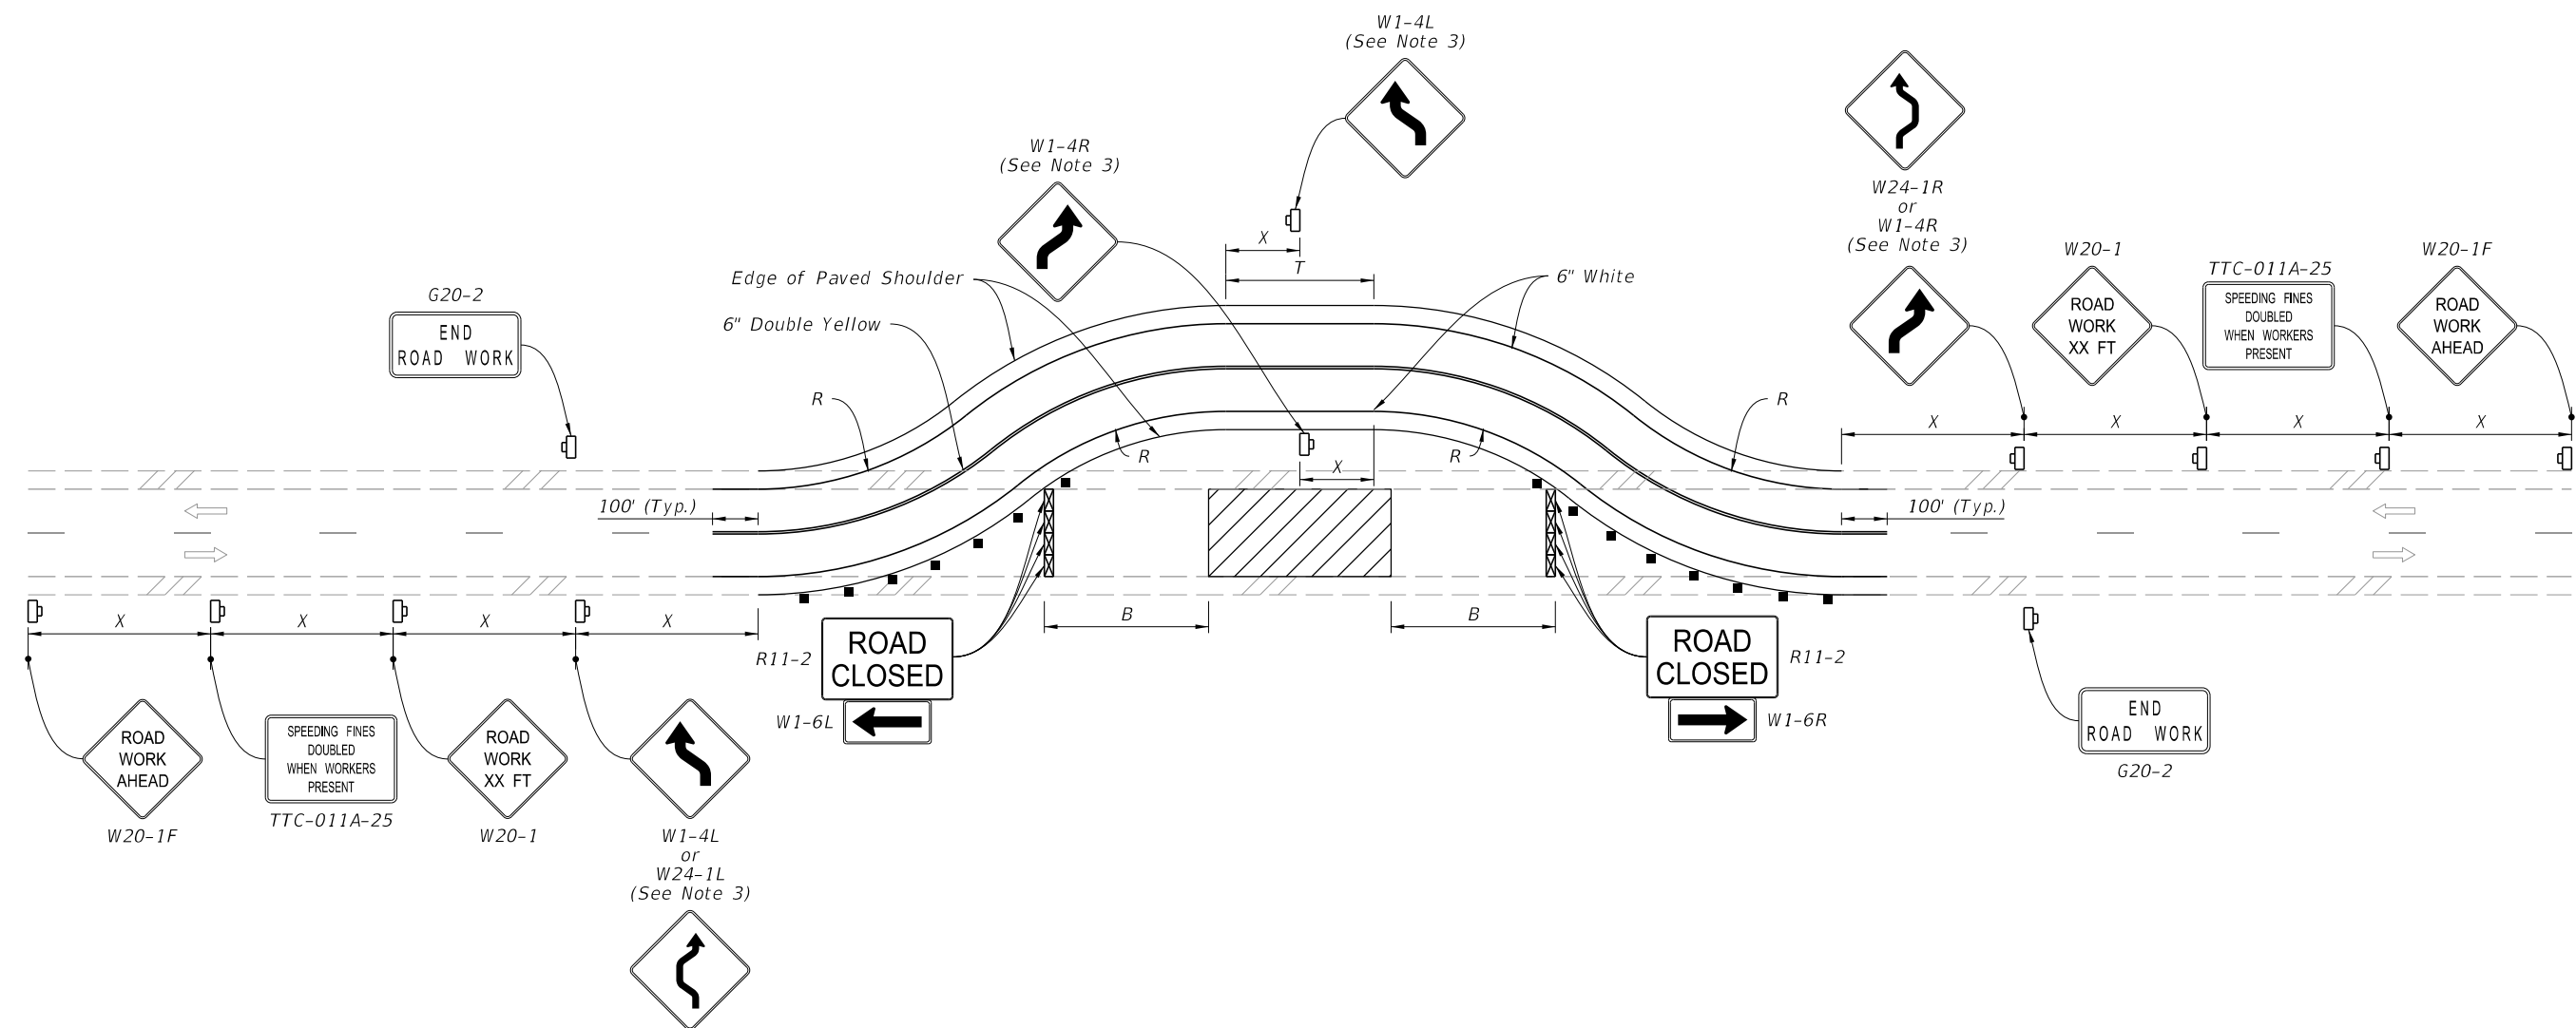

SYMBOLS:

- Work Area
- Channelizing Device (See Index 102-600)
- Work Zone Sign
- Type III Barricade
- Lane Identification and Direction of Traffic

NOTES:

- This Index applies to Two-Lane, Two-Way Roadways with temporary diversions.
- B = Buffer Length
X = Work Zone Sign Distance
R = Radius of Curve
See Index 102-600 for "B", "X", and channelizing device spacing values.
See Plans for "R" values.
- If the tangent distance "T" is less than 600', for each direction use a "Double Reverse Curve" sign (W24-1) instead of the first "Reverse Curve" sign (W1-4) and omit the second "Reverse Curve" sign.

LAST REVISION	REVISION	DESCRIPTION:	FDOT	FY 2027-28 STANDARD PLANS	TWO-LANE, TWO-WAY TEMPORARY DIVERSION CONNECTION	INDEX	SHEET
11/01/25						102-608	1 of 1