



TEMPORARY DIVERSION CONNECTION FOR UNDIVIDED ROADWAYS

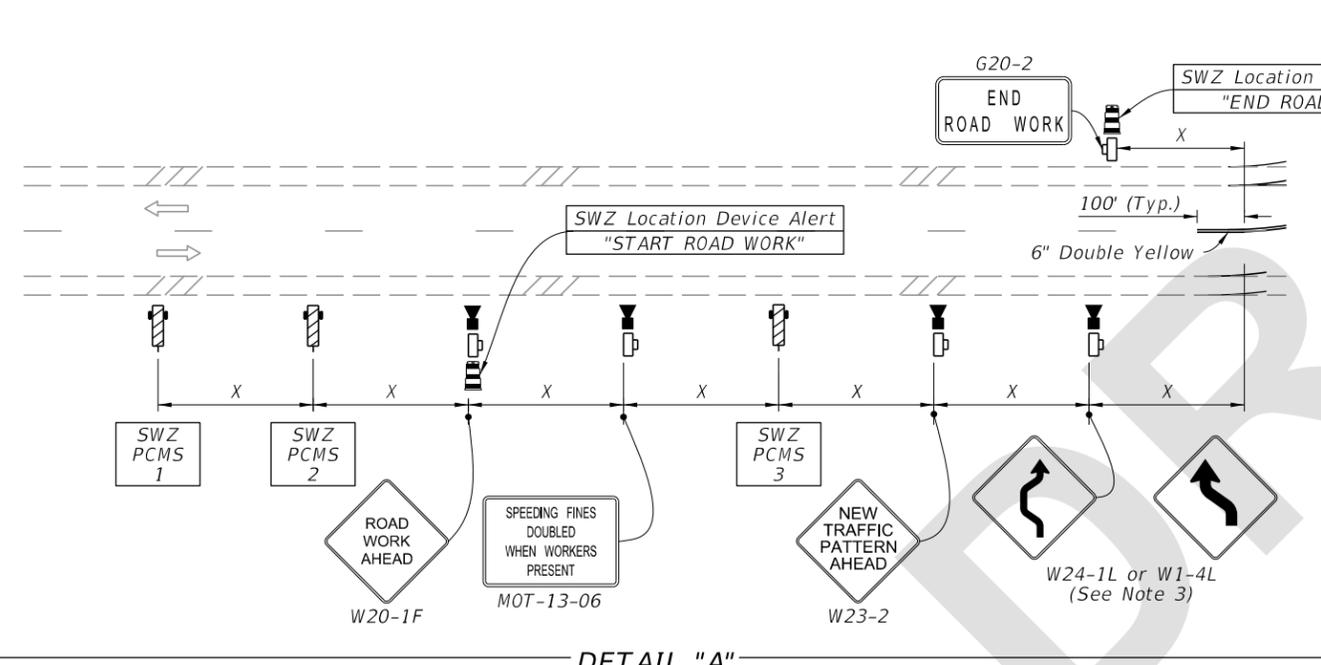

DETAIL "A"

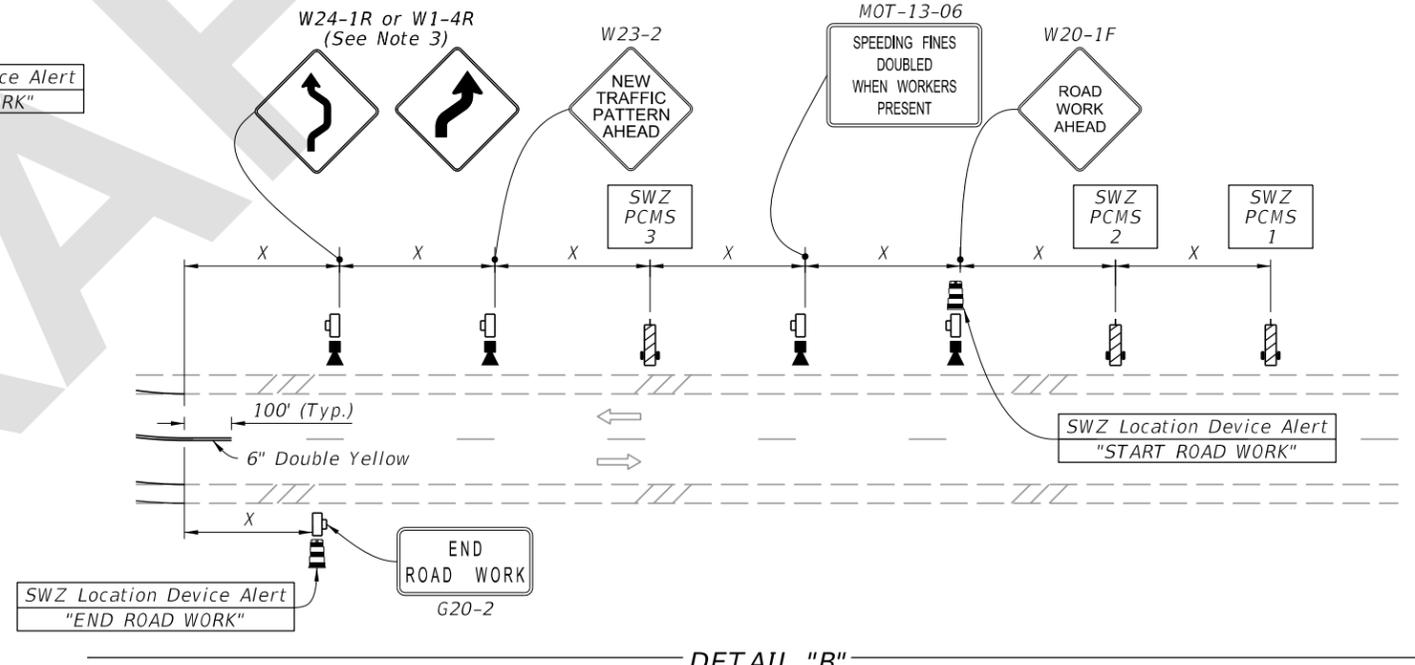

DETAIL "B"

NOTES:

1. This Index applies to Two-Lane, Two-Way Roadways with temporary diversions.

2. B = Buffer Length

X = Work Zone Sign Distance

R = Radius of Curve

See Index 102-600 for "B", "X", and channelizing device spacing values.

See Plans for "R" values.

3. If the tangent distance "T" is less than 600', for each direction use a "Double Reverse Curve" sign (W24-1) instead of the first "Reverse Curve" sign (W1-4) and omit the second "Reverse Curve" sign.

SYMBOLS:

- Work Area
- Channelizing Device (See Index 102-600)
- Work Zone Sign
- Type III Barricade
- Lane Identification and Direction of Traffic
- (6) SWZ Portable Changeable Message Sign (PCMS)
- (9) SWZ Vehicle Detector
- (4) SWZ Location Device

| SWZ PCMS MESSAGES | |
|-------------------------|--------------------|
| CAUTION SLOW TRAFFIC | X (MI OR FT) AHEAD |
| OR | |
| CAUTION STOPPED TRAFFIC | X (MI OR FT) AHEAD |

10/5/2022 1:40:19 PM