



ONE-WAY PAIRS AND DIVIDED ARTERIALS/COLLECTORS WITH UNSIGNALIZED ONE-WAY EGRESS

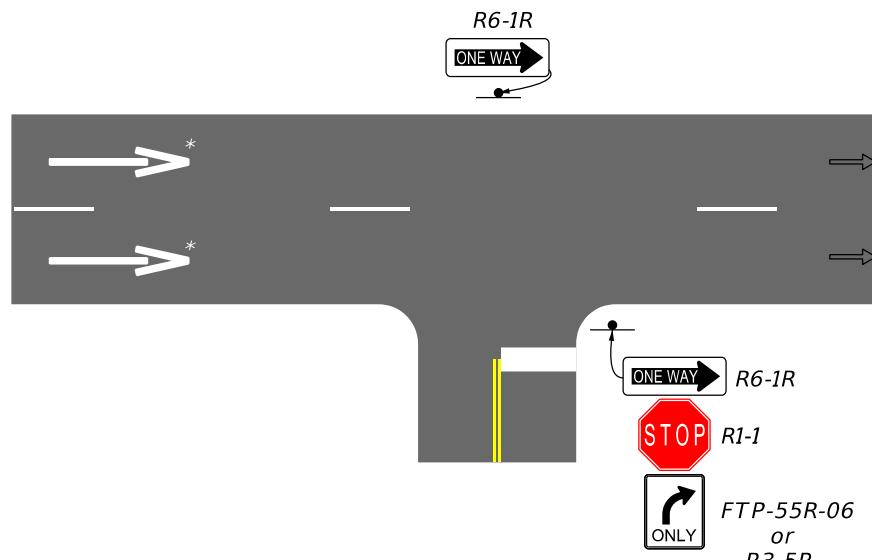

Installation Details	
1)	R6-1 shall be placed on far side median or shoulder depending on facility type.
2)	RIGHT TURN ARROW (FTP-55R-06) or LEFT TURN ARROW (FTP-55L-06) typically added by district driveway permit.
3)	Mandatory Movement Lane Control (R3-5) sign must be added to side street.
* See FDM 230.4.4 for how often to place Wrong-Way arrows based on context classification.	


Legend
→ Direction of travel
→ Wrong Way Arrow

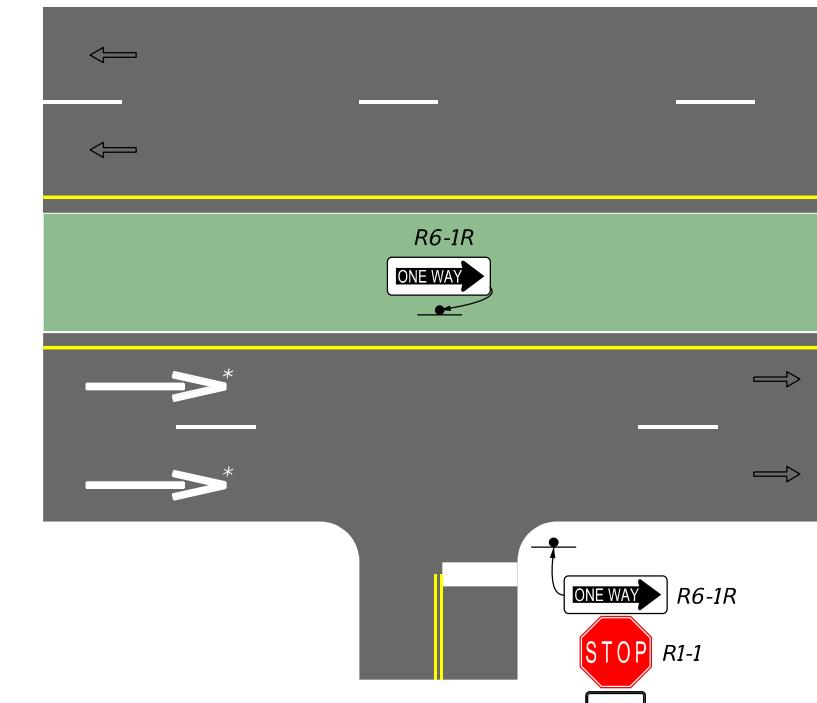

NOT TO SCALE

EXHIBIT 230-5
10/2022

TYPICAL TWO-WAY APPROACH TO UNDIVIDED SIGNALIZED AND UNSIGNALIZED ONE-WAY STREET

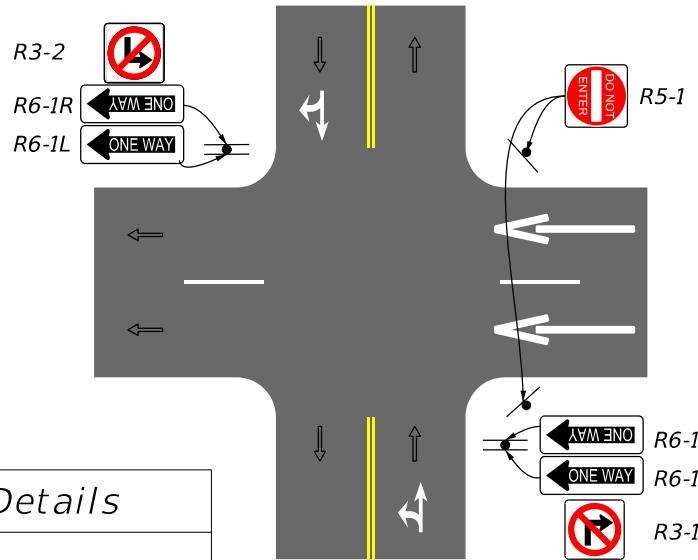


Installation Details	
1)	Wrong-Way signing and pavement markings for signalized and stop control.
2)	Place Wrong-Way arrows four feet upstream of stop bar, if present.

Legend
→ Direction of travel
→ Wrong Way Arrow
→ Lane Assignment Arrow

NOT TO SCALE
EXHIBIT 230-6
10/2022

TYPICAL ONE-WAY APPROACH TO UNDIVIDED SIGNALIZED AND UNSIGNALIZED ONE-WAY STREET

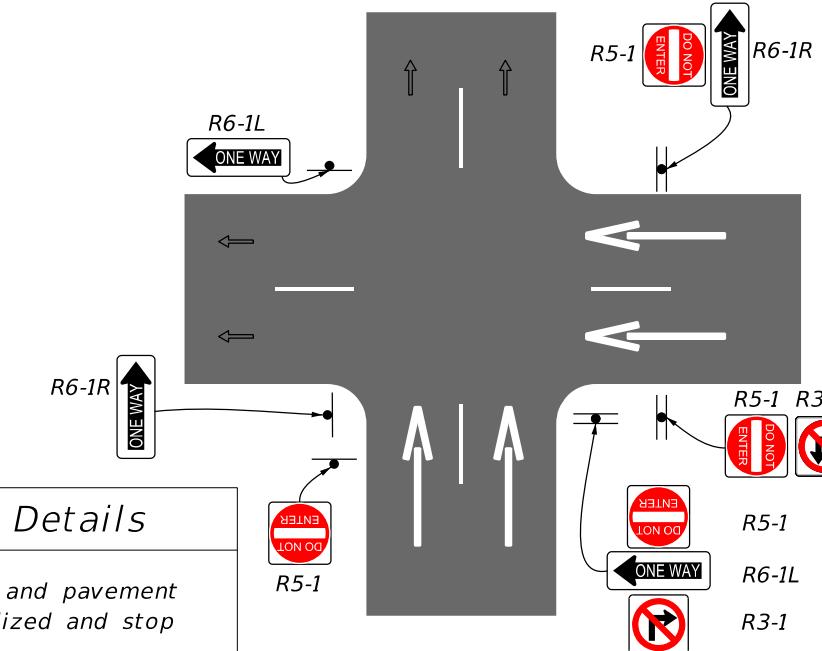

Installation Details	
1)	Wrong-Way signing and pavement markings for signalized and stop control.
2)	Place Wrong-Way arrows four feet upstream of stop bar, if present.

Legend
→ Direction of travel
→ Wrong Way Arrow
→ Lane Assignment Arrow
NOT TO SCALE
EXHIBIT 230-7
10/2022