

CHAPTER
3

Signals

SECTION 3.1
USING FLASHING MODE AT SIGNALIZED INTERSECTIONS AND DEPLOYING FLASHING BEACONS

3.1.1 DEFINITIONS

Flashing Beacon: A highway traffic signal with one or more signal sections that light up intermittently. It can be used at an intersection to control traffic or elsewhere as a warning beacon.

Signal Face: An assembly of one or more signal sections that controls traffic movements on a single approach.

Signal Indication: The illumination of a signal lens.

Non-Programmed Flashing Mode Signal Operations: The shift from an intersection signal's normal operating mode (stop-and-go, steady red-yellow-green) to flashing mode (stop or caution, flashing yellow-red or red-red) because of a signal controller malfunction, conflict in signal displays, or maintenance personnel or police manually selecting the flashing mode.

Programmed Flashing Mode Signal Operations: The shift from an intersection signal's normal operating mode (stop-and-go, steady red-yellow-green) to flashing mode (flashing yellow-red or red-red) at set times during the day, with the exclusion of a programmed flashing yellow or red arrow.

Emergency Flashing Signal Operations: The temporary shift from an intersection signal's normal operating mode (stop-and-go, steady red-yellow-green) to flashing mode (flashing yellow-red or red-red) activated in response to an emergency condition. Emergency flashing mode may be activated when conditions such as severe weather, major incidents, evacuation operations, or other emergencies require simplified traffic control to enhance safety and facilitate emergency response.

3.1.2 RECOMMENDATIONS FOR SIGNALIZED INTERSECTIONS

3.1.2.1 Programmed Flashing Mode Operation

Signals set to normal operating mode (cycling through steady red, green, and yellow phases) can help maintain signal progression and be used as a speed management technique. While flashing mode can be energy efficient, research has shown switching from normal signal operations to late-night flashing can increase crashes. Consider the following before using this mode at a signalized intersection:

- Yellow-red flashing mode may be used when two-way traffic volumes on the main street are below 200 vehicles per hour.
- Yellow-red flashing mode may be used at any hour of the day or night when ***Manual on Uniform Traffic Control Devices (MUTCD) Warrants 1 and 2*** are not met and two-way main street volume is greater than 200 vehicles per hour, provided the ratio of main street to side street volume is greater than 4:1.
- Use flashing mode only at intersections where side street drivers can easily see approaching main street traffic. Avoid using it at intersections with more than four legs, skewed intersections (greater than 15 degrees), or preempted signals.

Limit flashing signal mode to a maximum of three non-consecutive time windows of flashing operation within 24 hours. If crashes at an intersection increase after changing to flashing mode or crash severity increases, return the signal to normal operation.

3.1.2.2 Non-Programmed Flashing Mode

When a signal at an intersection malfunctions during normal operation, it will immediately switch to flashing mode without a clearance interval.

3.1.3 FLASHING MODE APPLICATIONS

Use the following signal flashing mode and start-up sequences:

3.1.3.1 Yellow-Red Flashing Mode

Main Street: Flashing yellow during flashing mode, then steady green on start-up sequence.

Arrow Turn signals: Flashing red signal arrows during yellow-red flashing mode, then steady red arrow on start-up sequence.

Side Street: Flashing red during flashing mode, then steady red on the start-up sequence.

3.1.3.2 Red-Red Flashing Mode

Main Street: Flashing red during flashing mode, then steady green on the start-up sequence.

Arrow Turn signals: Flashing red signal arrows during red-red flashing mode, then steady red arrow on start-up sequence.

Side Street: Flashing red during flashing mode, then steady red on the start-up sequence.

3.1.4 SIGNAL FACES IN FLASHING MODE

MUTCD Section 4G.03 requires all signal faces on an approach (including yellow or red turn signal indications) to be flashed when the signal is in flashing mode.

Do not illuminate pedestrian signal indications (*WALK* and *DON'T WALK*) at a signalized intersection when flashing mode is on.

3.1.5 FLASHING INDICATION COLORS

Consider the following when determining whether to flash red or yellow circular or arrow:

- Set flashing display for each signal-controlled approach, including separately-controlled turn movements.
- Flash the same color on all signal faces at an approach. Separate signal faces for separately-controlled turn movements may be flashed as described in ***MUTCD Section 4G.03***.
- There is no need to shield or position flashing yellow indications for through traffic from drivers in separately-controlled turn lanes but do shield separate protected turn movement signals from through traffic. See ***MUTCD Section 4F.10***, ***Section 4F.11***, ***Section 4F.12***, ***Section 4F.13***, ***Section 4F.14***, and ***Section 4F.15*** for additional guidance.
- When programming a signal with only arrow indications to flashing mode, flash the appropriate red or yellow arrow indication.
- When a signal face includes both circular and arrow indications of the desired color, flash only the circular indication of that color. When a five-section head is used, flash the same color as for the approach through lanes. When the traffic signal is in flashing mode, only circular red or circular yellow indications will flash.
- Do not immediately follow a steady green or flashing yellow indication with a steady or flashing red indication without displaying the steady yellow indication. Transitioning from a steady green to a flashing yellow indication is acceptable without displaying the steady yellow indication. This applies to both the circular and arrow indications. A transition from stop-and-go to flashing mode, whether initiated by a signal conflict monitor or a manual switch, may be made at any time.

Main Street, Through Traffic: From flashing yellow to steady green.

Main Street, Separate Left Turn: From flashing red to steady red.

Side Street, Through Traffic: From flashing red to steady red.

Keep green arrow indications that are continuously illuminated during normal operations continuously illuminated during flashing mode.

3.1.6 INTERSECTION CONTROL BEACONS INSTALLATION AND OPERATION REQUIREMENTS

When replacing or installing new intersection control beacons (ICB), design the traffic control devices with a minimum of two 12-inch signal indications for all approaches. Place the indications facing each intersection approach, and center them within the approach lanes as much as possible. Separate the approach indications laterally by a minimum of 8 feet. Flash the horizontally-aligned indications simultaneously to avoid confusion with grade crossing signals.

Treat each intersection approach independently. For instance, on a divided highway, use a single dual-indication beacon assembly for each approach.

Two vertically-aligned signal faces for each ICB signal indication may be used and flashed alternately to improve driver awareness of the intersection control.

Figure 3.1-1. Intersection Control Beacon



3.1.7 OTHER FLASHING BEACON APPLICATIONS

Flashing beacons may be used to make warning, posted speed limit, and stop signs more conspicuous as detailed in ***MUTCD Section 4S.03***, ***Section 4S.04***, and ***Section 4S.05***, respectively. These beacons may have one or more signal sections of a standard traffic signal control face and flash accordingly.

Section 3.2

GUIDELINES FOR LEFT TURN TREATMENTS

3.2.1 PURPOSE

This section provides guidelines for selecting the type of left-turn treatment, as defined in ***MUTCD Section 4F.02***.

3.2.2 LEFT-TURN TREATMENT STRATEGIES

Permissive-Only Mode: Drivers can turn after yielding to opposing traffic and pedestrians. When a circular green indication is displayed, both directional turns are permitted unless otherwise prohibited by another traffic control device. A flashing yellow arrow may be displayed to indicate a permissive turning movement in either protected/permissive mode or permissive-only mode. When a flashing yellow or red arrow is displayed, the turn indicated by the arrow is permitted.

Protected-Only Mode: Drivers can turn when a green arrow indication is displayed. When protected-only mode is used with a single left-turn lane, center a three-section signal head over the lane. From top to bottom—or left to right on a horizontal signal head—display the left-turn arrows in the following order: red, yellow, and green. For two or more left-turn lanes, use at least two three-section signal heads, as described above, centering one signal head over each left-turn lane.

Protected/Permissive Mode: A combination of protected and permissive modes can occur during the same cycle. Turning vehicles have the right-of-way during the protected phase and can complete the turn "permissively" when the adjacent through movement receives its circular green indication.

Use a four-section signal head with flashing yellow arrow (FYA) for protected/permissive mode. Use arrows with red, yellow, and green signal faces with a four-section signal head. See ***TEM Section 3.10*** for additional guidance on FYA display. A five-section signal head centered over the lane line between the left-turn lane and the leftmost through lane can be used for protected/permissive mode. The five-section signal head can serve as one of the two required through traffic signal heads.

Split Phasing: Assigns right-of-way to all movements on a particular approach, followed by all the movements on the opposing approach. For split phasing, a four-section signal head can be centered over the lane line between the left-turn lane and the leftmost through lane to serve as one of the two required through traffic signal heads. Do not provide supplemental signing.

Variable Left-Turn Mode: The operating mode changes among protected-only, protected/permissive, or permissive-only modes during different periods of the day or as

traffic conditions change. Follow the display guidance above dependent on the programmed left-turn modes (permissive-only, protected/permissive, or protected-only).

3.2.3 LEFT-TURN SIGNAL PHASING

When selecting the type of left-turn phasing at an intersection approach with an established need for this type of control, apply the following guidelines and exercise sound traffic engineering judgment.

Use the protected/permissive mode for all intersection approaches requiring a left-turn phase unless there is a compelling reason to use another mode. This may include a crash history with permissive left turns and motorcycles, pedestrians, or bicyclists. If it is not obvious whether protected/permissive or protected-only mode is best, use protected/permissive mode on a trial basis. If operations are satisfactory, retain it. If they are not, convert to protected-only mode.

Engineers may vary the left-turn mode on an approach throughout the day between the permissive-only, protected/permissive, or protected-only left-turn modes, where an engineering study shows this type of operation can improve safety and operations.

Apply protected-only mode at an intersection approach if any of the following conditions are present:

- There are two or more left-turn-only lanes.
- Geometric condition requirements cannot be met (e.g., horizontal and vertical curve, intersection skew angle, cone of vision), and the resulting sight distance makes protected-only mode necessary.
- The approach is the lead portion of a lead/lag intersection phasing sequence.
- There is a positive offset left-turn lane (see ***FDM 212.14.4*** for its definition). These typically do not meet the ***MUTCD Section 4D.07*** cone-of-vision requirements for a shared signal display.

Consider a protected-only mode under any of the following conditions:

- The opposing traffic speed limit is higher than 45 mph.
- Left-turning traffic must cross three or more lanes of opposing through traffic.
- A protected/permissive mode or permissive-only mode is in use and there are six or more left-turn crashes on the approach within a 12-month period.
- When permissive left turns may be confusing or hazardous. This can be caused by unusual intersection geometry or negative offset left-turn lanes.

A permissive/protected mode can be used for some intersection approaches if the traffic engineer determines that better progression, as demonstrated in a traffic signal analysis, justifies violating driver expectations. However, limit the use of this type of left-

turn phasing and restrict it to the following situations, which will not create a left-turn trap:

- T-intersections where U-turns are prohibited.
- Four-way intersections where the opposing approach prohibits left turns or has protected left-turn phasing.
- Four-way intersections where left-turn volumes from opposing approaches do not change substantially throughout a normal day, so overlap phasing is not beneficial or required.

Split phasing can be used effectively if any of the following conditions apply:

- Opposing approaches are offset so far from each other that simultaneous left turns from opposing directions are not viable or are hazardous.
- Left-turn volumes are extremely heavy on opposing approaches, and both are nearly equal to the adjacent through movement critical lane volume.
- Left-turn volume is extremely heavy on an approach that does not have a separate left-turn lane.
- Drivers can turn left from more than one lane and may also use the rightmost left-turn lane to travel through.

3.2.3.1 Left-Turn Signal Phasing Engineering Study

Conduct an engineering study at signalized approaches with an existing or proposed permissive-only or protected/permissive left-turn operation when all the following conditions exist:

- Before the scoping of a project involving signalized intersection improvements.
    - Including but not limited to Resurfacing, Restoration, and Rehabilitation (RRR), capacity, and traffic operations improvement projects (e.g., signal retiming activities).
- The context classification is C3C, C3R, or C4.
- The posted speed limit is 40 mph or 45 mph.
- Left-turning traffic must cross three or more opposing through lanes

In the engineering study, analyze conversion to, or use of, protected-only mode, or variable mode with protected-only and protected/permissive during different periods of the day. Additionally, analyze the feasibility of the improvements. This may include a structural capacity analysis as directed by ***FDM 261***.

Implement the improvements identified in the study when determined to be feasible and appropriate by the Engineer of Record.

3.2.4 SIGNAL DISPLAY FOR EXCLUSIVE LEFT-TURN LANE

Do not place a three-section (red, yellow, and green) signal head over an exclusive left-turn lane unless the signal phasing sequence allows a protected left-turn movement during the cycle.

3.2.5 LEFT-TURN PHASES FOR SEPARATED LEFT AND THROUGH LANES

Left-turn lanes at signalized intersections separated from through lanes by raised islands or painted gores may operate in several modes: protected-only, protected/permissive, or permissive-only. When choosing protected/permissive mode, use a five-section signal or a four- or three-section FYA signal. Make it clear the signal is shared by placing it overhead on the lane line between the through lane and the island. In all cases, follow the cone-of-vision requirements in ***MUTCD Section 4D.07***.

Figure 3.2-1 uses standard lane widths for a four-lane divided highway. ***Table 3.2-1*** shows the maximum island or gore width allowed for the indicated signal head distance from the stop line without shifting the signal head.

Figure 3.2-1. Signal Head/Left-Turn Treatment

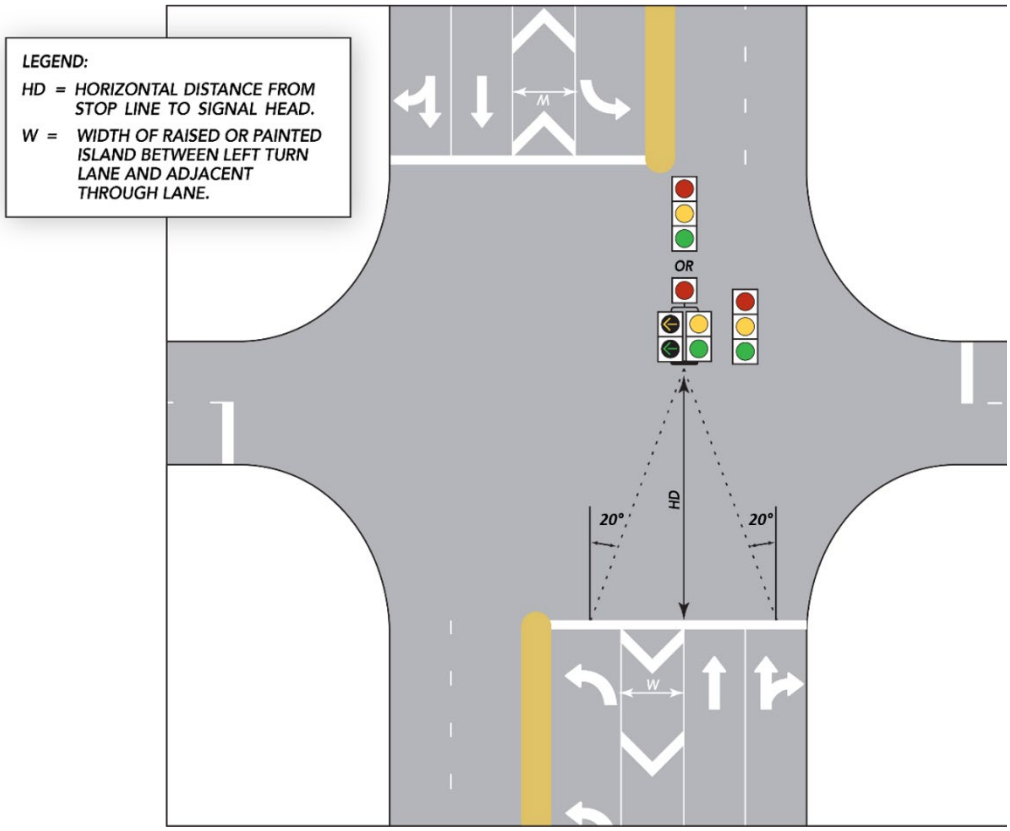


Table 3.2-1. Maximum Width of Island or Gore Without Shifting Signal Head

Horizontal Distance (feet)	Width (feet)
40	8
50	12
60	15
70	19
80	23
90	26
100	30
110	34
120	37
130	41
140	44
150	48


Do not use signals with circular green indications above an exclusive left-turn lane or the extension of the lane for a permissive-only left turn. Do not post-mount signals on the far-side median in front of the left-turn lane.

If positioning a shared signal head on the lane line adjacent to the nearest through lane does not meet cone of vision requirements due to an offset left-turn lane's separation or geometric conditions, the shared signal face may be offset to the left from the adjacent through lane line. This will ensure the cone of vision requirements are met for the rightmost through lane and the left-turn lane. See ***Figure 3.2-2*** for a schematic representation of this offset.

Use this lateral offset spacing only after considering other options, such as increasing the horizontal distance to the signal heads. Place the signal so it is obvious to drivers that it is shared. Generally, keep the lateral offset spacing of the shared signal head from the adjacent through lane no greater than one-half the island's width (½W).

If the lateral shift is too great, the cone of vision may not be adequate for the driver in the rightmost through lane. This may be due to a large parallel offset left-turn lane or a tapered or curved offset left-turn lane. When the cone of vision requirements cannot be met, use a protected-only mode.

Figure 3.2-2 Left-Turn Lane Signal Head Shift

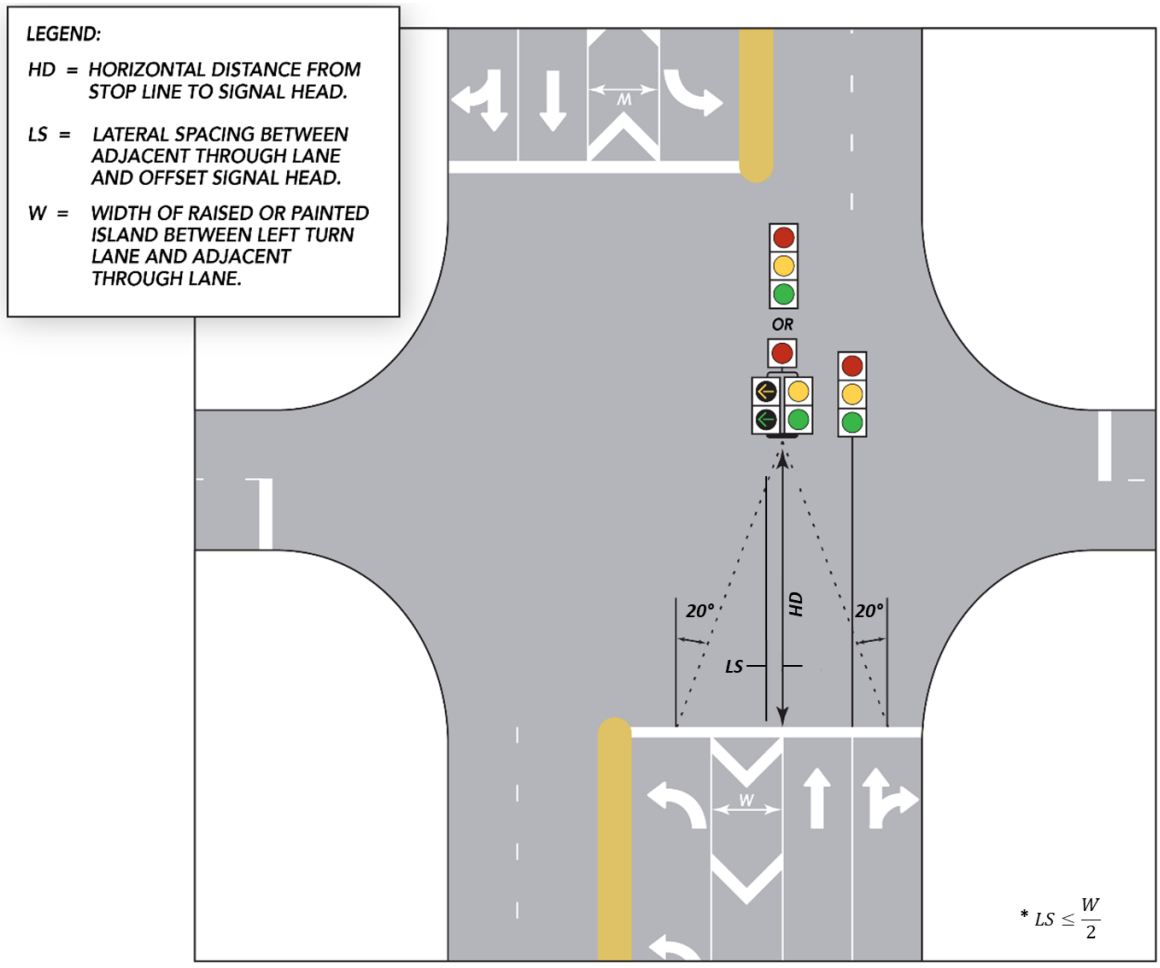

3.2.6 PERMISSIVE-ONLY MODE IN MULTI-LEFT-TURN-LANE APPROACHES

Do not use a permissive green interval for two or more left-turn lane approaches.

Section 3.3

SCHEDULING TRAFFIC SIGNAL STUDIES AND SECURING FUNDING

3.3.1 PURPOSE

This section establishes criteria for responding to requests to install traffic signals, conducting related studies to determine need and appropriate intersection control strategy; and securing funding and arranging implementation for warranted signals.

3.3.2 GENERAL

FDOT is responsible for developing statewide guidelines and maintaining uniform traffic control devices to regulate, manage, guide, and protect all users of the State Highway System. FDOT must respond uniformly to all signal requests and schedule and conduct traffic studies accordingly.

3.3.3 RESPONSE TO SIGNAL REQUESTS AND SCHEDULING TRAFFIC SIGNAL STUDIES

Before committing resources for a signal warrant study, the ***District Traffic Operations Office*** reviews all traffic signal installation requests received by FDOT. This initial screening includes reviewing existing information and local knowledge of the intersection and may require a brief site visit to confirm field conditions. All data collected during the initial screening is kept on file in writing. Reviewers will attempt to relate all data and analysis to ***MUTCD*** standards.

If the initial screening prompts FDOT to conduct a signal warrant study, the appropriate District Traffic Operations Office will contact the local maintaining agency, advise them of FDOT's decision, and obtain their views and input.

If FDOT decides not to further consider a signal warrant study based on the initial screening results, the District Traffic Operations Office will document the reasons and share a copy of the findings with the requestor and local maintaining agency.

Though local government support is ideal, FDOT may commit resources to a signal warrant study.

The District Traffic Operations Office normally conducts signal warrant studies for intersections on the State Highway System, but a local maintaining agency may conduct a signal warrant study and submit it to the District Traffic Operations Office for review. All studies must follow the procedure and standards in this document and be signed and sealed by a Florida-licensed professional engineer.

Formal legal resolutions from local agencies may form the basis of their concurrence in the need for a signal warrant study. However, such documents are required by FDOT as a prerequisite to scheduling the study. Implementation funds do not need to be available before assessing traffic signalization needs (conducting a study).

The District Traffic Operations Office keeps a log of requests for signal warrant studies and their outcomes. To the extent practical, they will prioritize signal warrant study scheduling based on request date, traffic volumes, crashes (frequency, type, injury levels), and the degree of local government interest.

3.3.4 TRAFFIC SIGNAL STUDIES

Traffic signal studies and other required planning and engineering services for traffic signals or alternative intersections on the State Highway System can be undertaken by FDOT staff, local agency engineers, or qualified consulting engineers. FDOT, however, is responsible for requiring and overseeing all such work.

Complete all traffic signal studies as described in FDOT's ***Manual on Uniform Traffic Studies (MUTS), Chapter 2***. Plans and specifications, if required, need to comply with established FDOT procedures.

The developer must cover the cost of traffic signal studies or engineering analyses for new private access points to major traffic generators or proposals to significantly revise access points. Qualified traffic engineers must conduct all studies. These studies are typically part of the Driveway Permit Application, as required by ***Rule 14-96, F.A.C.***

In addition to evaluating the need for signal control at unsignalized intersections, studies must also consider enhanced features at upstream and downstream signalized intersections as needed. All studies and reports must be signed and sealed by a Florida-licensed professional engineer.

The developer is also normally responsible for engineering costs associated with preparing implementation plans and specifications. In some cases, specific critical design needs may require FDOT staff to perform engineering work. In these cases, the District Secretary may direct FDOT staff to complete the engineering work at no cost to the developer.

Engineering studies at existing private access points due to normal traffic growth are usually made by qualified traffic engineers hired and paid by the requestor. In extraordinary situations, FDOT may elect to do this work.

3.3.5 FUNDING ARRANGEMENTS FOR WARRANTED NEW SIGNAL INSTALLATIONS

Funding for new traffic signals or alternative intersections on the State Highway System may come from any combination of private, local, state, or federal sources.

If the improvements are required by a new or revised Driveway Permit or local government Development Order, the developer must fully fund them. This includes planning, engineering, and construction for any new traffic signal, alternative intersection, or enhancements to existing traffic signals specified in the Permit or Order.

If the developer's proposal to install signals, alternative intersections, or modify existing signalization exceeds the minimum improvements required by the Permit or Order and improves the State Highway System substantially beyond mitigating development impacts, FDOT may consider assuming some of the cost. In that event, district secretaries will determine an appropriate financial participation formula and assign a percentage to the developer related to the specific conditions at each site.

FDOT is responsible for installing traffic signals and constructing alternative intersections on the State Highway System, but local maintaining agencies can voluntarily cover some or all of the costs based on their cooperative agreements with FDOT's District Offices. Local funds are most often used to advance the implementation schedule. When local funds are accepted by FDOT, both parties must execute a formal joint project agreement.

Most local governments in Florida's urban areas have qualified traffic engineering units with experienced traffic signal field crews. Local agency crews have installed new signals on the State Highway System using FDOT-supplied control hardware. The Department encourages this approach when the local maintaining agency is agreeable. Since most of these agencies maintain and operate these sites themselves, this partnership is encouraged. No formal agreement is needed since no money is changing hands, but FDOT needs to request a letter from the local maintaining agency agreeing to install FDOT-supplied hardware.

3.3.6 OTHER CONSIDERATIONS

Follow the ***Approved Product List Submittal Process*** provisions before purchasing, using, or installing traffic signals.

If a local agency agrees to maintain the signal, add the signal to ***Exhibit A*** of the ***Traffic Signal Maintenance and Compensation Agreement*** with that agency.

Section 3.4

EMERGENCY TRAFFIC CONTROL SIGNALS

3.4.1 PURPOSE

This section gives guidance for warranting, designing, and operating emergency traffic control signals at locations where emergency vehicles—most commonly fire trucks—enter the street system.

3.4.2 BACKGROUND

FDOT's district offices often receive local agency requests for traffic signal control for departing emergency vehicles. This section offers comprehensive guidance to determine if an emergency signal is warranted.

3.4.3 PROCEDURE

An emergency traffic control signal shall be considered necessary if an engineering study finds that one of the following warrants is met:

- When minimum traffic volumes are met for the peak hour or for 24 hours (both travel directions based on Signal Warrant 2), as shown in **Table 3.4-1**.

Table 3.4-1. Minimum Traffic Volumes

Roadway	Peak Hour (VPH)	24 Hours (ADT)
Two lanes	750	7,500
Four lanes	900	9,000
Six lanes or more	1,200	12,000

Note: For roads with four lanes or six or more lanes, increase the VPH and ADT values by one-third when the arterial has traffic signal system coordination with signals located within 1,000 feet in both directions of the emergency signal location.

- When the emergency vehicle facility requires returning emergency vehicles to back in, blocking the roadway, and emergency vehicle lights and flaggers are inadequate to control traffic volume or speeds.

- When the emergency vehicle driveway is consistently blocked by traffic queues from adjacent signalized intersections. Consider using a *DO NOT BLOCK INTERSECTION* sign (***R10-7***) in conjunction with installing the emergency signal.

- On all approaches when vertical or horizontal curvature or other obstructions do not provide adequate stopping sight distance for traffic approaching an emergency vehicle driveway.

3.4.4 EMERGENCY SIGNAL CONFIGURATION AND OPERATION

MUTCD Section 4M defines the requirements for locating an emergency signal mid-block. The ***MUTCD*** allows either a steady green or flashing yellow signal when emergency vehicles are not entering the roadway.

For new or reconstructed emergency signal installations, apply the following criteria:

- Provide dual signal faces for each roadway approach. Install two signal faces for the emergency vehicle driveway; the minimum required is one signal face.

- If the emergency service is off the main roadway and emergency vehicles access it by the minor street, emergency signals may be installed at the intersection of these roadways. Use dual signal faces on the minor street, with the signals resting in flashing red mode.

- Operate mid-block emergency signals in flashing yellow mode when emergency vehicles are not entering the roadway. Use a three-section roadway signal head operated as shown in ***Figure 3.4-1***.

- At signalized intersections pre-empted by emergency vehicles, determine signal operations on an individual basis.

During the evaluation of an emergency signal, consider site-specific factors for its implementation. These may include the route distance between the intersection and emergency vehicle driveway, intersection geometrics, number of lanes, normal queue length, and traffic volumes.

3.4.5 *EMERGENCY SIGNAL* SIGN (*R10-13*)

As emergency signals are installed along major arterials where emergency vehicles enter the roadway, place *EMERGENCY SIGNAL* signs (***R10-13***) on the span wire or mast arm to alert drivers to the signal's purpose.

Mount the *EMERGENCY SIGNAL* sign (***R10-13***) between the dual signal faces on each roadway approach.

No sign is required for the emergency vehicle driveway approach.

3.4.6 OTHER REQUIREMENTS


Include a controller timing chart in the contract plans.

FDOT requires a Traffic Signal Maintenance and Compensation Agreement for all emergency signals on the State Highway System.

FDOT requires a signal timing study to determine proper clearance intervals.

A Warning Sign assembly consisting of an Emergency Vehicle (***W11-8***) sign with an *EMERGENCY SIGNAL AHEAD* (***W11-12P***) supplemental plaque is required in advance of all emergency vehicle traffic control signals. See ***MUTCD Section 2C.54***, Paragraph 14 and ***Section 4M.02***, Paragraph 2.

Figure 3.4-1. Mid-Block Emergency Signal Operation

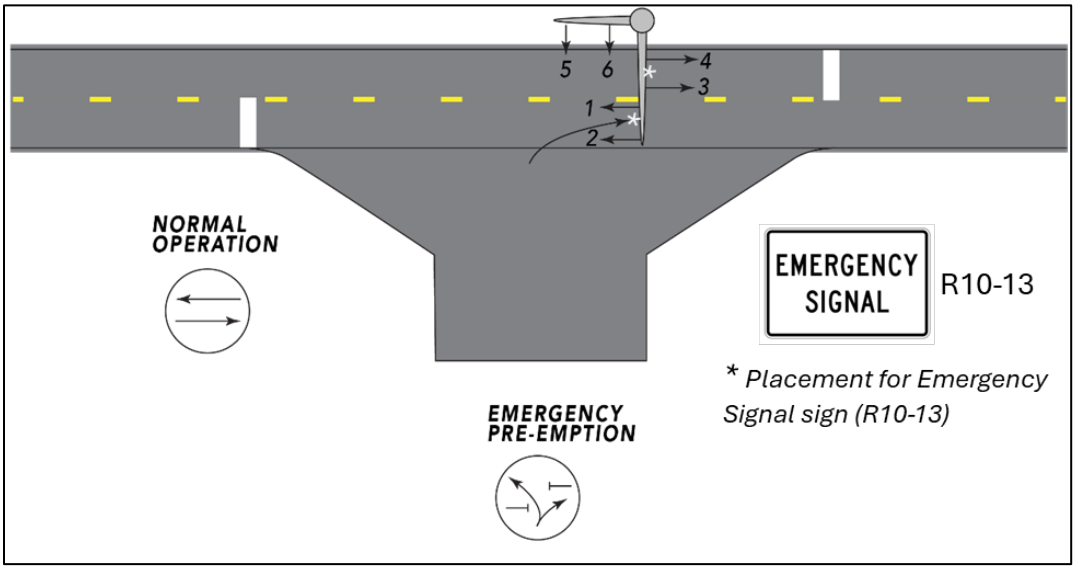

NORMAL OPERATION	CHANGE TO EMERGENCY PREEMPTION	EMERGENCY PREEMPTION	CHANGE FROM EMERGENCY PREEMPTION	RELEASE
Signal 1, 2, 3, 4 FY	Signal 1, 2, 3, 4 Y	Signal 1, 2, 3, 4 R	Signal 1, 2, 3, 4 R	Signal 1, 2, 3, 4 FY
Signal 5, 6,	Signal 5, 6,	Signal 5, 6, G	Signal 5, 6,	Signal 5, 6,

Section 3.5

TRAFFIC SIGNAL MAST ARM SUPPORT BOUNDARIES

3.5.1 GENERAL

Comply with the Mast Arm Structures Boundary Maps when selecting the appropriate support for traffic signal installations on the State Highway System. See ***FDM 232.8.1*** for more information.

3.5.2 IMPLEMENTATION

3.5.2.1 Mast Arm Structures Boundary Maps

The Mast Arm Structures Boundary Map follows an alignment of state roads to the coastline. Official mapping of district-specific boundaries can be found on ***FDOT's website***.

Section 3.6

YELLOW CHANGE AND RED CLEARANCE INTERVAL STANDARDS FOR SIGNALIZED INTERSECTIONS

3.6.1 PURPOSE

This section outlines standards for timing yellow change and red clearance intervals at signalized intersections. These intervals provide a consistent transition between conflicting traffic signal phases. A yellow change interval warns drivers they will soon need to stop and allow conflicting traffic the right-of-way. A red clearance interval allows time for drivers to clear the intersection before conflicting traffic is given a green indication.

Program a yellow change interval to last 3 seconds at a minimum but no more than 6 seconds, as described in ***MUTCD Section 4F.17***. Program a red clearance interval not to exceed 6 seconds. These standards apply to the following conditions on the State Highway System:

- New traffic signal installations
- All traffic infraction detector installations
- Signal phasing changes
- Geometric changes affecting timing or phasing
- Corridor retiming projects

3.6.2 STANDARD

Section 316.075(3)(a), F.S. prohibits the use of any traffic control signal that does not display a yellow or "caution" indication between the green or *GO* indication and the red or *STOP* indication. The statute is silent on how long the yellow indication should last and does not mention or mandate the use of a red clearance interval.

3.6.2.1 Yellow Change Interval

To calculate the yellow change interval, FDOT uses a formula developed by the Institute of Transportation Engineers (ITE) in its ***Determining Vehicle Signal Change and Clearance Intervals*** publication. This is shown in ***Formula 3.6-1***.

Formula 3.6-1 was used to calculate the Florida yellow change intervals shown in ***Table 3.6-1***. These intervals are the required standard minimum values. The calculations use a perception-reaction time of 1.4 seconds and a grade of 0%. Do not

use a perception-reaction time shorter than 1.4 seconds per ***Traffic Engineering and Operations Bulletin 02-13***.

The approach speed in ***Table 3.6-1*** and ***Formula 3.6-1*** is the posted speed limit for the approach being analyzed.

If ***Formula 3.6-1*** produces a value lower than the one in ***Table 3.6-1*** for a given posted speed limit, use the corresponding value in ***Table 3.6-1***. Do not program yellow change intervals shorter than the standard values in ***Table 3.6-1***. Yellow change intervals longer than the standards for posted speed limits in ***Table 3.6-1*** are allowed, but base them on ***MUTCD Section 4F.17***, engineering practice, and ***Formula 3.6-1***. Do not program a yellow interval longer than 6 seconds.

Do not use the extended kinematic model, referenced in ITE's ***Guidelines for Determining Traffic Signal Change and Clearance Intervals*** publication, to calculate the minimum yellow change interval.

Round up yellow change and red clearance interval times to the nearest 0.1 second.

Table 3.6-1. Florida Yellow Change Interval (0.0% Grade) Standard *

Approach Speed (mph)	Yellow Interval (seconds)
25	3.4
30	3.7
35	4.0
40	4.4
45	4.8
50	5.1
55	5.5
60	5.9
65	6.0

* For approach grades other than 0%, use ***Formula 3.6-1***.

Formula 3.6-1

$$Y = t + \frac{1.47v}{2(a + Gg)}$$

Where:

Y = Length of yellow interval, in seconds

t = Perception-reaction time (use 1.4 seconds)

v = Speed of approaching vehicles, in mph

a = Deceleration rate in response to the onset of a yellow indication (use 10 ft/sec^2)

g = Acceleration due to gravity (use 32.2 ft/sec^2)

G = Grade, with uphill positive and downhill negative (percent grade/100)

3.6.2.2 Red Clearance Interval

Always include a red clearance interval at a signalized intersection. Allowing enough time for drivers to clear the intersection after their signal phase turns red can reduce angle crashes, even if some drivers run the red indication.

Compute the red clearance intervals using the appropriate formula from ITE's ***Determining Vehicle Signal Change and Clearance Interval***, which is shown as ***Formula 3.6-2.***

Formula 3.6-2

$$R = \frac{W + L}{1.47v}$$

Where:

R = Length of red interval, in seconds

W = Width of the intersection, in feet, measured from the near-side stop line to the far edge of the conflicting traffic lane along the actual vehicle path

L = Length of vehicle (use 20 feet)

v = Speed of approaching vehicles, in mph

The red clearance interval must be between 2 and 6 seconds long. Engineers may program red clearance intervals longer than the values calculated using ***Formula 3.6-2*** at their discretion. A longer red clearance interval may be appropriate for wide or

complex intersections or those with a crash history or limited sight distance. Any interval extension must meet the minimum/maximum guidance for red clearance intervals.

National Cooperative Highway Research Partnership (NCHRP) ***Report 731: Guidelines for Timing Yellow and All-Red Intervals at Signalized Intersections*** recommends using a modified ITE formula that allows for a 1.0-second reduction in the red clearance interval values computed using ***Formula 3.6-2***. This accounts for reaction time delay from conflicting traffic. Use engineering judgment when exercising this option, but do not program a red clearance interval shorter than 2.0 seconds.

Section 3.7

ACCESSIBLE PEDESTRIAN SIGNALS

3.7.1 PURPOSE

This section establishes criteria for installing and operating accessible pedestrian signals (APS) on the State Highway System. These traffic control devices provide non-visual information using audible tones, speech messages, or vibrating surfaces.

3.7.2 GENERAL

The standards for APS on public roadways are set in ***MUTCD Sections 4K.01 to 4K.05***. Additional guidance for their installation is available in ***MUTCD Section 4I.06***. Review these ***MUTCD*** sections when addressing requests to install APS.

3.7.3 PROCEDURE

Obtain ***DTOE*** approval to install APS at signalized intersections and signalized midblock crossings on the State Highway System.

The DTOE reviews requests from the public, maintaining agencies, public agencies, and support groups for people with visual impairments to install APS. The DTOE may request input from public agencies and organizations that support people with visual impairments to determine if a given APS installation would be effective and safe for users.

An engineering study will follow if the DTOE's preliminary review supports installing APS. When conducting the engineering study, consider the needs of all pedestrians, not just those with visual impairments.

Consider the following features when reviewing requests to install APS:

- Potential demand for APS
- Right-on-red movements
- Free-flow right-turn movements
- Signal phasing complexity
- Intersection geometry complexity
- Traffic volumes during times when pedestrians might be present
- Audible tones or sounds that may cause confusion

- Verbal messages instead of tones or sounds
- Vibrotactile pedestrian devices
- Pushbutton versus passive pedestrian detectors
- APS automatic volume adjustment, not to exceed 100 dBA (decibels), in response to ambient traffic sound level
- Additional geometrics, operations, and pedestrian safety considerations at locations with more than four lanes or posted speed limits greater than 35 mph

3.7.4 APS REQUEST REVIEW PROCESS

DTOEs review all requests for APS installations on the State Highway System, either directly or through engineering studies. The ***DTOEs*** consider the needs of all pedestrians in the review, not just those with visual impairments.

The initial review may require site visits to verify field conditions. FDOT records and maintains all data gathered during the initial screening. Reconcile all data and analysis with ***MUTCD Sections 4K.01 to 4K.05*** standards. Although local government concurrence is desirable, it is not a prerequisite for committing FDOT resources for an APS installation.

If the ***DTOE*** denies an APS installation after the initial review, document the reasons, advise the requestor of the review findings, and provide the local government with a copy.

Section 3.8
CALCULATING RAILROAD TRAFFIC SIGNAL PREEMPTION TIME

3.8.1 PURPOSE

This section describes how to determine the required preemption time for a traffic signal adjacent to a highway rail grade crossing with an active warning system.

3.8.2 GENERAL

This comprehensive guidance on calculating signal preemption time adheres to ***Rule 14-57.013(5), F.A.C.*** For more information on when a preemption study is needed, refer to ***FDM 220.2.4.1 – Preemption***.

Before implementation, consult and coordinate with the appropriate railroad agency, the ***District Rail Office***, and the ***DTOE***.

3.8.3 DEFINITIONS

Advance Preemption (AP): The length of time before activation of railroad warning devices that a highway traffic signal controller unit or assembly is notified of an approaching train.

Clear Storage Distance (CSD): The distance available for vehicle storage measured between 6 feet from the rail nearest the intersection to the intersection stop line or the normal stopping point on the highway. At skewed grade crossings and intersections, the 6-foot distance shall be measured perpendicular to the nearest rail either along the center line or edge line of the highway, as appropriate, to obtain the shorter distance. Where exit gates are used, the distance available for vehicle storage is measured from the point where the rear of the vehicle would be clear of the exit gate arm. In cases where the exit gate arm is parallel to the track(s) and is not perpendicular to the highway, the distance is measured either along the center line or edge line of the highway, as appropriate, to obtain the shorter distance.

Controller's Equipment Response Time to Preempt (CERTP): The time that elapses while the controller electronically registers the preempt call.

Design Vehicle (DV): The longest vehicle permitted by statute of the road authority (State or other) on a given roadway.

Design Vehicle Clearance Distance (DVCD): How far, in feet, the design vehicle must travel to enter and completely pass through the highway rail grade crossing's minimum

track clearance distance. This is the sum of the minimum track clearance distance and the total design vehicle's length. Design vehicle length can be found in ***FDM 201***.

Design Vehicle Clearance Time (DVCT): How long it takes for the design vehicle to accelerate from a stop and travel through and clear of the minimum track clearance distance.

Desired Minimum Separation Time (DMST): A time buffer between the departure of the last vehicle (the design vehicle) from the highway rail grade crossing and the arrival of the train.

Maximum Highway Traffic Signal Preemption Time (MHTSPT): The maximum time a highway traffic signal needs after initiating the preemption sequence to finish timing the right-of-way transfer time, queue clearance time, and separation time.

Minimum Green Time During Right-of-way Transfer (MGTRT): The minimum number of seconds any existing phase will display a green indication before the controller unit terminates the phase through its yellow change and red clearance intervals and transitions to the track clearance green interval. A 5-second interval is recommended to make the transition to the track clearance green interval as rapid as possible.

Minimum Track Clearance Distance (MTCD): The length along the highway at one or more railroad tracks, measured from the portion of the highway rail grade crossing automatic gate arm farthest from the near rail to a point downstream from the track(s) on the departure from the grade crossing. The length along the highway between the two points is the minimum track clearance distance.

Minimum Walk Time During Right-of-way Transfer (MWTRT): The minimum pedestrian *WALK* indication time before the preemption sequence begins. FDOT recommends a 5-second interval to make the transition to the track clearance green interval as rapid as possible.

Other Green Time During Right-of-way Transfer (OGTRT): Any additional green time beyond the preempt minimum green time for the worst-case vehicle phase.

Pedestrian Clearance Time During Right-of-way Transfer (PCTRT): The pedestrian clearance (i.e., flashing *DON'T WALK* indication) time for the worst-case pedestrian phase. A zero value is allowed for the most rapid transition to the track clearance green interval.

Preemption: The transfer of normal traffic control signal operation to a special control operation mode.

Preempt Delay Time (PDT): The number of seconds the traffic signal controller is programmed to wait from the initial receipt of a preempt call until the call is verified and considered a viable request for transfer into preemption mode.

Preempt Trap: A potential hazard condition that happens when the gates do not block vehicle access to the crossing before the expiration of the track clearance green. Vehicles can continue to cross the tracks and possibly stop on the tracks. In a preempt trap, the track clearance green interval has already expired, so there will be no further opportunity to clear the tracks.

Preempt Verification and Response Time (PVRT): The number of seconds between when the controller unit receives a preempt call from the railroad's grade crossing warning equipment and the controller software begins to respond to the preempt call.

Queue Clearance Time (QCT): The time it takes the design vehicle to start up, move through, and clear the entire minimum track clearance distance when it is stopped just inside.

Queue Start-up Time (QST): Time from the beginning of the track clearance green until the design vehicle can start moving.

Red Clearance Time (RCT): The required red clearance interval time during right-of-way transfer before transitioning to track clearance.

Required Preemption Time (RPT): The time provided by the engineer of record to the railroad signal designer.

Right-of-way Transfer Time (RTT): The maximum amount of time needed for the worst-case condition, prior to display of the track clearance green interval. This includes any railroad or light rail transit or highway traffic signal control equipment time to react to a preemption call, and any traffic control signal green, pedestrian walk and clearance, yellow change, and red clearance intervals for conflicting traffic.

Separation Time (ST): The portion of maximum highway traffic signal preemption time when the minimum track clearance distance is clear of vehicles before the arrival of a train.

Track Clearance Distance (TCD): The length along a highway at one or more railroad tracks, measured from the highway stop line, warning device, or 12 feet perpendicular to the track center line, to 6 feet beyond the track(s) measured perpendicular to the far rail, along the center line or edge line of the highway, as appropriate, to obtain the longer distance.

Track Clearance Time (TCT): Time needed to travel through the track clearance distance plus a 4-second separation time.

Vehicle-Gate Interaction: When the automatic gate descends on a stationary or slow-moving vehicle as it moves through the minimum track clearance distance.

Yellow Change Time (YCT): The required yellow change interval time during right-of-way transfer prior to the track clearance.

3.8.4 PROCEDURE

Engineers may calculate the maximum preemption time for highway-rail grade crossings as follows.

Calculate the Right-of-Way Transfer Time.

The components of right-of-way transfer time include the *preempt verification* and *response time* and *the worst-case conflicting vehicle or pedestrian time*. Calculate these through the following steps:

Step 1: Calculate *preempt verification* and *response time* (seconds).

Collect the preempt delay time (seconds) and the controller response time to preempt (seconds). Calculate the preempt verification and response time by adding the preempt delay time and the controller response time.

Step 2: Calculate the *worst-case conflicting vehicle time* (seconds).

Add the minimum green time during right-of-way transfer (seconds), other green time during right-of-way transfer (seconds), yellow change time (seconds), and red clearance time (seconds). The worst-case conflicting vehicle time is the total.

Step 3: Calculate the *worst-case conflicting pedestrian time* (seconds).

Add the minimum *WALK* time during right-of-way transfer, pedestrian clearance time during right-of-way transfer, vehicle yellow change time, and vehicle red clearance time. The worst-case conflicting pedestrian time is the total.

Step 4: Determine the worst-case conflicting vehicle or pedestrian time.

The worst-case conflicting vehicle or pedestrian time is whichever is longer between the worst-case conflicting vehicle time (**Step 2**) and the worst-case conflicting pedestrian time (**Step 3**).

Step 5: Calculate the right-of-way transfer time.

The right-of-way transfer time is the sum of the *preempt verification* and *response time* (**Step 1**) and the worst-case conflicting vehicle or pedestrian time (**Step 4**).

Calculate the queue clearance time.

The queue clearance time includes the time it takes the design vehicle to start moving and to accelerate through the clearance distance. Calculate this through the following steps:

Step 1: Determine the queue start-up distance.

Measure the clear storage distance and minimum track clearance distance for the highway-rail grade crossing. Calculate the queue start-up distance, L (feet), by adding the clear storage distance to the minimum track clearance distance.


Step 2: Calculate the time the design vehicle needs to start moving.

Calculate the time the design vehicle needs to start moving, in seconds, as 2 plus the queue start-up distance, L, divided by the speed of 20 feet per second.

Step 3: Determine the design vehicle clearance distance.

Combine the minimum track clearance distance and the total design vehicle's length, as shown in ***Figure 3.8-1***.


Figure 3.8-1. Geometric Data at the Highway-Rail Grade Crossing

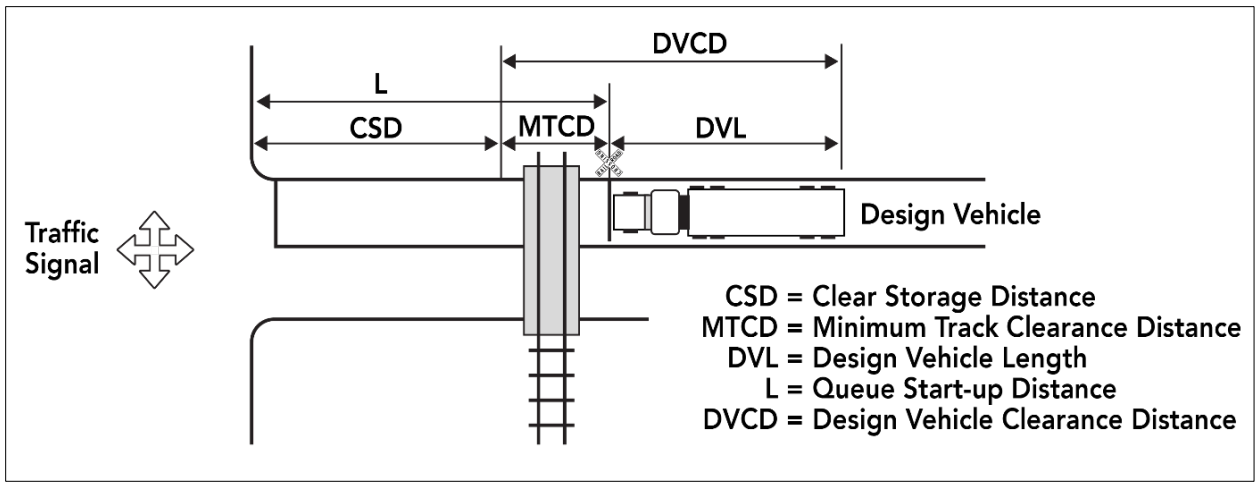

Step 4: Calculate the time the design vehicle needs to accelerate through the design vehicle clearance distance on level terrain.

Select the design vehicle for the analysis. Use ***Figure 3.8-2*** to determine the time the design vehicle needs to accelerate through the design vehicle clearance distance on level terrain.

Figure 3.8-2. Acceleration Time Over a Fixed Distance on a Level Surface

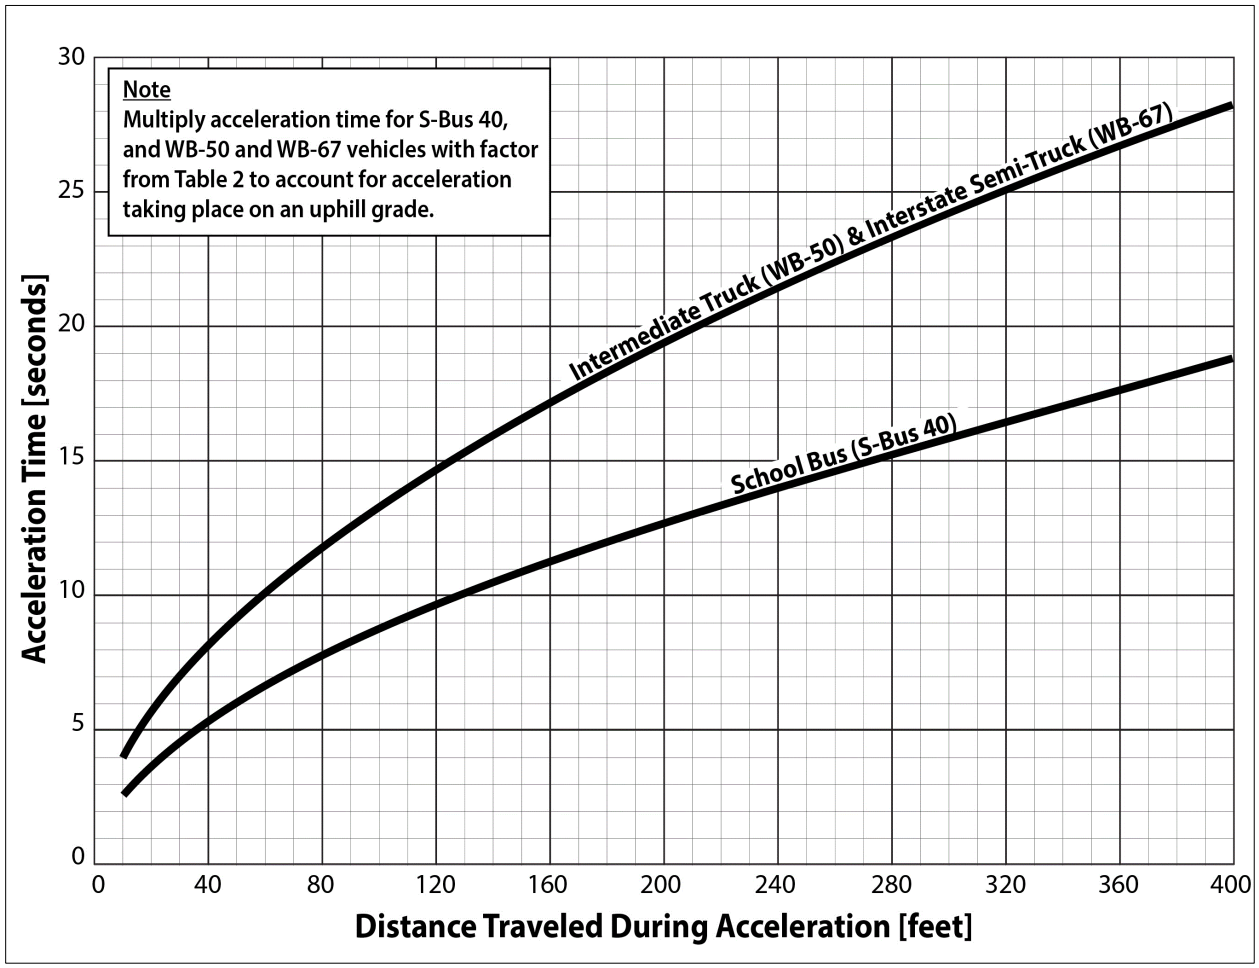

Step 5: Calculate the time the design vehicle needs to accelerate through the design vehicle clearance distance on an uphill grade.

If the design vehicle clearance distance is on an uphill grade, calculate the approach grade factor to account for slower acceleration. Determine the approach grade factor, shown in ***Table 3.8-1***, based on design vehicle clearance distance, design vehicle, and slope grade.

To calculate the time needed for the design vehicle to accelerate through the design vehicle clearance distance on an uphill grade, multiply the time it needs to accelerate through the design vehicle clearance distance on level terrain by the approach grade factor.

Table 3.8-1. Factors to Account for Slower Acceleration on Uphill Grades

Acceleration Distance (feet)	Design Vehicle and Percentage Uphill Grade									
	School Bus (S-BUS 40)					Intermediate Truck (WB-50) and Interstate Semi-Truck (WB-67)				
	≤1%	2%	4%	6%	8%	0%	2%	4%	6%	8%
25	1.00	1.01	1.10	1.19	1.28	1.00	1.09	1.27	1.42	1.55
50	1.00	1.01	1.12	1.21	1.30	1.00	1.10	1.28	1.44	1.58
75	1.00	1.02	1.13	1.23	1.33	1.00	1.11	1.30	1.47	1.61
100	1.00	1.02	1.14	1.25	1.35	1.00	1.11	1.31	1.48	1.64
125	1.00	1.03	1.15	1.26	1.37	1.00	1.12	1.32	1.50	1.66
150	1.00	1.03	1.16	1.28	1.40	1.00	1.12	1.33	1.52	1.68
175	1.00	1.03	1.17	1.29	1.42	1.00	1.12	1.34	1.53	1.70
200	1.00	1.04	1.17	1.30	1.43	1.00	1.13	1.35	1.54	1.72
225	1.00	1.04	1.18	1.32	1.45	1.00	1.13	1.35	1.56	1.74
250	1.00	1.04	1.19	1.33	1.47	1.00	1.13	1.36	1.57	1.76
275	1.00	1.05	1.20	1.34	1.49	1.00	1.14	1.37	1.58	1.77
300	1.00	1.05	1.20	1.35	1.50	1.00	1.14	1.37	1.59	1.79
325	1.00	1.05	1.21	1.36	1.52	1.00	1.14	1.38	1.60	1.81
350	1.00	1.05	1.22	1.37	1.54	1.00	1.15	1.39	1.61	1.82
375	1.00	1.06	1.22	1.38	1.55	1.00	1.15	1.39	1.62	1.84
400	1.00	1.06	1.23	1.40	1.57	1.00	1.15	1.40	1.63	1.85

Step 6: Calculate the queue clearance time.

The queue clearance time is the sum of the time the design vehicle needs to start moving and the time it needs to accelerate through the design vehicle clearance distance.

Select the desired minimum separation time (seconds).

The separation time is added for safety reasons and to avoid driver discomfort. ITE (in an article by Marshall and Berg in February 1997) recommends a minimum separation time of 4 seconds. This value may be reduced to as low as 0 seconds if the necessary warning time is not available.

Calculate the maximum preemption time.

To get the required preemption time, add the right-of-way transfer time, queue start-up time, and desired minimum separation time. If using advance preemption, check, using the worst-case scenario, that the preemption phase does not end before the activation of the grade crossing warning devices. Consider variability in train arrival times. Submit the calculated maximum preemption time to the ***DTOE*** and ***District Rail Office*** for approval.

Coordinate with the appropriate railroad agency and the railroad signal designer.

After approval by the ***DTOE*** and ***District Rail Office***, provide the required preemption time to the railroad signal designer so they can determine the required rail warning system and timings.

3.8.5 PREEMPT TRAP CHECK

A preempt trap happens when the track clearance phase ends before the active railroad grade crossing warning lights start to flash or the gates start to descend. Vehicles may cross or stop in the crossing after the end of the track clearance phase without the opportunity to clear before a train arrives. Variable actual warning time or insufficient track clearance green interval cause preempt traps.

A preempt trap can be checked using the following procedures.

Request the advance preemption time from the railroad.

Use the actual value provided by the railroad. If no advance preemption time is provided, you can use a value of 0 seconds.

Determine a multiplier for maximum advance preemption time due to train handling.

Use field measurements. Divide the longest advance preemption time observed by the advance preemption time provided by the railroad.

If no field observations are available or the advance preemption time is not provided, the multiplier for maximum advance preemption time can be estimated as 1.60 if warning time variability is high or 1.25 if warning time variability is low. High warning time variability is typical in the vicinity of switching yards, branch lines, or anywhere low-speed switching maneuvers take place.

Calculate maximum advance preemption time.

Multiply advance preemption time by the multiplier for maximum advance preemption time.

Calculate the minimum duration for the track clearance green interval.

Subtract the minimum time for a flashing-light signal before the arrival of any train from the minimum time between the gate arm reaching its horizontal position and the arrival of a train.

Calculate the time for gates down after start of preemption.

Add the maximum advance preemption time to the minimum duration for the track clearance green interval.

Calculate the minimum right-of-way transfer time.

Add preempt verification and response time with best-case conflicting vehicle or pedestrian time. The best-case conflicting vehicle or pedestrian time is usually 0 seconds.

Calculate the minimum track clearance green interval.

Subtract the minimum right-of-way transfer time from the time for gates down after preemption begins. The minimum track clearance green interval has to be as long as it takes for a car to clear the tracks after the gates are lowered to avoid a preempt trap.


If the actual track clearance green interval is shorter than the minimum track clearance green interval, a preempt trap will occur.

3.8.6 VEHICLE-GATE INTERACTION CHECK

Even if there is sufficient warning time and the preempt trap has been addressed, the automatic gates may still descend on slow-moving or stationary vehicles, causing panic, confusion, or other unsafe actions from drivers.

Long, high vehicles that accelerate slowly, such as tractor-trailers, are most exposed. The gates may “clip” the rear of the trailer as the vehicle crosses the track during the clear track phase. ***Figure 3.8-3*** shows the passing vehicle-descending gate relationship. The vehicle-gate interaction can be checked as follows:

Figure 3.8-3. Relationship between Descending Gate and Passing Vehicle

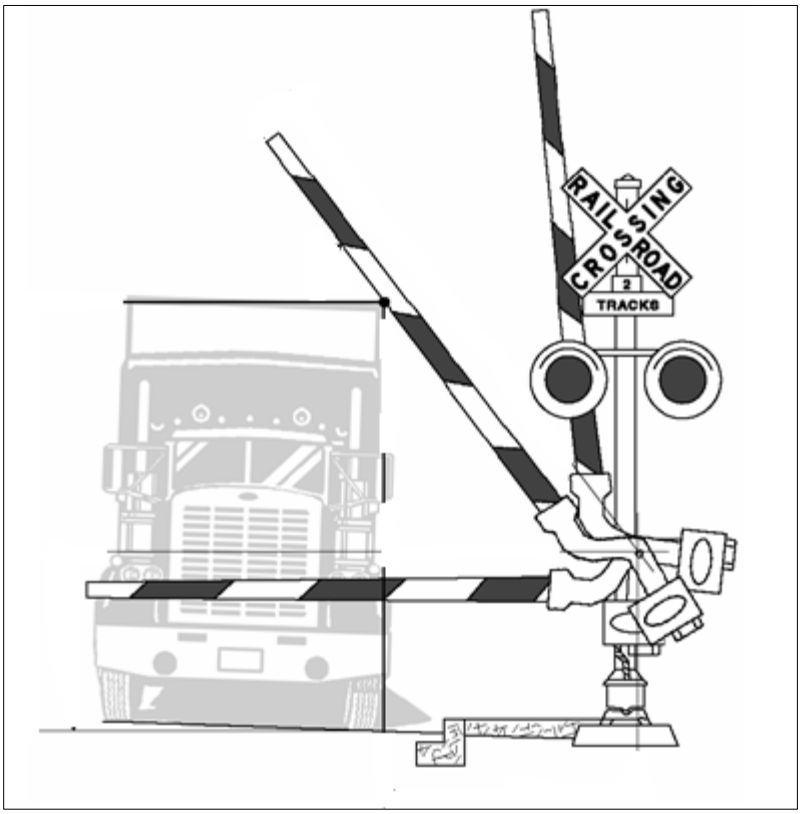

Calculate the time the design vehicle needs to clear the descending gate.

Collect the right-of-way transfer time and the time the design vehicle needs to start moving from previous steps. Calculate the time the design vehicle needs to accelerate through the design vehicle length using ***Figure 3.8-2*** and ***Table 3.8-1***.

Add the right-of-way transfer time, time the design vehicle needs to start moving, and time the design vehicle needs to accelerate through the minimum track clearance distance.

Collect the flashing light duration before the gate starts to descend.

This value typically ranges from 3 to 5 seconds and must be obtained from the railroad. The railroad's value may be verified through field observations.

Calculate non-interaction gate descent time.


Step 1: Collect the full gate descent time from the railroad.

The value obtained from the railroad may be verified through field observations. In the case where multiple gates descend at different speeds, use the descent time of the gate that reaches the horizontal position first.

Step 2: Determine the proportion of non-interaction gate descent time.

Select the distance from the center of the gate mechanism to the nearest side of the design vehicle, *d*, on the vertical axis of ***Figure 3.8-4***, draw a horizontal line until you reach the curve that represents the design vehicle (*h* is the vehicle height). Next, draw a vertical line down to the horizontal axis and read off the value of the proportion of non-interaction gate descent time.

Figure 3.8-4. Proportion of Gate Descent Time Available

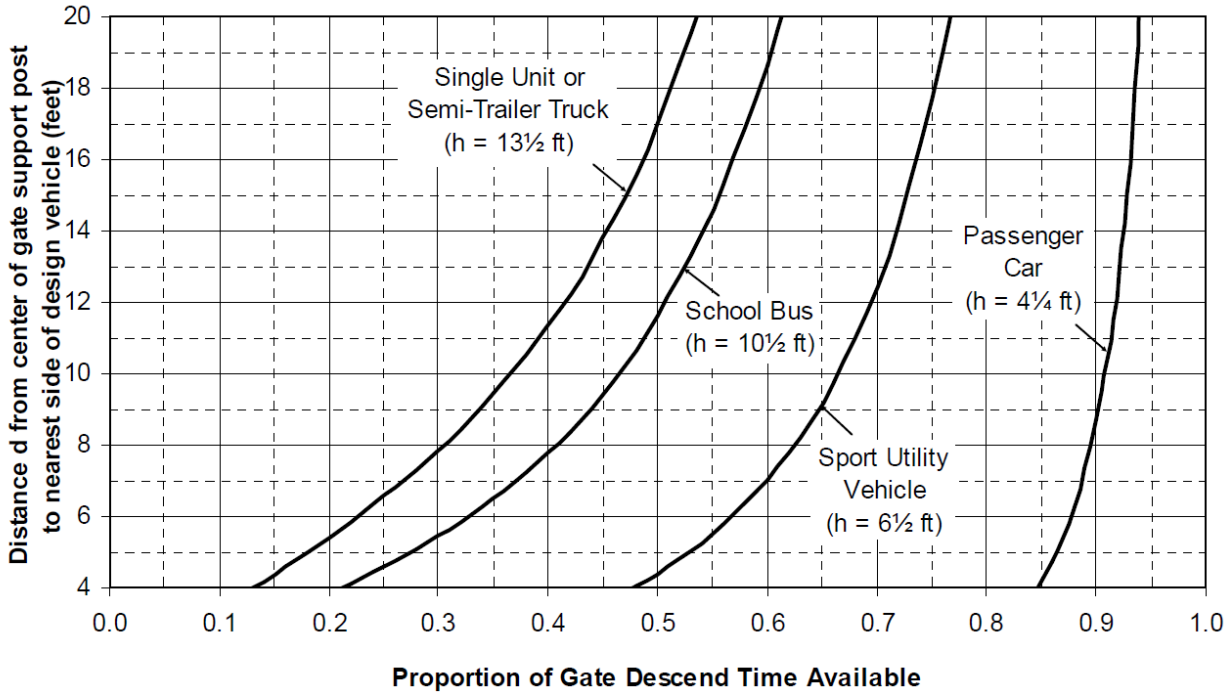

Step 3: Calculate the non-interaction gate descent time.

Multiply the full gate descent time with the proportion of non-interaction gate descent time.

Calculate time available for the design vehicle to clear the descending gate.

Add the duration of flashing lights before gate descent starts with the non-interaction gate descent time.

Vehicle-gate interaction check.

Compare the time the design vehicle needs to clear the descending gate with the time available.


If the time available is greater than or equal to the time needed, there will be no vehicle-gate interaction.

If the time available is less than the time needed, provide advance preemption time to avoid vehicle-gate interaction.

3.8.7 EXAMPLE

This example illustrates the step-by-step procedure for calculating the preemption time for a highway-rail grade crossing. The crossing shown in ***Figure 3.8-5*** is within 200 feet of an existing signalized intersection and requires a preemption phase.

Figure 3.8-5. Intersection for Preemption Time Calculation

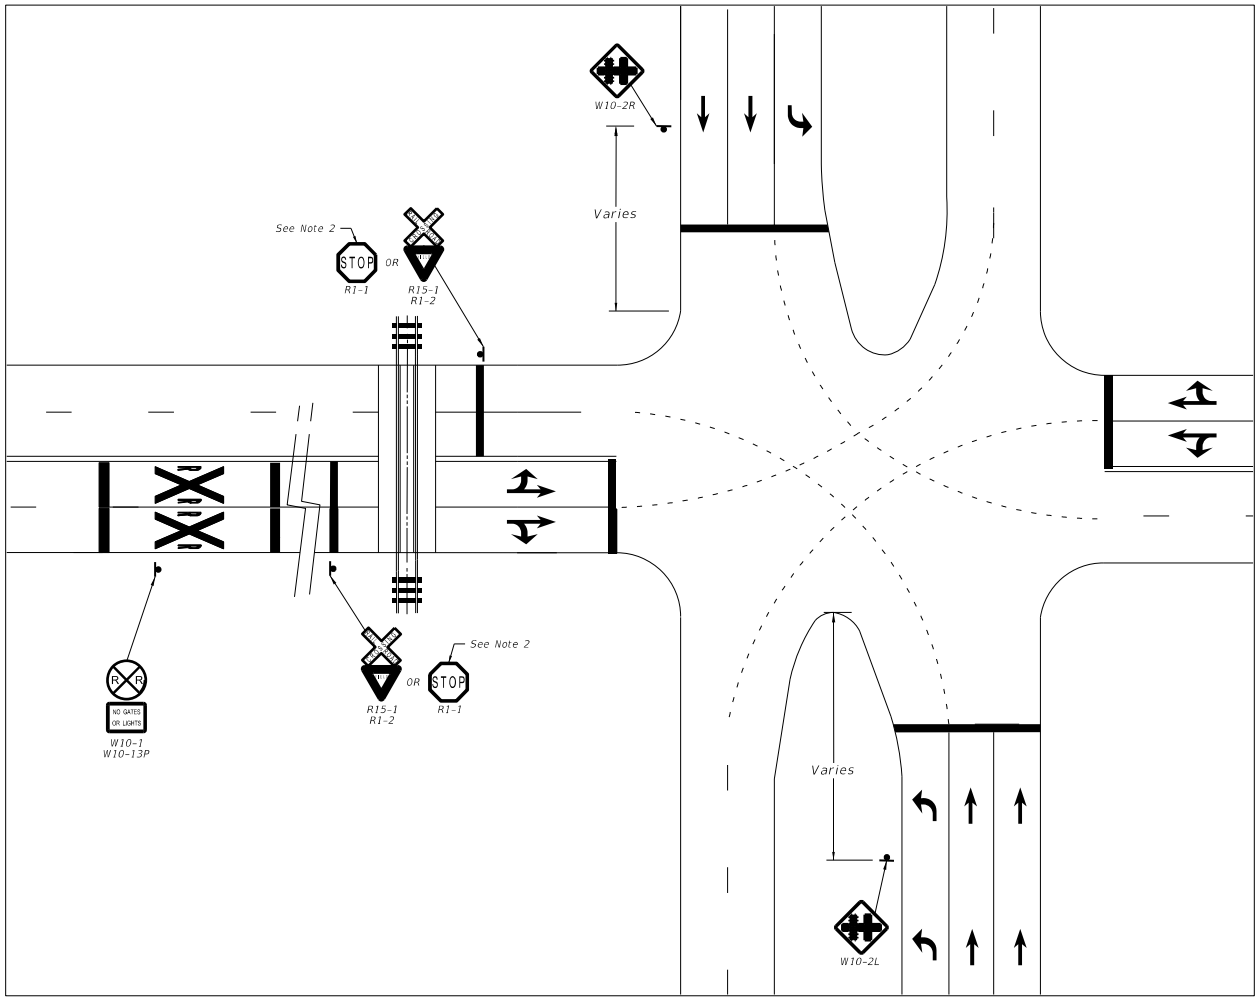

Calculate the Right-of-Way Transfer Time

Step 1: Calculate the preempt verification and response time.

The preempt delay time is 0 seconds. The controller response time to preempt provided by the controller manufacturer is 0 seconds. The preempt verification

and response time is 0 seconds, which is calculated by adding the preempt delay time and controller response time.

Step 2: Calculate the worst-case conflicting vehicle time.

The worst-case conflicting vehicle phase number is *Phase 8* for this intersection. The minimum green time during right-of-way transfer is 5 seconds. The other green time during right-of-way transfer is 1 second. The yellow change time for *Phase 8* is 4 seconds, and the red clearance time for *Phase 8* is 1 second. The worst-case conflicting vehicle time is 11 seconds.

Step 3: Calculate the worst-case conflicting pedestrian time.

The worst-case conflicting pedestrian phase number is *Phase 8* for this intersection. The minimum walk time during right-of-way transfer is 5 seconds. The pedestrian clearance time during right-of-way transfer is 0 seconds. The vehicle yellow change time is 4 seconds, and the vehicle red clearance time is 1 second. The worst-case conflicting pedestrian time is 10 seconds.

Step 4: Determine the worst-case conflicting vehicle or pedestrian time.

The worst-case conflicting vehicle or pedestrian time is 11 seconds based on results from **Steps 2** and **3**.

Step 5: Calculate the right-of-way transfer time.

The right-of-way transfer time is 11 seconds based on results from **Steps 1** and **4**.

Calculate the queue clearance time.

Step 1: Determine the queue start-up distance.

The measured clearance storage distance is 54 feet. The measured minimum track clearance distance is 55 feet. The queue start-up distance is 109 feet.

Step 2: Calculate the time the design vehicle needs to start moving.

$$2+109\div20=8 \text{ seconds}$$


Step 3: Determine the design vehicle clearance distance.

The minimum track clearance distance is 55 feet, and the design vehicle length is 48 feet. The design vehicle clearance distance is 103 feet based on the minimum track clearance distance and design vehicle length.

Step 4: Calculate the time the design vehicle needs to accelerate through the design vehicle clearance distance on level terrain.

The design vehicle is WB-50 & WB-67. The time the design vehicle needs to accelerate through the design vehicle clearance distance on level terrain is 14 seconds, based on ***Figure 3.8-6***.

Figure 3.8-6. Calculation of Time for Design Vehicle to Accelerate through the Design Vehicle Clearance Distance on Level Terrain

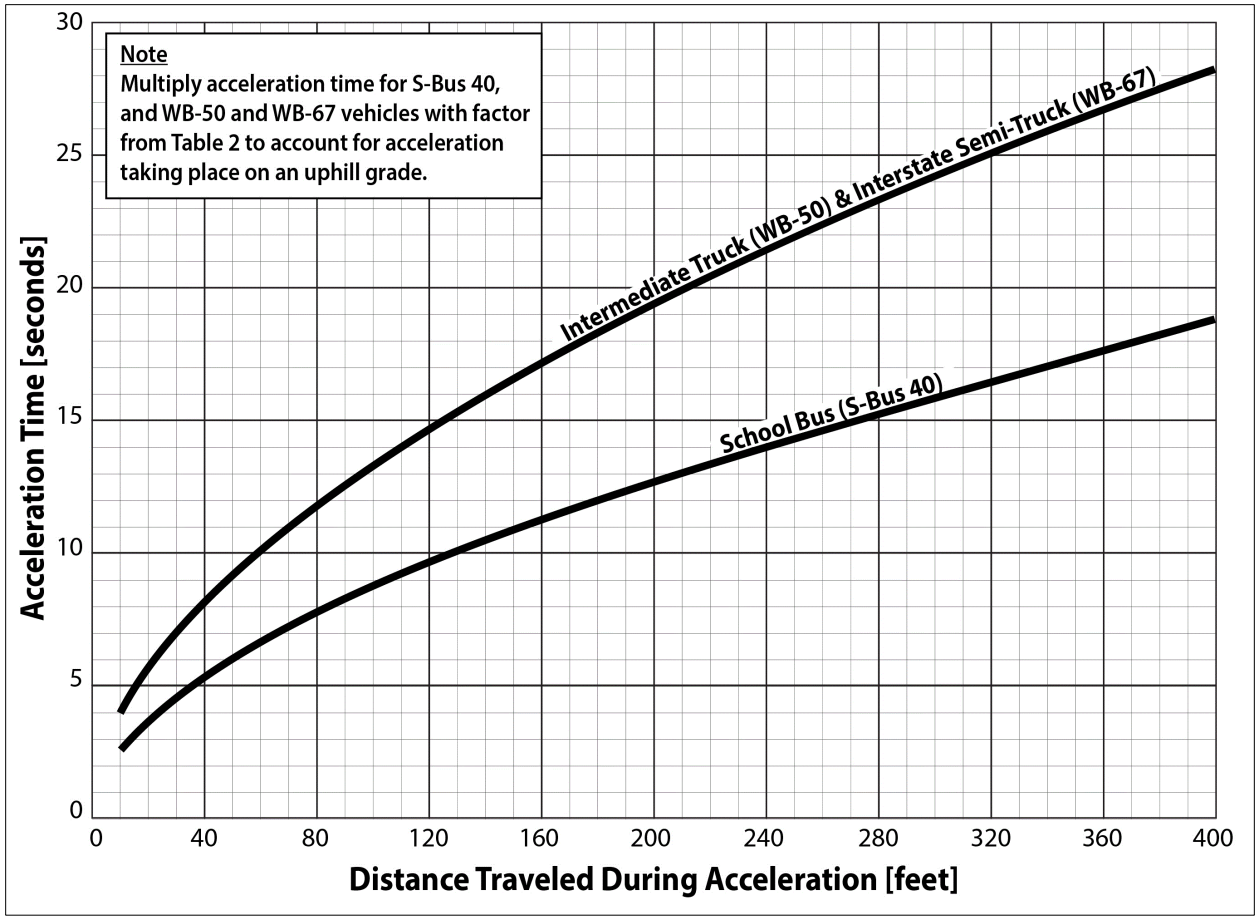

Step 5: Calculate the time the design vehicle needs to accelerate through the design vehicle clearance distance on an uphill grade.

The terrain for the selected intersection is level, so there is no need to calculate acceleration time for an uphill grade.

Step 6: Calculate the queue clearance time.

The time the design vehicle needs to start moving (**Step 2**) is 8 seconds, and the time it needs to accelerate through the design vehicle clearance distance on level terrain (**Step 4**) is 14 seconds. The queue clearance time is 22 seconds based on results in **Steps 2** and **4**.

Select the desired minimum separation time.

The minimum separation time is 4 seconds, based on ITE's recommendation.

Calculate the maximum preemption time.

The right-of-way transfer time is 11 seconds. The queue clearance time is 22 seconds. The desired minimum separation time is 4 seconds. The maximum preemption time is 37 seconds.

The final calculated maximum preemption time is 37 seconds for this intersection.

Section 3.9
INSTALLING RETROREFLECTIVE SIGNAL BACKPLATES ON EXISTING STRUCTURES

3.9.1 PURPOSE

This section describes how to retrofit existing signal structures on the State Highway System with retroreflective signal backplates. Follow the guidelines in this section for installing flexible retroreflective backplates (FRBs) and rigid retroreflective backplates (RRBs) on existing mast arm and span wire structures at signalized intersections without backplates.

3.9.2 BACKGROUND

Rigid and flexible retroreflective signal backplates improve the contrast between the traffic signal indications and their surroundings, making them easier to see during both day and night conditions and during power outages.

Installing retroreflective signal backplates can enhance safety at intersections. This countermeasure has a crash modification factor in FHWA's ***Crash Modification Factor (CMF) Clearinghouse***.

Include rigid retroreflective backplates on all new or reconstructed traffic signal structures.

Some existing signal support structures have unknown structural capacity limits, and retrofitting their signal heads with rigid retroreflective backplates would require structural analysis. Research and structural evaluations using FRBs have shown negligible wind-loading impacts to mast arm and span wire support structures, making them suitable for signal retrofits.

3.9.3 DEFINITIONS

Flexible Retroreflective Backplate (FRB): A signal backplate that allows portions of the panels to fold back when subjected to high winds and return to their original position when the wind subsides.

Mast Arm: A structure that is rigidly attached to a vertical pole and used to provide overhead support for highway traffic signal faces or grade crossing signal units.

Rigid Retroreflective Backplate (RRB): A signal backplate that remains fixed in one position when subjected to wind loading.

Signal Face: An assembly of one or more signal sections that controls traffic movements on a single approach.

Signal Head: An assembly of one or more signal faces that controls traffic movements on one or more approaches.

3.9.4 PROCEDURE

For existing mast arm and span wire structures, the use of FRBs listed on FDOT's ***Approved Product List (APL)*** is exempt from the ***FDM 261*** structural capacity analysis requirements. This exemption applies only when the elements to be added to an existing signal structure are FRBs.

The ***District Traffic Operations Offices*** track and document locations and implementation dates within the signalized assets by district found in ***eTraffic*****.**

All other signal hardware, features, and attachments proposed for retrofitting existing traffic signal structures must undergo structural analysis in accordance with ***FDM 261*** to determine if structural capacity is adequate. These include, but are not limited to:

- Rigid retroreflective backplates
- Signal heads
- Overhead street name signs
- Static signs
- Blank-out signs

Perform any required structural analysis of existing traffic signal structures in accordance with ***FDM 261***. Refer to FDOT's ***Structures Manual, Volume 3, Section 18*** for additional information regarding the analysis of existing structures.

SECTION 3.10
FLASHING YELLOW AND RED ARROW SIGNAL APPLICATION

3.10.1 PURPOSE

This section provides criteria, guidelines, and best practices for installing and operating flashing yellow arrow (FYA) and flashing red arrow (FRA) signals as directed by ***MUTCD Section 4F.04*** and ***Section 4F.08***.

3.10.2 BACKGROUND

For many years, engineers have been concerned that drivers turning left on a permissive circular green signal will mistakenly believe they have the right-of-way over opposing traffic. Geometric conditions can contribute to this impression.

FYA and FRA have been used to mitigate the “yellow trap” condition, where a left-turning driver completes their turn on a yellow, assuming oncoming traffic also has a yellow.

Based on the intuitive understanding of FYA for permissive turning movements and to ensure uniformity across the state, FDOT encourages the use of FYA over FRA. Per ***MUTCD Section 4F.04***, FRA may be used during the permissive left-turn movement for unusual geometric conditions, such as wide medians with offset left-turn lanes, but only when an engineering study determines that each and every vehicle must successively come to a full stop before making a permissive left turn.

Right-turn FYA treatments may be used, according to the ***MUTCD*** and this ***TEM*** section.

In 2003, ***NCHRP*** published ***Report 493: Evaluation of Traffic Signal Displays for Protected/Permissive Left Turn Control***. Its key findings are as follows:

- The FYA is a good overall alternative to the circular green as the permissive signal display for a left-turn movement.
- Left-turn drivers are highly likely to understand and correctly respond to the FYA. The FYA has a lower fail-critical rate than the circular green signal display.
- Making the FYA display a separate signal face for the left-turn movement allows more versatility in field application. It can be operated in any of the various modes of left-turn operation by time of day and is easily programmed to avoid the yellow trap associated with some permissive turns at the end of the circular green signal display.

FHWA's ***Crash Modification Factor (CMF) Clearinghouse*** reports a CMF for the installation of left-turn FYA signals and supplemental traffic signs.

3.10.3 OPERATIONAL REQUIREMENTS

The following design and operational requirements apply, according to ***MUTCD Section 4F.07***, when a separate left-turn signal phase operates in a protected/permissive left-turn mode, and a flashing left-turn yellow arrow signal is provided.

Left-Turn Operation Mode(s):

The FYA signal may be displayed to indicate a permissive left-turn movement in either protected/permissive or permissive-only modes.

Engineers may vary the left-turn operation mode (i.e., permissive-only, protected-only, or protected/permissive) during different periods of the day when the following conditions apply:

- The calculated critical gap is a minimum of 7 seconds during non-peak hours. FDOT's ***Manual on Uniform Traffic Studies (MUTS)*** provides additional guidance on conducting vehicular critical gap studies.
- Fewer than 240 vehicles turn left per hour, or the product of left-turning vehicles and opposing through vehicles is fewer than 50,000 (one opposing through lane) or 100,000 (two or three opposing through lanes). Product is defined as the multiplication of one hour of left-turning volume times the corresponding opposing through hourly volume.
- There are no fatalities and two or fewer left-turn crashes per year attributed to permissive left-turning movements.

Signal Head Arrangement: Provide at least one separate four-section signal head for the left-turn movement in addition to the minimum of two signal heads for other traffic on the approach. The signal face must be able to display, from top to bottom (or left to right), a steady left-turn red arrow, steady left-turn yellow arrow, flashing left-turn yellow arrow, and steady left-turn green arrow.

Signal Head Location: In an exclusive left-turn lane, center the signal head over the lane or its extension.

Signal Displays: Signal displays must meet the following requirements:

- Display the following signal heads: Steady left-turn red arrow, steady left-turn yellow arrow, flashing left-turn yellow arrow, and left-turn green arrow. Display only one of the four indications at any given time.
- During the protected left-turn movement, display a left-turn green arrow signal.
- Display a steady left-turn yellow arrow signal following the left-turn green arrow signal.
- During the permissive left-turn movement, display a flashing left-turn yellow arrow signal.
- Display a steady left-turn yellow arrow signal after the flashing left-turn yellow arrow signal if the permissive left-turn movement is ending, and the separate left-turn signal head will subsequently display a steady left-turn red arrow indication. At locations where a history of drivers failing to yield to pedestrians during permissive left-turn phases has been documented, the following countermeasures may be implemented:
  - Omit the FYA when the pedestrian phase is actuated.
  - Implement leading pedestrian interval (LPI) in accordance with ***TEM 3.11***.
- The engineer may choose to display a flashing left-turn yellow arrow signal for a permissive left-turn movement while the signal heads for the adjacent through movement display steady circular red indications, and the opposing left-turn signal heads display left-turn green arrow signals for a protected left-turn movement.
- Before the FYA begins, provide a start-up delay (2 seconds) for all opposing through movements to establish position in the intersection.
- When changing phase from a permissive left-turn movement to a protected left-turn movement, display a left-turn green arrow signal immediately after the flashing left-turn yellow arrow indication. Do not display a steady left-turn yellow arrow signal between the display of the flashing left-turn yellow and the display of the steady left-turn green arrow indications. See ***TEM 3.10.4*** for further guidance.
- During steady mode (stop-and-go), the signal section that displays the steady left-turn yellow arrow signal during change intervals must not be used to display the flashing left-turn yellow arrow signal for permissive left turns.
- During flashing mode operation where a four-section signal face is used, display a flashing left-turn yellow arrow signal only from the signal section that displays a steady left-turn yellow arrow signal during steady mode (stop-and-go) (see ***MUTCD Section 4G.03***).

- Use a four-section signal head unless constrained by height or loading capacity limitations, or lateral positioning limitations for a horizontally mounted signal head. In constrained conditions, the engineer may use a three-section signal head with a green arrow for the protected left-turn movement and a yellow arrow for the steady or flashing indications. The DTOE must approve installation of three-section FYA signal heads.


Yellow Trap: FYA can be used to mitigate yellow-trap concerns associated with permissive left-turn operations by providing a separate permissive indication for the left-turn movement. The signal timing sequence may allow the permissive left-turn movement (solid green) to continue operating with a flashing yellow arrow until the opposing through movement ends, even if the adjacent through phase has ended. However, the use of FYA alone does not eliminate the need to evaluate signal sequencing for potential yellow-trap conditions.

When implementing FYA, review all potential sequencing combinations to determine if a yellow trap could occur. Include those that skip phases due to lack of demand and special patterns such as preemption. If a yellow trap appears possible, modify the sequencing and controller programming parameters as necessary to eliminate it. The design engineer has primary responsibility for including adequate information in design plans for others who may establish sequences and program controllers.


For a protected/permissive left-turn mode with FYA, the signal faces' typical position and arrangements are shown in ***Figure 3.10-1*** (***MUTCD Figure 4F-7*** excerpt).

Figure 3.10-1. Flashing Yellow Arrow for Protected/Permissive Left-Turn Mode

A – Typical Position

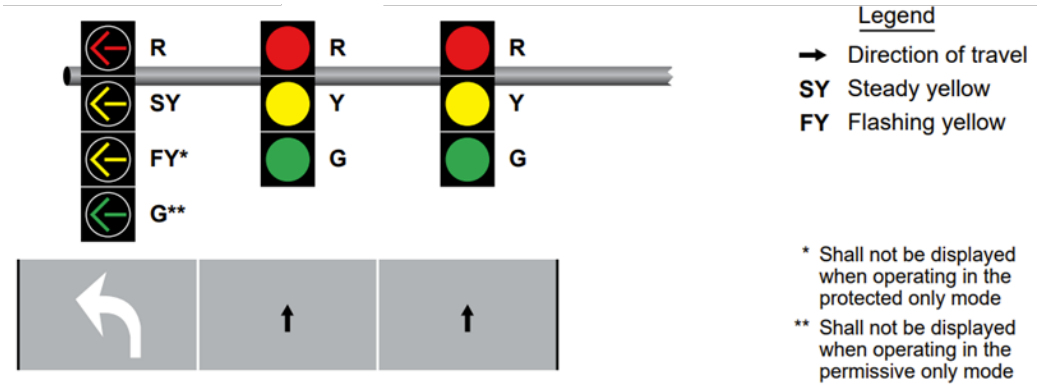

B – Typical Arrangements

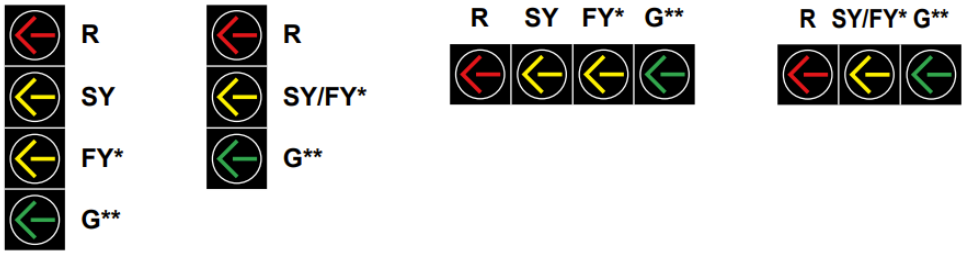

Installation Guide:

The FYA is an option for permissive/protected left-turn phasing. However, as with protected/permissive operations in general, careful consideration is needed when deciding where to install the FYA.

It is recommended that districts obtain local maintaining agencies' agreement before recommending and installing FYA at a signalized intersection.

To ensure statewide consistency for FYA installation:

- Consider and prioritize four-section FYA signal displays for new signal installations and candidate retrofit locations that meet the following criteria:
    - Corridors where changing to lead/lag from lead/lead left-turn phasing would improve progression.
    - Locations where left-turn demand is low during off-peak periods and variable modes of left-turn phasing will improve safety and operations.
- Center the signal display for the left-turn movement over the corresponding exclusive left-turn lane for new and retrofitted FYA installations.
- For locations with high populations of people 65 years or older or intersections in a ***Safe Mobility for Life Priority County***, conduct an intersection operations and crash history evaluation before implementing FYA.
- The supplemental *LEFT-TURN YIELD ON FLASHING YELLOW ARROW* sign (***R10-12a***) may be used to educate motorists about FYA operations.
- If the structural loading capacity meets the minimum requirements to withstand the wind loading under FDOT's established design criteria, engineers may install the supplemental *LEFT TURN YIELD ON FLASHING YELLOW ARROW* sign (***R10-12a***). See ***TEM 3.10.4*** for additional guidance on loading.
- If using FYA for permissive-only, protected/permissive, or permissive/prohibited phasing, consider time-of-day applications.
- When recommending replacing a five-section signal head with a four-section FYA signal head for the left-turn lane and a three-section signal head for the inside through lane, the engineer must confirm FDOT's structural loading capacity requirements are met.
- Avoid FYA installation under the following conditions:
    - Crash patterns involve left-turning vehicles and could be attributed to drivers' misunderstanding of shared signal indications.
    - Frequent railroad or emergency vehicle preemption activations happen, resulting in a higher risk of a left-turn trap condition.

3.10.3.1 Flashing Yellow Arrow Engineering Study

Conduct an engineering study at existing or proposed signalized intersections without FYA when all the following conditions exist:

- Before the scoping of a project involving signalized intersection improvements.
  - Including but not limited to Resurfacing, Restoration, and Rehabilitation (RRR), capacity, and traffic operations improvement projects.
- The context classification is C3C, C3R, or C4.
- The posted speed limit is 40 mph or 45 mph.
- Left-turning traffic crosses one or two opposing through lanes.

In the engineering study, analyze the use of left-turn FYA signal displays for permissive-only, protected/permissive, or variable left-turn operations mode with FYA during different periods of the day. Additionally, analyze the feasibility of the improvements with the existing infrastructure (e.g, signal support structures, turn lane capacity, signal cabinet, signal controller). The feasibility analysis may include a structural capacity analysis as directed by ***FDM 261***.

Implement the improvements identified in the study when determined to be feasible with the existing support infrastructure and appropriate by the Engineer of Record. In RRR and capacity projects, if the use of FYA is found to be infeasible with existing infrastructure, consider including infrastructure changes in the project scope to allow for the use of FYA.

3.10.4 INSTALLATION CRITERIA

Unless required from the engineering study in ***TEM 3.10.3.1***, FYA may be considered under the following characteristics:

- FYA installation is facilitated by intersection geometry and traffic operations characteristics, including:
  - Opposing left-turn paths that do not conflict.
  - Available sight distance greater than the required sight distance based on approach speeds and left-turn lane offset conditions.
  - The approach has only one left-turn bay.
  - The opposing traffic speed limit is 45 mph or lower.
  - There are one or two opposing through lanes. Engineers may consider intersections with three opposing through lanes on a case-by-case basis, supported by an engineering study. Review ***TEM Section 3.2.3*** for signal phasing considerations.
- The intersection has a protected/permissive mode, and less than three left-turn-related crashes per year have been recorded over a three-year period, which may have been avoided with protected-only phasing.

- Fewer than 240 vehicles turn left per hour, or the product of left-turning vehicles and opposing through vehicles is fewer than 50,000 (one opposing through lane) or 100,000 (two or three opposing through lanes). The product is defined as the multiplication of one hour of left-turning volume times the corresponding opposing through hourly volume.
- Signal coordination plans indicate operations improved with the installation of FYA permissive-protected operation based on volume criteria and crash patterns during peak periods.

Using a consistent left-turn treatment along a corridor makes it easier for drivers to navigate, but it may not be practical due to potential implementation costs . FYA left-turn protected/permissive mode often requires installing an additional left-turn signal head and could require a mast arm replacement (e.g., wind loading requirements are not met, longer mast arms are needed). The cost of replacing signal poles to accommodate FYA can be prohibitive.

Some FYA implementations have resulted in a mix of FYA and five-section circular green display protected/permissive operation. In these cases, FDOT recommends installing FYA at any new signalized intersection on the corridor that meets the criteria for protected/permissive left-turn mode operation without immediately modifying the other intersections along the corridor. Avoid installing FYA at intersections that are within view of other intersections with the five-section circular green display.

At locations with a protected-only mode, consider using FYA protected/permissive mode only after conducting an intersection engineering study. Do not remove protected-only left-turn phasing if opposing sight distance is inadequate for permissive left turns, high operating speeds are reported, roadway geometry is complicated, or there are too many opposing through lanes. For more information on sight distance, refer to the ***FDM 212***.

3.10.5 VARIABLE MODE

Variable mode operation—changing between protected-only and protected/permissive mode or between protected/permissive and permissive-only mode by time of day—is possible with the four-section FYA signal head. It can be applied where an engineering study shows this type of operation can improve safety and operations. It is important to ensure the traffic signal controller can switch between modes so the flashing yellow arrow indication and the opposing through movement indication terminate together.

When switching between protected/permissive and permissive-only, ensure that the controller can reassign the left-turn detectors to call the associated through phases by time of day.

3.10.6 PUBLIC NOTIFICATION

Coordinate installation of a FYA left-turn operation with the ***District Public Information Office***. Consider issuing press releases letting the public know when they can expect to

see the new indications. Send out press releases at least two weeks before implementation.

3.10.7 EDUCATION

When implementing a new FYA installation, conduct location-specific education. Use portable changeable message signs to display the following alternating messages both before implementation (minimum one week) and after implementation (maximum six weeks):

- Phase 1: *NEW SIGNAL DISPLAY*
- Phase 2: *YIELD ON FLASHING ARROW*

FDOT has developed educational and outreach resources to support FYA implementation efforts and increase public awareness of appropriate driver responses to the signal display.

Educational materials include print and digital graphics designed to help motorists understand how to respond when encountering an FYA. These resources were developed using human factors research and plain language principles and are intended to support consistent, research-based public education and outreach efforts.

The FYA tip card (***Figure 3.10-2***) is part of the Roadway Safety Series and is designed for district staff to use during public outreach activities.

Download or order free copies of the FYA tip card from the ***Safe Mobility for Life Resource Center***, or download digital graphics from the ***Safe Mobility for Life Digital Resource Center***.

Figure 3.10-2. Flashing Yellow Arrow Tip Card



3.10.8 SIGNAL RETROFIT CHECKLIST

Use the following checklist to examine hardware conditions at an intersection before programming a FYA signal in the field. Knowing the hardware conditions makes a smooth FYA implementation more likely.

Signal Retrofit Checklist:

- Check that the mast arm is long enough to center the FYA signal head over the exclusive left-turn lane.
- Check replacement head size/mounting. Raising wire spans to install vertical four-section signal heads may be necessary to replace five-section signal heads.
- Ensure signal equipment is in working order. A malfunctioning load switch or bad load switch socket may lead to problems during FYA implementation.

- Make sure the available cables are sufficient to install FYA signals. Protected/permissive left-turn phasing often uses a circular green display for the permissive interval, which is illuminated by the same means as the green through phase. Additional cabling may be needed to control the flashing yellow display with its own circuit.


- Verify with the signal equipment manufacturer that the controller and management malfunction unit are applicable and confirm the programming method. Leading signal equipment manufacturers have developed new controller models and management malfunction units that support FYA signal operations. Controllers must have the correct firmware to enable FYA operations.

- Check if the controller cabinet needs modification. The industry has not standardized FYA controllers. Contact the manufacturer representative for information. The controller make and model will determine whether the cabinet needs modification. Make sure the management malfunction unit you select supports FYA operation. Install a management malfunction unit recommended by the controller manufacturer. Modify the cabinet flash programming.

- A *LEFT TURN YIELD ON FLASHING YELLOW ARROW* sign (***R10-12a***), shown in ***Figure 3.10-3***, can be installed adjacent to the FYA signal head to help reduce conflicts. If the FYA signal module is to be installed at a location with a five-section head, verify that the sign can be installed and remove conflicting signs, such as the *LEFT TURN YIELD ON GREEN* sign ***(R10-12)***.

    - Do NOT use other FYA signs as an alternative to ***R10-12a***, including sign variations that replace the text with symbols.

Figure 3.10-3. Flashing Yellow Arrow Sign (*R10-12a*)

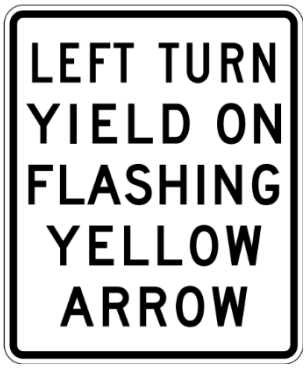

Section 3.11
SIGNAL TIMING APPLICATIONS FOR PEDESTRIAN MOVEMENTS

3.11.1 PURPOSE

This section defines signal timing applications to improve safety and enhance pedestrian mobility. It covers considerations for implementing a leading pedestrian interval (LPI), a flashing yellow arrow (FYA) omit by ped, and delayed turn applications at signalized intersections.

3.11.2 BACKGROUND

Signal timing features are used to make traffic easier to see and enhance pedestrian safety. ***NCHRP*** ***Report 812: Signal Timing Manual*** and ***Report 969: Traffic Signal Control Strategies for Pedestrians and Bicyclists*** highlight signal timing applications for pedestrian movements. Signal timing and signal timing adjustments are evaluated, determined, and documented by a traffic engineer.

3.11.3 DEFINITIONS

Concurrent Yet Protected: A variation on the *Delayed Turn* timing treatment, where left and right-turning movements are not permitted during the conflicting *WALK* and *flashing DON'T WALK* intervals. This treatment requires exclusive turn lanes, signal heads, and *NO TURN ON RED* signage.

Delayed Turn: A signal controller option that releases through vehicles and pedestrians concurrently while holding turning movements with a red indication and *NO TURN ON RED* signage. This treatment requires exclusive turn lanes, signal heads, and *NO TURN ON RED* signage.

Flashing *DON'T WALK*: A warning to pedestrians that the *WALK* indication has ended and the *DON'T WALK* indication is active.

Flashing Yellow Arrow Omit by Ped (FYA Omit by Ped): A signal controller option that omits a permissive left-turn movement during the conflicting *WALK* and *flashing DON'T WALK* intervals.

Lagging Pedestrian Interval: The pedestrian *WALK* interval starts several seconds after the adjacent through movement phase. This option allows a waiting right-turn queue to clear before the *WALK* indication is presented and reduces conflicts with right-turning vehicles. It is applicable at intersections where there is either an exclusive right-turn lane (or lanes) or the two intersecting roads have one-way traffic.

Leading Pedestrian Interval (LPI): A pedestrian interval option, also known as "pedestrian head start" or "delayed vehicle green," which gives pedestrians an advance *WALK* indication before a green signal is provided to vehicles. This allows pedestrians to establish a presence in the crosswalk, reducing conflicts with turning vehicles. LPI is a proven safety countermeasure to reduce vehicle-pedestrian crashes at signalized intersections.

Pedestrian Detector Call: An input into the associated phase of the controller when a pedestrian is detected that actuates service of the pedestrian *WALK* indication.

Pedestrian Omit: A command that ignores pedestrian calls for service and prevents a pedestrian phase. This feature is a consideration at intersections with rail preemption. Activation does not affect a pedestrian movement in the process of timing.

Pedestrian Recall: This mode eliminates the need for a push button or passive detection and ensures that pedestrian *WALK* and clearance intervals are provided in each cycle.

Pedestrian Recycle: A signal controller option that allows a pedestrian phase to be served multiple times within the same vehicle phase when pedestrian demand exists and the split time remaining is greater than or equal to the time needed to serve the pedestrian phase.

- In the actuated mode, if a serviceable pedestrian call exists on the subject and the *Hold* input is active, the pedestrian movement is recycled when the *Pedestrian Recycle* input is active, regardless of whether a serviceable conflicting call exists.
- In the non-actuated mode, if the subject phase has reached the *Green Dwell/Select* state, the *Pedestrian Omit* is not active on the phase, and a serviceable conflicting call does not exist, the pedestrian movement is recycled when the *Pedestrian Recycle* input is active.

Pedestrian Scramble/Barnes Dance: An exclusive pedestrian phase with no concurring vehicular movement in any direction. Pedestrians may cross all intersection legs or cross diagonally. Walking time is extended for diagonal movement. Ped heads, accessible pedestrian signals, and pavement markings indicate pedestrians may cross diagonally.

Pedestrian Walk Interval: A signal providing initial right-of-way to pedestrians during a pedestrian phase and prior to the pedestrian clearance interval.

Rest in Walk: The pedestrian phase is set to rest in the *WALK* interval to maximize the *WALK* display during a vehicle green. This pertains to whether the *WALK* signal is initially activated by the pedestrian push button, passive pedestrian detection, or automatic pedestrian recall. The flashing *DON'T WALK* interval times prior to the yield point.

Walk Rest Modifier: When activated, it modifies non-actuated operation only. Upon activation, the non-actuated phase(s) remain in the timed-out *WALK* state (*Rest In Walk*) in the absence of a serviceable conflicting call, regardless of the *Hold* input status. With the input inactive, non-actuated phase(s) do not remain in the timed-out *WALK* state unless the *Hold* input is active. The controller recycles the pedestrian movement when reaching the *Green Dwell/Select* state in the absence of a serviceable conflicting call.

3.11.4 ENGINEERING STUDY

Conduct an engineering study at signalized intersections with marked crosswalks without LPI when all the following conditions exist:

- Before the scoping of a project involving signalized intersection improvements.
    - Including but not limited to Resurfacing, Restoration, and Rehabilitation (RRR), capacity, and traffic operations improvement projects (e.g., signal retiming activities).
- The context classification is C3C, C3R, or C4.
- The posted speed limit is 35 mph to 45 mph.

In the engineering study, analyze the use of LPIs at individual approaches or signalized marked crosswalks. Additionally, analyze the feasibility of the improvements, including operational impacts to signal timing, coordination, and existing signal infrastructure.

Implement the improvements identified in the study when determined to be feasible and appropriate by the Engineer of Record.

3.11.5 LPI CONSIDERATIONS

To reduce wait times and increase compliance with pedestrian signals, avoid lengthy traffic signal cycles. Consider automatic pedestrian recall that allows vehicles at least the same amount of time as the sum of the *WALK* and flashing *DON'T WALK* intervals.

Comply with ***MUTCD Section 4I.06*** when considering LPI signal applications.

Review all new signalized intersections and existing intersections as timing changes are made for LPI implementation. See ***TEM 3.11.5.1*** for considerations that indicate an LPI may be appropriate.

LPI implementation is at the discretion of the ***DTOE***. Document the LPI implementation decision process in the project file as an email or technical memorandum.

3.11.5.1 LPI LOCATION SCREENING CONSIDERATIONS

LPIs are generally used for pedestrian phases timed concurrently with a conflicting right turn. Research has demonstrated that LPIs can be beneficial at intersections with pedestrian activity.

The following conditions indicate an LPI may improve conditions for pedestrians. LPI may be considered for implementation under the following conditions:

- Field observations, citizen complaints, crash history, near misses, or risk analysis indicate conflicts between turning vehicles on green and pedestrians.
- Marked school crossings.
- Drivers' view of pedestrians is blocked due to obstructions or poor sight distance. At a minimum, consider the following:
  - Intersection geometry that obscures pedestrians from motorists or vice versa.
  - Lighting problems that cannot be adequately addressed through standard lighting requirements.
  - Sun angle that blocks drivers' view at certain times of day or times of the year.
- Approaches where the time needed to serve vehicular demand is less than the associated *WALK* and flashing *DON'T WALK* intervals.

Consider the following at intersections with low to medium pedestrian volumes:

- LPIs can improve pedestrian conspicuity within the crosswalk where drivers may be less likely to expect pedestrian activity.
- At crosswalks with actuated pedestrian phases, LPIs can provide pedestrian safety benefits when pedestrians are present without introducing additional delay during cycles when no pedestrian call is received.

Consider the following points at intersections with low to medium pedestrian volumes:

- LPIs can increase visibility in areas where pedestrian volume is low, and drivers may not expect to see them.
- Where the pedestrian phase is actuated, LPIs can benefit pedestrians when they are present without timing every cycle.
- Combining LPI with automatic pedestrian recall for low pedestrian volume phases may increase vehicular impacts of the LPI with limited added benefit for pedestrians.
- With medium pedestrian volume (particularly on corridors with more signals), actuated LPIs delay vehicular traffic as progression is lost. Implementing automatic pedestrian recall with an LPI in these cases can generally recover the vehicle delay, as it is often not caused by capacity constraints but by lack of progression.

Consider the following points at high pedestrian volume intersections:

- Vehicular impacts of LPIs may be lower where a high volume of crossing pedestrians may inhibit right-turn movements.

- LPIs may not provide the desired level of protection at very high-volume pedestrian crossing locations. A pedestrian scramble may be more appropriate where any of the following conditions exist:
  - Very high volume of pedestrian crossings.
  - High volume of right turns.
  - High demand for diagonal pedestrian crossings.

3.11.5.2 LPI IMPLEMENTATION CONSIDERATIONS

Most modern controllers support LPI natively. At intersections where the controller does not support LPI programming, consider replacing the controller. For information on how to program an LPI, refer to FDOT's ***Leading Pedestrian Interval Programming Primer***.

Set LPI timing to allow pedestrians to clear at least the width of one lane in the direction of moving traffic, including the width of a parking and bicycle lane, to increase pedestrians' visibility to turning traffic. A minimum 3-second LPI duration is required by the ***MUTCD***.

A maximum LPI duration limits drivers' tendency to disobey the signal.

- With an actuated pedestrian phase, the optimal maximum LPI duration is 10 seconds. If more time is needed, either based on Formula 3.11.5.2-1 or due to sight distance concerns, consider geometry updates such as curb bulb-outs to shorten the distance pedestrians need to cross to get through one through lane. Alternatively, consider using an exclusive pedestrian phase or concurrent yet protected signal timing if site conditions allow.
- With a pedestrian phase on automatic recall, the maximum LPI time is 7 seconds.

Consider a 3-second LPI duration when an intersection operates close to capacity.

Use ***Formula 3.11.5.2-1*** to calculate the LPI duration for each crosswalk:

Formula 3.11.5.2-1

$$LPI = \frac{ML + B}{W} + PS$$

Where:

LPI = Number of seconds rounded up to the nearest interval allowed by the controller between the onset of the *WALK* signal for pedestrians and the green indication for vehicles.

ML = Distance on the crosswalk to clear the width of one through lane from the edge of the curb, in feet. Consider large corner radii as per ***MUTCD Section 4I.06 (22)***.

B = Distance from the pedestrian detector location to the edge of curb, in feet. Use 6 feet if no pedestrian detector is present. This measures the distance a pedestrian travels to arrive at the curb.

W = Walking speed (3.5 ft/s for pedestrian clearance interval calculation suggested by the ***MUTCD***). The ***Manual on Uniform Traffic Studies (MUTS)*** provides additional guidance on conducting individual pedestrian walking speed studies.

PS = Pedestrian start-up lost time (FDOT recommends using 1.6 seconds). This term can be omitted if an accessible pedestrian signal is provided.

Consider using an accessible pedestrian signal (***MUTCD Sections 4K.01 to 4K.05***) with LPI applications, as vision-impaired pedestrians use the sound of moving traffic to decide when to start crossing. Accessible pedestrian signals alert pedestrians that the *WALK* indication has initiated. Refer to ***TEM Section 3.7*** for accessible pedestrian signal applicability and implementation.

When an LPI is used, consider concurrent turning movements across the crosswalk.

Right Turn

Use either of the following options:

- A static or dynamic *NO TURN ON RED* sign (***R10-11***) to prohibit turns on red. If using a dynamic sign, display the message during the LPI interval and the preceding yellow and red intervals.
- A shared lane with through vehicles totaling more than two-thirds of the traffic within the lane.

Protected Left Turn

Do not time LPIs concurrent with the opposing protected left-turn interval. Protected left turns may be leading or lagging, but lagging the opposing left-turn movement is preferred to reduce pedestrian conflicts with late-turning vehicles.

For opposing leading left-turn movement, time the LPIs after the opposing protected left-turn movement and before the green through vehicle interval. For opposing lagging left-turn movement, time the LPIs before the green interval for through-vehicle movements.

Protected/Permissive Left Turn

Do not time LPIs concurrent with the opposing protected left-turn interval. Protected/permissive left turns may be leading or lagging. Lagging the opposing left-turn movement is preferred to reduce pedestrian conflicts with late-turning vehicles.


Time the pedestrian phases with LPIs concurrently unless FYA signal heads are used for the conflicting left-turn movements. This prohibits permissive left-turning movements during the LPI.

Permissive Left Turn


LPIs may be implemented with permissive left turns. Time the pedestrian phases with LPIs concurrently unless FYA signal heads are used for the conflicting left-turn movements. This prohibits permissive left-turning movements during the LPI. See ***Figure 3.11-1*** for examples.

Figure 3.11-1. Schematic Diagram for Signal Timing with LPI

A - Lead/Lead Left Turn

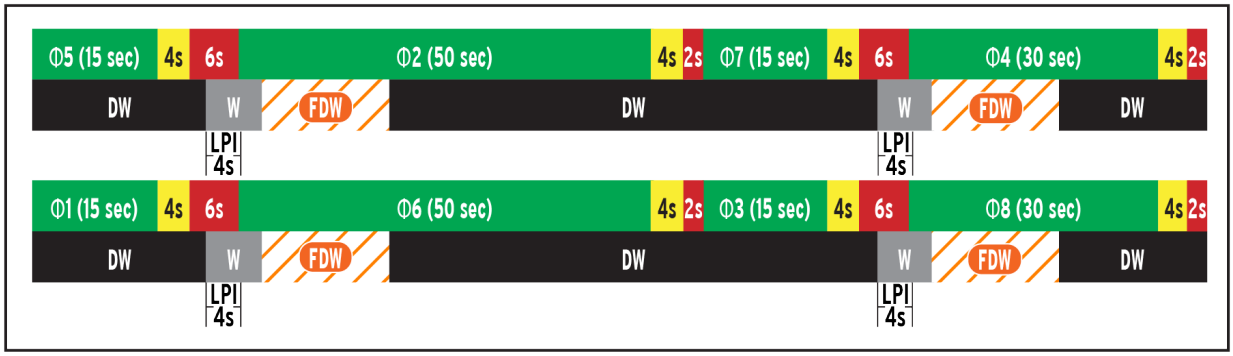

B - Lead/Lag Left Turn

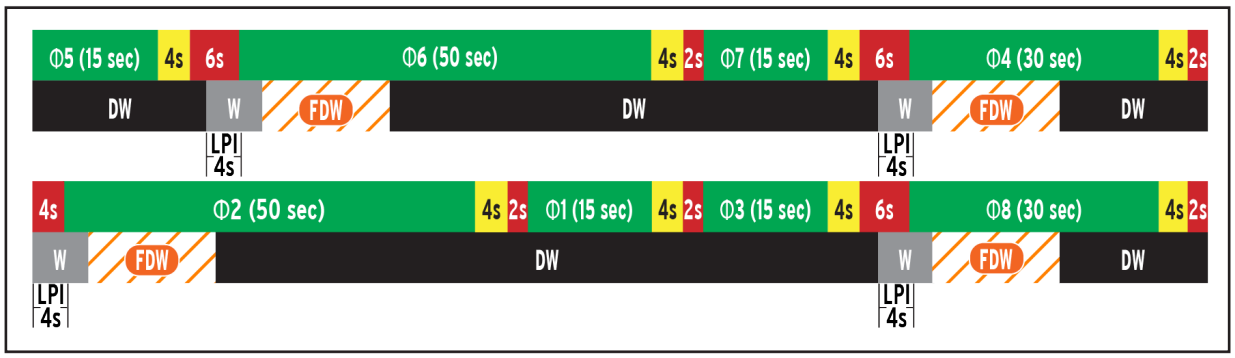



For corridors with LPIs at multiple intersections, consider using automatic pedestrian recall in conjunction with LPIs to maintain progression along the corridor.

FDOT recommends conducting field observations to evaluate improvements to safety and overall intersection operations after implementing LPI. Engineers may adjust signal timing further based on safety needs and engineering judgment.

3.11.6 FYA OMIT BY PED

Consider implementing *FYA Omit by Ped* at locations with protected/permissive signal phasing and four-section signal heads.

Engineers may program *FYA Omit by Ped* for times of day with higher pedestrian volumes that can inhibit permissive left turns. This may be useful in the following cases:

- Intersections with high permissive left-turning conflicts with pedestrians
- School arrival and dismissal periods

- Arrival and dismissal periods at event venues

Use of *Rest in Walk* is not recommended with *FYA Omit by Ped* as it results in a protected-only left-turn phase.

3.11.7 DELAYED TURN

Consider implementing *Delayed Turn* on approaches with dedicated lanes and signal heads for turning movements. This treatment also requires *NO TURN ON RED* signage. Left- and right-turn movements may be held for the duration of the *WALK* and flashing *DON'T WALK* intervals to achieve concurrent yet protected phasing. Use ***Formula 3.11.5.2-1*** and engineering judgment to calculate turning movement duration.

Section 3.12

TRAFFIC SIGNAL RETIMING

3.12.1 PURPOSE

This section provides guidance on how frequently to retime a traffic signal to reduce travel delays, crash frequency, and pollution from fuel consumption and emissions.

3.12.2 GENERAL

Signal retiming is a low-cost approach to keeping traffic moving safely and smoothly while also helping:

- Reduce traffic congestion.
- Reduce aggressive driving behavior/red light running.
- Reduce the number of fatalities and serious injury crashes.
- Reduce fuel consumption and emissions.
- Reduce the need to increase road capacity through construction.
- Reduce speeding along a corridor through context-sensitive considerations.

Retiming traffic signals every three to five years has become standard practice. Signal timing may need to be reexamined due to:

- Increased capacity or turning movements.
- Increased traffic congestion.
- More trucks as a percentage of traffic.
- Construction activities (road or development).
- New traffic signals along the corridor.

3.12.3 PROCEDURE

Signals are retimed every three to five years. Retiming occurs in cycles, where approximately 25% of signals are scheduled to be retimed each year. Traffic signals do not need be retimed every three to five years if an analysis finds the existing timing to be optimized, or that retiming would have negative safety impacts.

Signals may be retimed outside of the scheduled retiming cycle, including but not limited to the when any of the following conditions exist:

- A traffic study indicates performance loss (e.g., queues not fully discharged, spillback, unused green time).
- A traffic study finds safety benefits from retiming.
- Signal timing software finds that the existing timing may be optimized to improve performance.

SECTION 3.13
BICYCLE SIGNALS

3.13.1 PURPOSE

This section outlines criteria, guidelines, and best practices for planning, designing, and operating bicycle signals along the SHS.

3.13.2 BACKGROUND

Before 2013 and the release of MUTCD Interim Approval for Optional Use of a Bicycle Signal Face (IA-16), bicycle signals in the United States were limited to a few locations with experimental approval. Since 2013, bicycle signal applications across the United States have greatly increased as agencies have come to understand the benefits of bicycle signals.

The release of the ***MUTCD 11th Edition (Chapter 4H)*** revised and expanded the previously approved Interim Approval guidance on bicycle signals. However, due to a combination of factors such as its nationwide application and the novelty of bicycle signals, MUTCD standards and guidance on many aspects of bicycle signals, including implementation, detection, phasing, and design, are limited.

To provide more detailed bicycle signal standards and guidance, and to support Florida-specific implementation, this TEM section was developed using research and other agency resources on bicycle signals.

3.13.3 DEFINITIONS

Bicycle Green Wave: A coordinated traffic signal strategy designed to allow bicyclists traveling at a consistent speed to encounter a series of bicycle signal green lights along a corridor without stopping. This application is a viable control strategy option on a corridor with high bicycle volumes and lower vehicle volumes.

Bicycle Scramble: An exclusive bicycle phase with no concurrent vehicular movement in any direction. Bicyclists may cross all intersection legs or simultaneously in any direction. A bicycle scramble is disallowed per the ***MUTCD 4H.02 P01***.

Bicycle Signal Face: An assembly of signal indications specifically designed for bicycle movements, displaying standard bicycle signal indications (Green Bicycle, Yellow Bicycle, and Red Bicycle).

Bicycle Two-Stage Turn Queue Box: A designated area outside of the path of vehicles and other bicycles for bicyclists to queue to make a left turn at a signalized intersection.

Leading Pedestrian Interval (LPI): See ***TEM Section 3.11.3.***

Passive Bicycle Detection: A system that detects the presence and direction of a bicycle and activates the traffic control device without manual actuation. Common passive detection technologies include:

- Inductive Loop Detectors: Wire loops embedded in the pavement that detect the metal mass of a bicycle when it stops or passes over the loop.
- Video Cameras: Use image processing to detect bicyclist presence and movement within a defined detection zone.
- Radar or Microwave Sensors: Emit radio waves and detect changes in the reflected signals caused by moving or stationary bicyclists.
- Infrared Sensors: Use heat signatures or motion detection to sense the presence of bicyclists.

Signal Head: See ***TEM Section 3.9.3.***

Signal Indication: See ***TEM Section 3.1.1***.

3.13.4 BICYCLE SIGNAL LOCATION AND IMPLEMENTATION

Vehicle signals may control bicycle movements (***MUTCD 4H.01 P10***). However, when separated bicycle facilities are present, and there is a desire to separate bicycle movements from vehicle movements with different phases, implement bicycle signals in accordance with the ***MUTCD (Chapter 4H)***. The ***MUTCD 4H.01 P10*** recommends using bicycle signals only when motorized traffic and bicycles making the same movement may receive different instructions.

The subsections in this section outline recommended locations for bicycle signal implementation and vehicular turning volume thresholds for bicycle signal implementation.

3.13.4.1 Recommended Bicycle Signal Locations

Recommended locations for bicycle signal implementations are further described in the following sections and include:

- Two-Way Separated Bicycle Facility on a Two-Way Street
- Two-Way Separated Bicycle Facility on a One-Way Street
- One-Way Bicycle Lane or Separated Bicycle Facility to the Right of a Right Turn Only Lane
- One-Way Bicycle Lane or Separated Bicycle Facility to the Left of a Left Turn Only Lane on a One-Way Street
- Counter-Flow Bicycle Lane on a One-Way Street
- Shared Use Path/Trail Crossings

Please refer to ***FDM 223*** for definitions of bicycle lane, separated bicycle facilities, and shared-use paths. Do not use bicycle signals for facilities such as paved shoulders and shared lanes (with sharrows) as defined in ***FDM 223***.

Other considerations as determined by engineering judgment include sight distance issues and complex intersections.

Bicycle signals are not recommended at bicycle diagonal crossings, bicycle left turns across conflicting vehicle movements, and the connection of a one-way bicycle lane to a two-way bicycle lane (or vice-versa). These situations can be better addressed with a two-stage turn queue box.

All locations require restrictions on permissive left and/or right turns for vehicles, as well as right-turn-on-red operations, across the bicycle direction during bicycle green.

Figure 3.13-2 illustrates bicycle signals installed at a signalized intersection along a two-way street with a two-way separated bicycle facility. This location would require a no-right-turn-on-red restriction for vehicles during bicycle green.

Figure 3.13-2. Two-Way Separated Bicycle Facility on a Two-Way Street



Note: The figure illustrates a two-way separated bicycle facility on a two-way street intersecting a two-way street. The intersection shown is currently operating at red for the major and side streets while the bicycle is green. This location requires a NO RIGHT TURN ON RED (R3-1, R10-11, R10-11a, or R10-11b) blank-out sign restriction for vehicles from the major and side streets during bicycle green. Bicycles may make permissive turns and yield to pedestrians during WALK and flashing DO NOT WALK indications. Counter-flow bicycles can also make a permissive left turn while yielding to opposing bicycle traffic.

Figure 3.13-3 illustrates bicycle signals installed at a signalized intersection along a one-way street with a two-way separated bicycle facility.

Figure 3.13-3. Two-Way Separated Bicycle Facility to the left of traffic on a One-Way Street



Note: The figure illustrates a two-way separated bicycle facility on a one-way street intersecting a two-way street. The intersection shown is currently operating with green for the major street and red for the side street, while the bicycle is green. This location would require a left-turn restriction for the major street. Bicycles traveling in the same direction as the one-way street can make a permissive left turn while yielding to pedestrians during WALK and flashing DO NOT WALK indications, and during counter-flow bicycle movements. Counter-flow bicycles can make a permissive right turn while yielding to pedestrians during WALK and flashing DO NOT WALK indications.

Figure 3.13-4 depicts bicycle signals at a location where a one-way bicycle lane or separated bicycle facility is positioned to the right of a right-turn-only lane. Vehicular right turns shall not conflict with bicycle movement and require a right-turn indication and a no-right-turn-on-red restriction during bicycle green.

Figure 3.13-4. One-Way Bicycle Lane or Separated Bicycle Facility to the Right of a Right Turn Only Lane



Note: The figure illustrates a one-way bicycle lane on a two-way street intersecting a two-way street. The intersection shown is currently green for the major street and red for the side street, while the bicycle is green. The major street has an exclusive right-turn lane operating with a red arrow and a NO RIGHT TURN ON RED (R3-1, R10-11, R10-11a, or R10-11b) blank-out sign for vehicles during bicycle green. Vehicles on the side street have a NO RIGHT TURN ON RED (R3-1, R10-11, R10-11a, or R10-11b) blank-out sign for vehicles during bicycle green. Bicycles can make a protected through movement and permissive right turns and yield to pedestrians during WALK and flashing DO NOT WALK indications.

Figure 3.13-5 shows bicycle signals applied at a signalized intersection where a one-way bicycle lane or separated bicycle facility is located to the left of a left-turn-only lane on a one-way street. The vehicle left turn shall not conflict with the bicycle, and a green left-turn indication or flashing yellow arrow is not permitted during bicycle green. If the cross street is one-way, include a NO TURN ON RED (R10-11) sign to prohibit left or right turns during the bicycle green.

Figure 3.13-5. One-Way Bicycle Lane or Separated Bicycle Facility to the Left of a Left Turn Only Lane on a One-Way Street



Note: The figure illustrates a one-way bicycle lane on a one-way street intersecting a two-way street. The intersection shown is currently green for the major street and red for the side street, while the bicycle is green. The major street has an exclusive left-turn lane operating with a red arrow. Vehicles on the side street have a NO RIGHT TURN ON RED (R10-11, R10-11a, or R10-11b) blank-out sign during bicycle green. Bicycles can make a protected through movement and left-turn movement while yielding to pedestrians during WALK and flashing DO NOT WALK indications.

Figure 3.13-6 presents a single counter-flow bicycle lane to the left of a one-way street. The figure also shows a one-way bicycle lane to the right of the one-way street flowing with traffic. The bicycle signals manage bicycle movements operating both with and against motor vehicle traffic. It is important to note that vehicle right turns and left turns are not permitted during the bicycle green, which is being illustrated using turn restriction blank-out signs in the figure (*). If the cross street is one-way, include a NO TURN ON RED (R10-11) blank-out sign to prohibit left or right turns during the bicycle green.

Figure 3.13-6. Counter-Flow Bicycle Lane on a One-Way Street



Note: The figure illustrates a one-way counter-flow bicycle lane on a one-way street intersecting a two-way street. The intersection shown is currently green for the major street and red for the side street, while the bicycle is red. The major street has a shared through/left-turn lane and shared through/right-turn lane operating with a TURNING VEHICLES STOP FOR PEDESTRIANS (R10-15a) blank-out sign. During bicycle green, the blank-out signs change to NO RIGHT TURN OR NO LEFT TURN (R3-1 or R3-2). Vehicles on the side street have a NO RIGHT TURN ON RED (R10-11, R10-11a, or R10-11b) blank-out sign for vehicles during bicycle green. Bicycles can make protected through movements and permissive right turns while yielding to pedestrians during WALK and flashing DO NOT WALK indications.

Figure 3.13-7 illustrates bicycle signals used at shared-use path or trail crossings to enhance safety at a signalized midblock crossing. Bicycle and pedestrian signal timing do not need to match. Separate signal indicators allow tailored green, yellow, and red times based on each user group's unique needs.

Figure 3.13-7. Shared Use Path/Trail Crossings at Signalized Midblock Crossing



Note: The figure illustrates a shared use path at a signalized midblock crossing. The vehicle signal is red and outside the image frame. The bicycle and pedestrian signals allow different signal timings for different users. The bicycle and pedestrian signals may be placed on separate pedestals or a shared pedestal, as shown.

3.13.4.2 Vehicle Turning Volume Thresholds for Bicycle Signal Consideration

Consider bicycle signal implementation when right-turn and/or left-turn motor vehicle movements that cross a Bicycle Lane or Separated Bicycle Facility, on either two-way street or one-way street, exceed the following volume thresholds during one hour period (comprising any four consecutive 15-minute increments), and shown in ***Table 3.13-2***.

Table 3.13-2. Consideration for Time-Separated Bicycle Movements at Bicycle Signals

Bicycle Facility Operation	Motor Vehicles per Hour Turning across Separated Bicycle Facilities or Bicycle Lane (veh/hr)			
	Two-Way Street			One-Way Street
	Right Turn	Left Turn Across One Vehicular Lane	Left Turn Across Two or More Vehicular Lanes	Right or Left Turn
One-Way	150	100	50	150
Two-Way	100	50	0	100

Note: These volume thresholds also apply for counter-flow bicycle facilities.
Source: Massachusetts Department of Transportation (MassDOT) publication ***MassDOT Separated Bike Lane Guide (2015) Exhibit 6A***

3.13.5 BICYCLE SIGNAL SIGNAGE AND DESIGN

3.13.5.1 Bicycle Signal Signage

Bicycle signal signage follows ***MUTCD (4H.03)***.

3.13.5.2 Bicycle Signal Face Layout

Bicycle signal indications are to follow ***MUTCD Sections 4H.06 through 4H.08*** and use a bicycle symbol signal with bicycles facing to the left. Mount the primary bicycle signal head vertically on the far side of the intersection. If the bicycle signal head is mounted on the mast arm, orient it the same as vehicular signals.

3.13.5.3 Place near-side bicycle signals vertically. Bicycle Signal Indication Size

The primary bicycle signal section uses 8-inch or 12-inch diameter signal indications, with a preference for 12 inches. Use a 12-inch diameter primary bicycle signal section if the bicycle signal is over 120 feet from the stop line.

When a supplemental near-side bicycle signal is provided, use 8-inch or 12-inch diameter signal indications, preferably 8 inches.

Use the same size for all sections and signal modules in a signal assembly.

3.13.5.4 Supplemental Near-Side Signals

Include supplemental near-side bicycle signals when the primary bicycle signal face is greater than 120 feet from the bicycle stop line (***MUTCD 4H.08 P01 (C)***).

Include supplemental near-side bicycle signals when the primary bicycle signal face is located more than 80 feet and up to 120 feet from the bicycle stop line (***MUTCD 4H.08***

P02). Consider supplemental near-side bicycle signals at smaller intersections if there is a history of bicycle-vehicle crashes, at complex intersections or bicycle movements, or if bicycle volumes exceed 150 in an hour (comprising any four consecutive 15-minute increments).

3.13.5.5 Bicycle Signal Mounts

Bicycle signals should use dedicated pedestal mounts and not be installed over the roadway. However, if a bicycle signal must be installed over the roadway, ensure a vertical clearance of no less than 17 feet-6 inches and no more than 19 feet. Do not place bicycle signals below pedestrian signal heads when bicycle and pedestrian signals are on the same pedestal facing the same direction. Per ***FDOT Standard Plans 653-001***, the pedestal-mounted pedestrian signal assemblies are between 8 feet and 10 feet above the sidewalk. Mount the bicycle signal to the right of the bicycle lane where possible.

The minimum mounting height of the primary pedestal-mounted signal head, measured from the elevation of the near edge of pavement to the bottom of the signal housing, may be 10 feet if placed directly above a shared-use path (per the shared-use path vertical clearance in ***FDM 224.8***) or 7 feet above sidewalks (not traveled way of roadway or shoulders/auxiliary lanes) per ***FDM 222.2.1.2***. If an 8-inch or 12-inch supplemental near-side pedestal-mounted signal is used, place it between 7 feet and 8 feet above the ground/sidewalk. If located directly above a shared-use path, place the supplemental near-side pedestal-mounted signal 10 feet above the pavement (per the shared-use path vertical clearance in ***FDM 224.8***) with an 8-inch signal head.

Mount the primary bicycle signal on a pedestal or the vertical support of a mast arm in a vertical position on the far side of the intersection. When sharing a pedestal with a pedestrian signal, position the bicycle signal above the pedestrian signal. The signal housing shall be black or yellow and equipped with a black or yellow backplate with a retroreflective border. Bicycle signal faces are to display bicycle indications only. Where feasible, mount the signal head to the right of the bicycle lane.

3.13.6 BICYCLE SIGNAL EQUIPMENT AND DETECTION

3.13.6.1 Bicycle Signal Detection Types

Install bicycle detection consistent with ***MUTCD 4H.12*** and ***MUTCD 9B.20*** whenever the vehicular signal is actuated. Use passive detection for bicycle signals whenever possible.

Push buttons for bicycles are not passive detection. Push buttons may supplement other forms of passive detection or replace passive detection where a bicyclist is more likely to expect a push button to indicate presence at the intersection. Such locations include:

- Where bicycles cross the intersection approaching from a sidewalk, and a bike signal is provided.

- Multi-use path crossings where bicycle signals are provided.

If push buttons are used for bicycle detection, place the R10-24 or R10-26 sign adjacent to the push button (***MUTCD 4H.12 P04***). Place push buttons so they meet all accessibility requirements.


Bicycles can be detected, and the bicycle signal actuated where vehicle signals are pre-timed. When the bicycle signal is actuated and green, a NO RIGHT TURN ON RED (R10-11, R10-11a, or R10-11b) sign is required. A NO RIGHT TURN (R3-1) blank-out sign can be used to prohibit conflicting turns from a pre-timed signal phase during bicycle green.

3.13.6.2 Bicycle Signal Zone/Markings for Passive Detection

Place the bicycle detection zone behind the stop line of the intersection leg/approach in the bicycle facility, except when bicycle boxes are used. If bicycle boxes or two-stage turn queue boxes are used, the detection zone should be present in those areas. The detector(s) should differentiate between bicyclists and vehicles.

The detection zone at the intersection includes the pavement marking shown in ***MUTCD Figure 9E-16*** (***Figure 3.13-8***) and the Bicycle Detector R10-22 sign to instruct bicyclists where to wait. Place the pavement marking on top of a green rectangular pavement marking for greater emphasis. The “WAIT HERE FOR GREEN” text may be included with the pavement marking.

Figure 3.13-8. Bicycle Detector Pavement Marking (*MUTCD Figure 9E-16*)

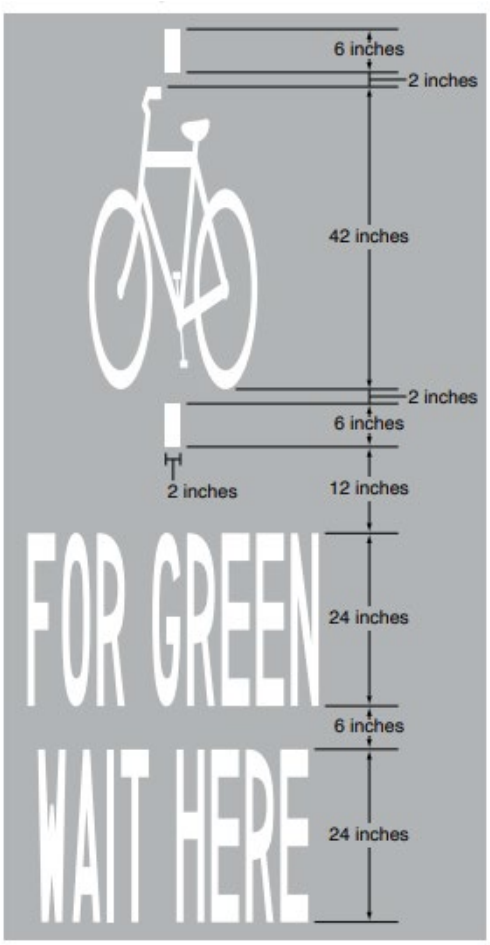


Note: The word pavement markings are optional.

Advanced detection may be used up to 100 feet behind the stop line of a bicycle facility.

When available, program the detection zone to be adjacent to a curb. Detection zone locations are shown in the figure from the AASHTO publication ***AASHTO Guide for the Development of Bicycle Facilities*** (2024) and shown as ***Figure 3.13-9*****.**

Figure 3.13-9. AASHTO Recommended Bicycle Detection Zone Locations

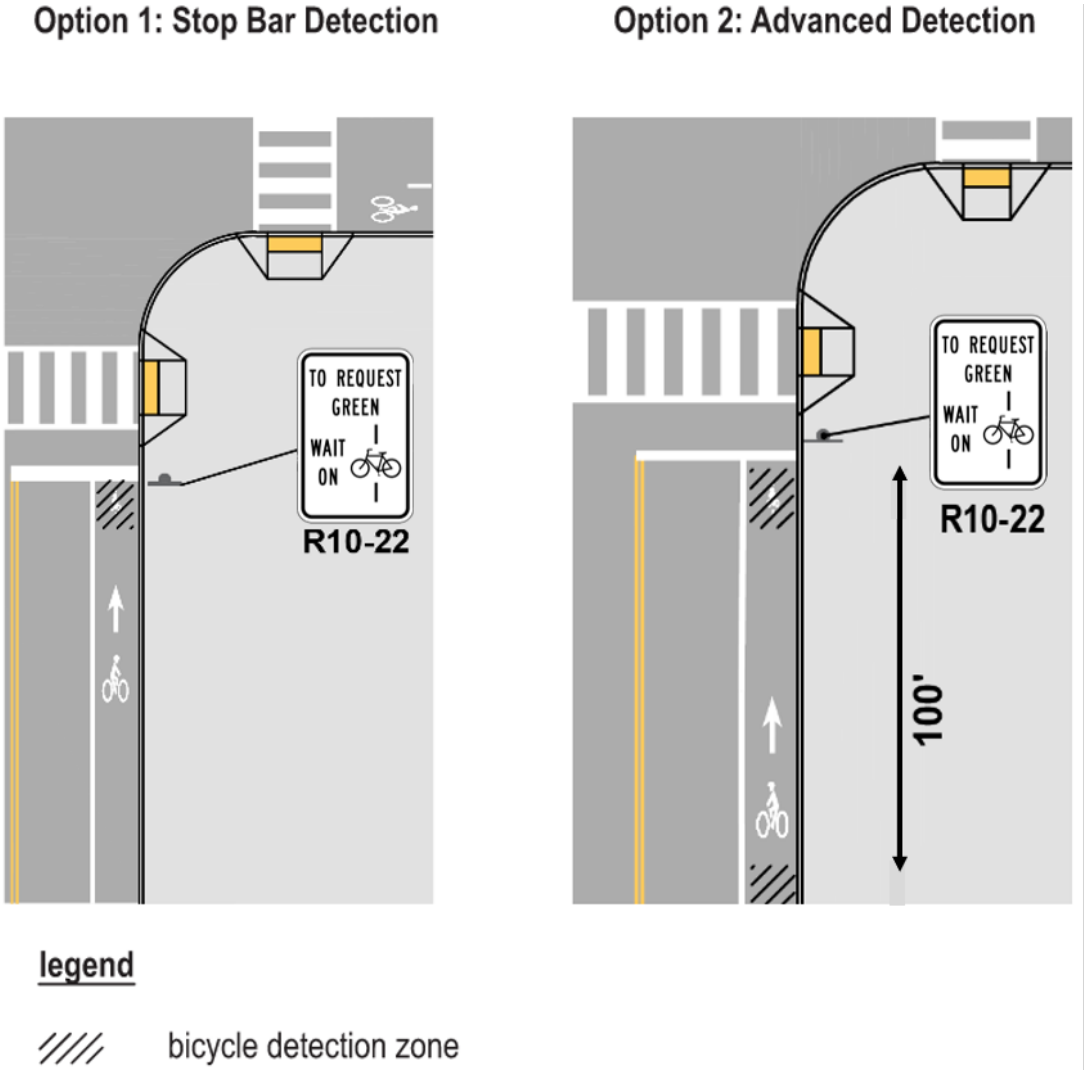

3.13.7 BICYCLE SIGNAL PHASING

3.13.7.1 Bicycle Travel Speed

Bicycle travel speed may be measured in the field to determine a bicycle operational speed appropriate for local conditions, similar to a Walking Speed Study outlined in the ***Manual on Uniform Traffic Studies (MUTS) Section 9.6***. In the absence of data, use context-based bicycle travel speed prioritizing travel speeds for the slower bicyclists, as shown in ***Table 3.13-3*** and ***Table 3.13-4***. ***Table 3.13-3*** is more appropriate to be used on non-State Highway System (SHS) roadways which do not have a context classification. ***Table 3.13-4*** is more appropriate to be used on SHS facilities.

Table 3.13-3. Non-SHS Bicycle Travel Speed by Bicycle Class

Bicycle Class	Description	Bicycle Travel Speed
1	High-Speed Athletic Bicyclists	18 – 25+ MPH
2	Experienced Commuters & Recreational Riders	12 – 18 MPH
3	Casual & Everyday Commuters	10 – 12 MPH
4	Children & Less Confident Riders	8 – 10 MPH

Table 3.13-4. SHS Bicycle Travel Speed by Context Class

Context Classification	Bicycle Class Usage	Recommended Bicycle Travel Speed
C1 – Natural C2 – Rural	1	18 MPH
C2T – Rural Town C3R – Suburban Residential C3C – Suburban Commercial	1, 2, 3	10 MPH
C4 – Urban General C5 – Urban Center C6 – Urban Core	1, 2, 3, 4	8 MPH

For shared-use paths in C2T, C3R, and C3C, assume bicycle class usage of 1, 2, 3, and 4 with a recommended travel speed of 8 MPH unless field data determine bicycle speed.

Adjust travel speed and bicycle acceleration values as appropriate at locations, based on observed field data, where the typical bicyclist may move slower or faster (e.g., at locations with grade). Consider using a higher bicyclist travel speed for yellow change intervals and a slower bicycle travel speed for red clearance time calculations. Do not confuse bicycle travel speed with bicycle design speed.

3.13.7.2 Bicycle Minimum Green/Phase Length Timing

The minimum green time for a bicycle signal includes: (1) 1.5 seconds of start-up time, (2) the time required to accelerate to the average bicycling travel speed, and (3) the time needed to travel half the intersection width at that speed.

Use ***Formula 3.13-1*** to determine the minimum green for bicycles at a bicycle signal:

$$G_{min} = t + \frac{1.47v}{a} + \frac{d}{1.47v} \qquad \textbf{Formula 3.13-1}$$

Where:

G_{min} = minimum green time (s)

v = Bicycle travel speed (mph)

t = Perception-reaction time (assumed 1.5 s)

a = Bicycle acceleration rate (assumed 2.5 ft/s^2)

d = Distance from bicycle stop line to middle of intersection (ft)

3.13.7.3 Yellow Change Interval Timing

The yellow change intervals warn approaching bicyclists that their protected bicycle interval is about to end. A 3-second yellow change interval is preferred. For bicycle facilities on C1/C2 facilities or those with predominantly bicycle class 1 riders and higher bicycle travel speeds, a 3.4-second yellow change interval is suggested. However, longer yellow change intervals of up to 6 seconds may be used if necessary. Please refer to ***TEM Section 3.6.2.1*** for Florida Yellow Change Interval of vehicular signal operations. It is recommended to use the upper end of anticipated bicycle travel speed for yellow time computation.

3.13.7.4 Red Clearance Interval Timing

The red clearance interval provides sufficient time for the bicyclist to complete their crossing, traveling from the stop line to the far side of the intersection, if they enter at the end of the yellow phase. It is recommended to use the lower end of anticipated bicycle travel speed for red time computation.

Because bicyclists are traveling at slower speeds than motor vehicles, a red clearance interval based on motor vehicle speeds will typically not be sufficient for a bicyclist entering at the end of yellow to clear an intersection completely. For this reason, use ***Formula 3.13-2*** to determine the bicycle red clearance interval:

$$R_{clear} = \frac{W+L}{1.47v} \qquad \textbf{Formula 3.13-2}$$

Where:

R_{clear} = Red clearance interval time (s)

W = Width of intersection from bicycle stop line to far side of travel lane (ft)

L = Bicycle length (assumed 6 ft)

v = Bicycle travel speed (mph)

In locations with bicycle signals, change the vehicular red clearance interval to match the bicycle red clearance interval if both the vehicle phase and bicycle phase terminate together.

Apply engineering judgment if the computed red clearance interval exceeds 6 seconds. For large intersections, the maximum all-red interval is 6 seconds. The bicycle red clearance interval does not have to coincide with the vehicular red clearance interval.

For very large or complex intersections or areas with sight distance issues, designers may consider implementing a red extension for bicyclists. A red extension would require appropriate detection.

Please refer to ***TEM Section 3.6.2.2*** for Red Clearance Interval Timing of vehicular signal operations.

3.13.7.5 Bicycle Green Waves

Consider bicycle green waves in a signalized bicycle network with a separated bicycle facility and relatively high bicycle volume during peak hours (i.e., at least 75 bicyclists per hour). Consider the impacts of vehicular traffic, as the coordination priority will be given to bicyclists. If vehicular coordination is also desired along the same corridor, engineers must ensure that the coordinated vehicular speed aligns with the selected bicycle progression speed. Because typical bicycle and vehicle travel speeds differ substantially, concurrent coordination for both modes is often not feasible.

Consider bicycle green waves for all signalized intersections in the corridor at an appropriate bicycle travel speed.

3.13.7.6 Signal Phasing Schemes

Where bicycle signals are used, develop signal schemes compliant with ***MUTCD Chapter 4H*** and do not allow permissive vehicular turns across the path controlled by a bicycle signal during bicycle green (***MUTCD 4H.01 P09***).

Do not use bicycle signals to create a bicycle scramble operation or use them to simultaneously give green bicycle indications to perpendicular conflicting bicycle movements (***MUTCD 4H.02, P01***). Bicycles may make permissive right turns and left turns across other bicycle lanes while yielding to conflicting bicycle movements on a two-way separated bicycle facility.

Signal cycle lengths of 60-90 seconds are recommended for intersections serving heavy bicycle traffic for quicker serviceability.


Bicycle signals may be used for a protected bicycle signal phase or a leading bicycle interval as permitted by ***MUTCD Chapter 4H***. MUTCD 4H.01 does not allow bicycle operations in the same capacity as a leading pedestrian interval (LPI) because permissive vehicle turns during bicycle greens are not allowed. A dedicated right-turn signal indication, along with a NO TURN ON RED (R10-11) sign, can restrict conflicting vehicle turns during the bicycle green and help increase driver compliance. This can also be achieved with a NO RIGHT TURN (R3-1) blank-out sign that turns off when the conflicting bicycle green is not active.

Exclusive Bicycle Phase

An exclusive bicycle phase provides complete separation between motor vehicle movements and bicycle movements within the signal cycle. This phasing strategy is particularly beneficial at intersections where bicyclists need to turn across vehicular lanes, as it minimizes conflict points and enhances safety. However, an exclusive phase may increase overall delay for all users, including motor vehicles and bicyclists, and typically requires a longer signal cycle to accommodate the additional phase.


An example of a compliant signal phasing scheme of an exclusive bicycle phase is shown in ***Figure 3.13-10***.

Figure 3.13-10. Two-Way Bicycle Lane on Major Approach of Two-Way Street

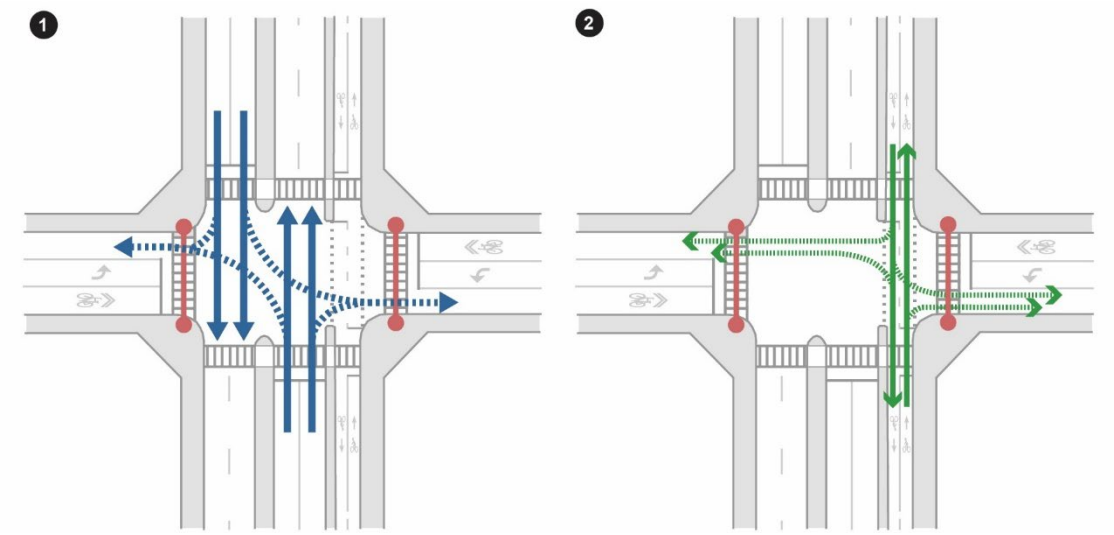

Phase 1 (left) shows protected through movement and permissive turns for the major street, with walk for the parallel pedestrian movements. The bicycle signal is red.

Phase 2 (right) shows an exclusive bicycle phase with walk for the parallel pedestrian movements. Bicycles may make permissive right and/or left turns while yielding to pedestrians and conflicting bicycle movements. The major streets and side streets are operating with a NO RIGHT TURN ON RED (R10-11) blank-out sign to restrict turning movements across bicycle green

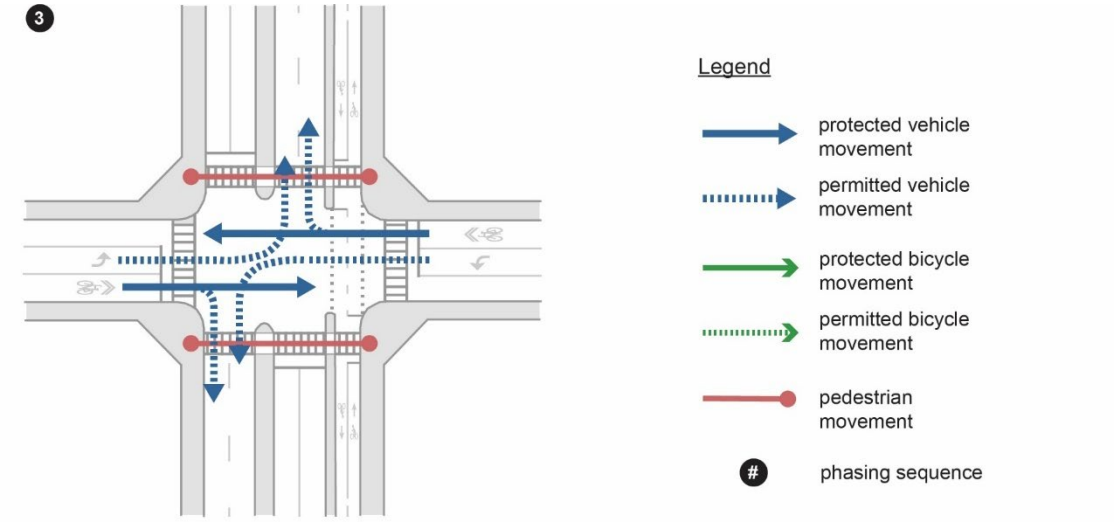

Phase 3 shows protected through movement and permissive turn movements for the side street with walk for the parallel pedestrian movements. The bicycle signal is red.


Note: Based on ***AASHTO Guide for the Development of Bicycle Facilities***, Figure 10-4.

Concurrent Bicycle Phase and Protected Turn Movement

A concurrent bicycle phase with a protected turn movement allows through bicycle movements to occur simultaneously with non-conflicting protected vehicle turns. This approach fully separates turning vehicles from through bicyclists, removing the need for motorists to yield to bicycles or pedestrians during turns and improving vehicle flow through the intersection. Despite these operational benefits, this strategy requires an additional signal phase, which may increase cycle length and delay. It also requires a dedicated right-turn signal indication, along with a NO TURN ON RED (R10-11) sign or a NO RIGHT TURN (R3-1) blank-out sign that turns on when the conflicting bicycle green is active to reinforce turn restrictions and encourage driver compliance.


Examples of compliant signal phasing schemes for concurrent bicycle phase and protected turn movement are shown in ***Figure 3.13-11***, ***Figure 3.13-12***, ***Figure 3.13-13***, and ***Figure 3.13-14***

Figure 3.13-11. One-Way Bicycle Lanes on Major Approach of Two-Way Street

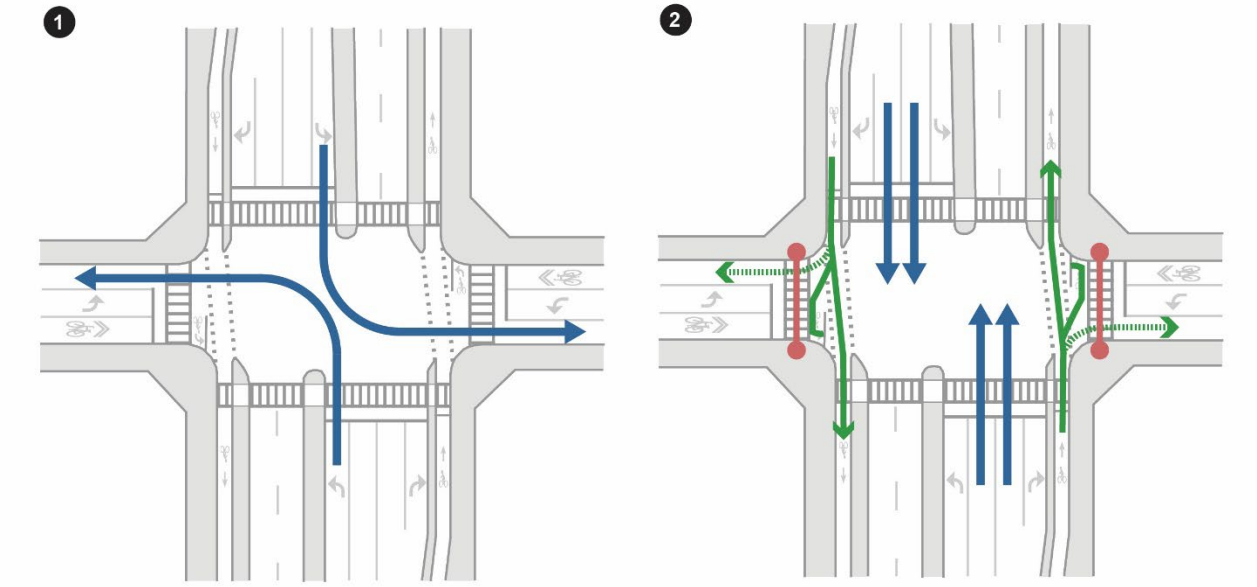


Phase 1 (left) shows protected left turns for the major street. The bicycle signal is red.

Phase 2 (right) shows a green signal for vehicles moving through the major street. The bicycle signal is green, allowing permissive right turns while yielding to pedestrians during WALK and DO NOT WALK indications. Bicyclists can also access the two-stage bicycle turn box on the side-street approach. The major streets and side streets are operating with a NO RIGHT TURN ON RED (R10-11) blank-out sign to restrict turning movements across bicycle green.

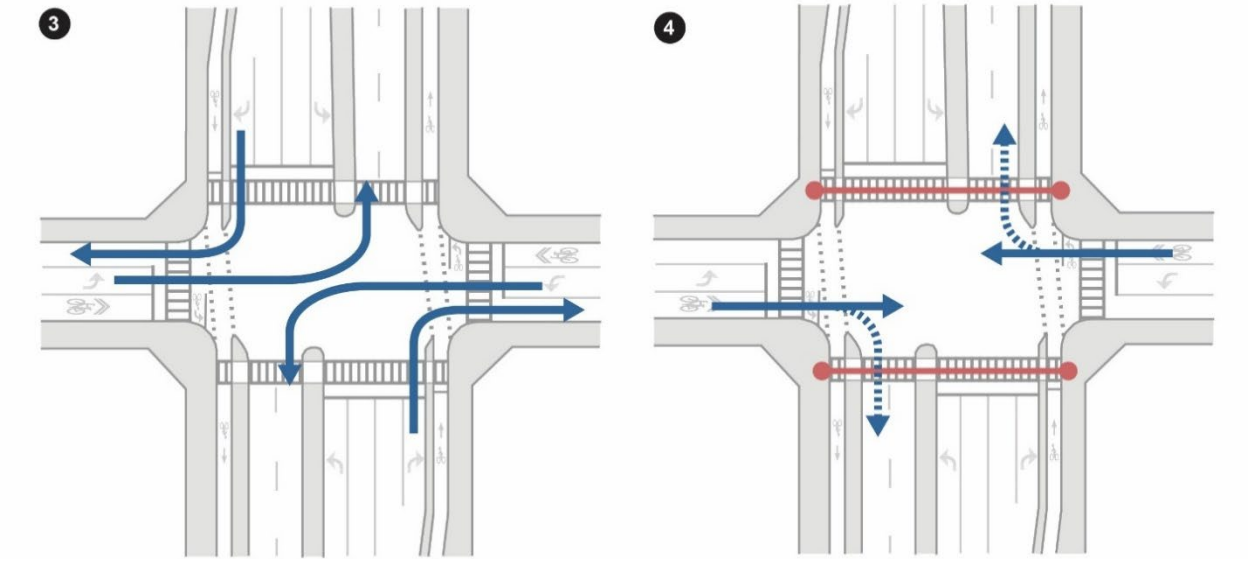


Phase 3 (left) shows protected left-turn movement for the side street and protected right-turn movement for the major street. The bicycle signal is red.

Phase 4 (right) shows protected through movement and permissive right-turn movements for the side street with walk for the parallel pedestrian movements

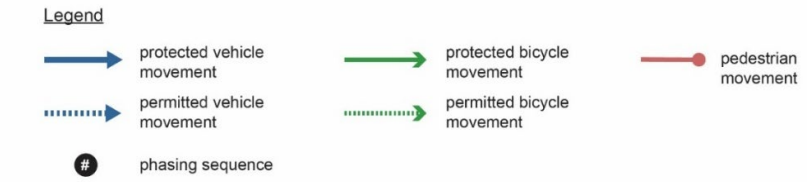


Based on the ***AASHTO Guide for the Development of Bicycle Facilities***, Figure 10-5.

Figure 3.13-12. One-Way Bicycle Lanes on Major and Minor Approaches of a Two-Way Street

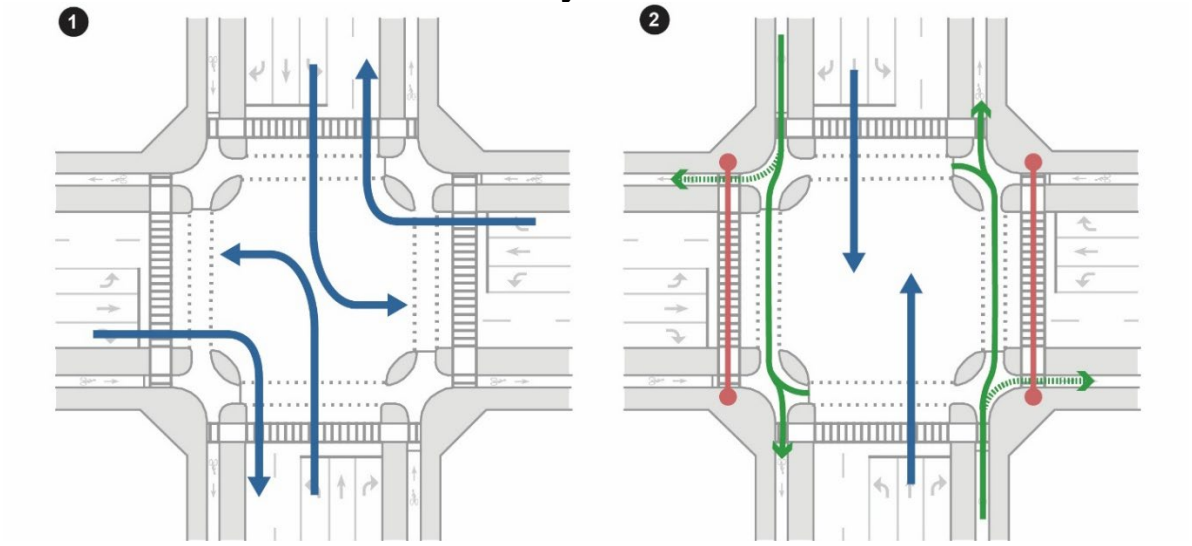


Phase 1 (left) shows a protected intersection with protected left turns for the major street and protected right turns for the side streets. The bicycle signal is red.

Phase 2 (right) shows a protected intersection with green for the vehicle through movements on the major street. The bicycle signal is green, allowing for permissive right turns while yielding to pedestrians during WALK and DO NOT WALK indications. The major streets and side streets are operating with a NO RIGHT TURN ON RED (R10-11) blank-out sign to restrict turning movements across bicycle green.

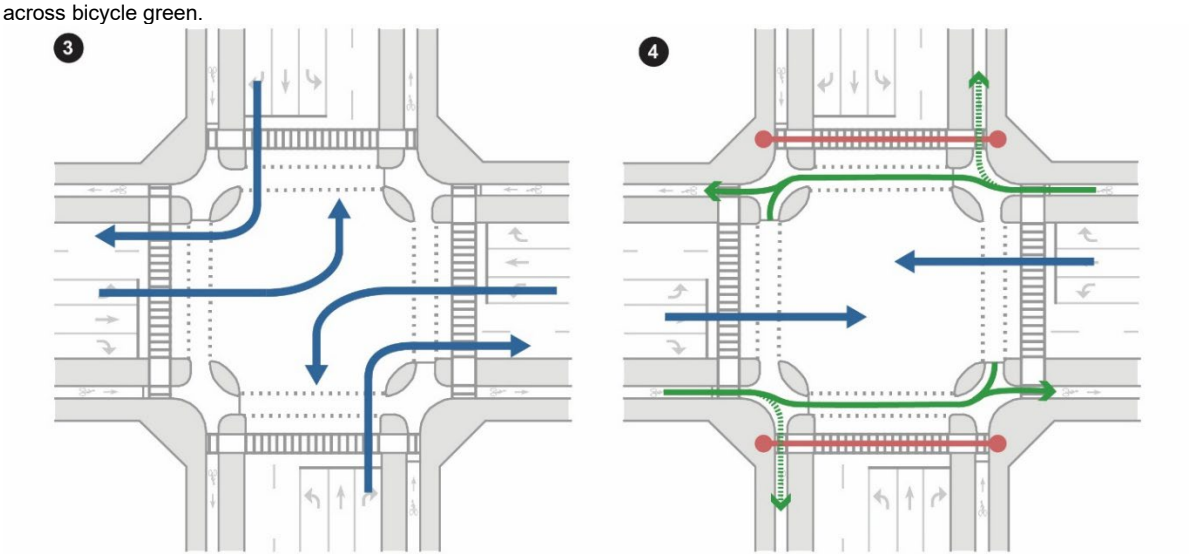


Phase 3 (left) shows a protected intersection with protected left-turn movement for the side street and protected right-turn for the major street. The bicycle signal is red.

Phase 4 (right) shows a protected intersection with green for the vehicle through movements on the side street. The bicycle signal is green, allowing for permissive right turns while yielding to pedestrians during WALK and DO NOT WALK indications. The major streets and side streets are operating with a NO RIGHT TURN ON RED (R10-11) blank-out sign to restrict turning movements across bicycle green.

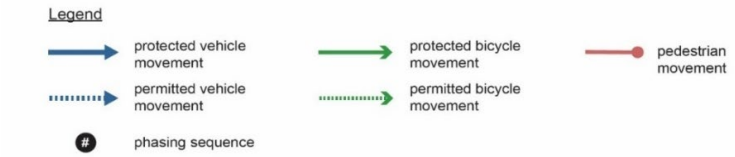


Note: Based on ***MassDOT Separated Bike Lane Planning & Design Guide,*** Exhibit 6J.

Figure 3.13-13. Two-Way Bicycle Lane on Major Approach of One-Way Street

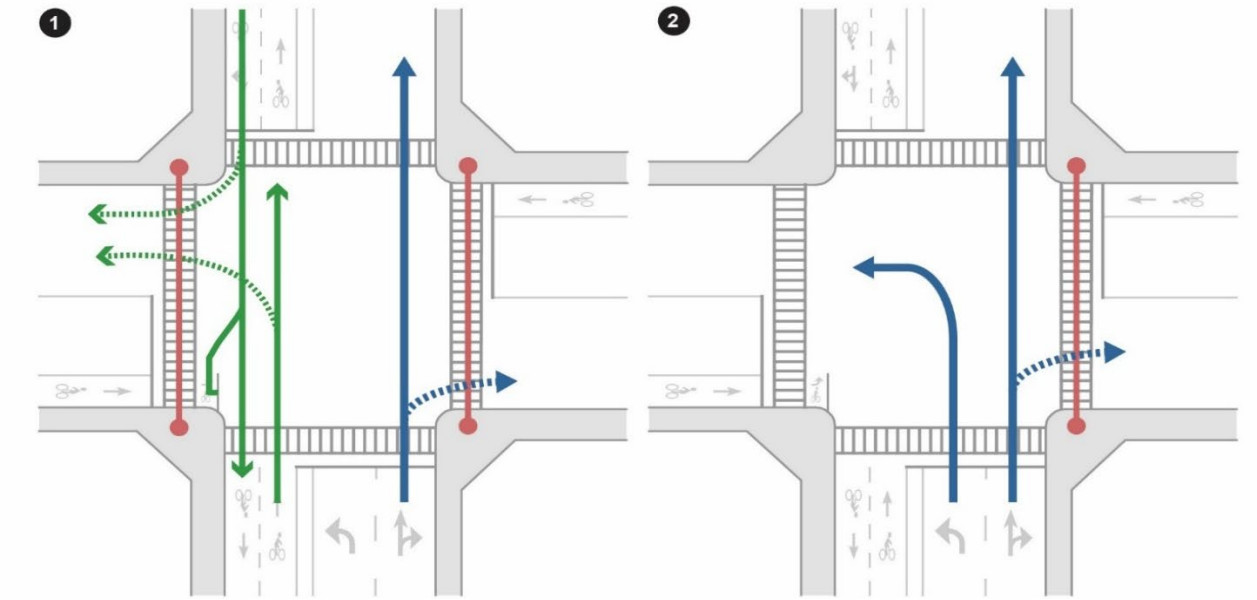

Phase 1 (left) shows a protected through movement for the one-way major street and permissive right-turns yielding to parallel pedestrian movement. The bicycle signal is green, allowing protected through movement, and permissive northbound left-turn and permissive southbound right-turn yielding to confliction pedestrian and bicycle movements. The major streets and side streets are operating with a NO RIGHT TURN ON RED (R10-11) blank-out sign to restrict turning movements across bicycle green. The southbound bicyclists looking to make a left-turn are able to access the two-stage bicycle turn box on the side street approach.


Phase 2 (right) shows a protected-through and left movement for the one-way major street and permissive right turns yielding to parallel pedestrian movement. The bicycle signal is red

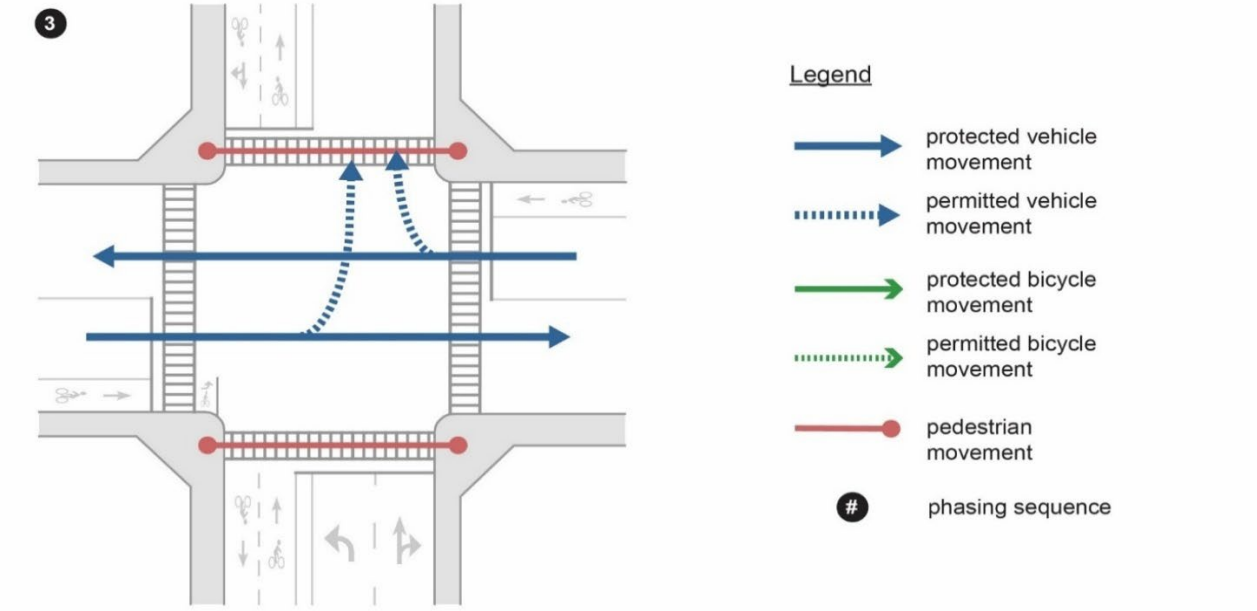

Phase 3 shows protected through movements for the side street and permissive right and left turns onto the one-way major street, yielding to conflicting pedestrian movements. The bicycle signal is red.


Based on the ***FHWA Separated Bike Lane Planning & Design Guide***, Signal Phasing Example 5.

Figure 3.13-14. Two-Way Bicycle Lane on Major Approach of Two-Way Street

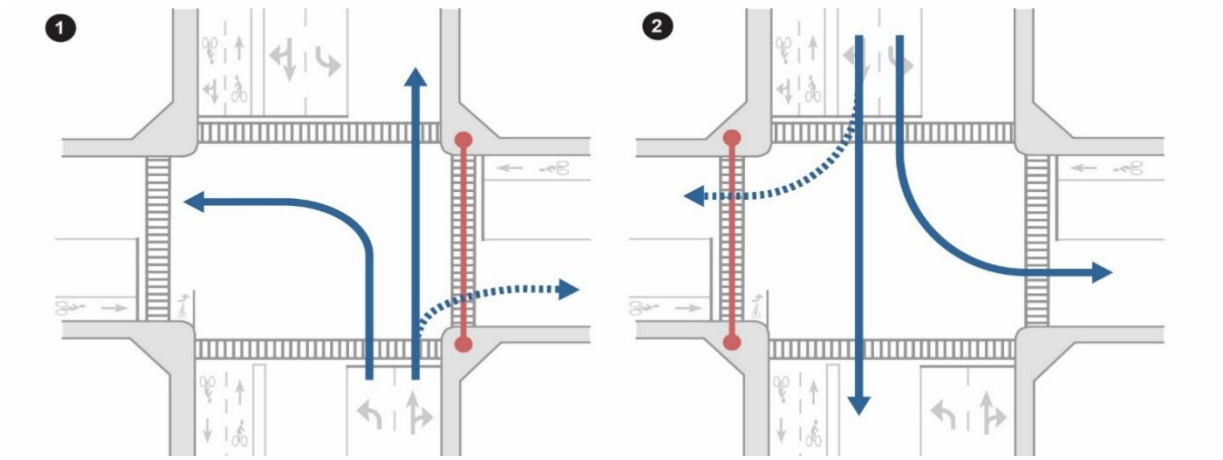


Phase 1 (left) shows a protected through and left movement for the northbound major street and permissive right-turns yielding to parallel pedestrian movement. The bicycle signal is red.

Phase 2 (right) shows a protected through and left movement for the southbound major street and permissive right-turns yielding to parallel pedestrian movement. The bicycle signal is red.

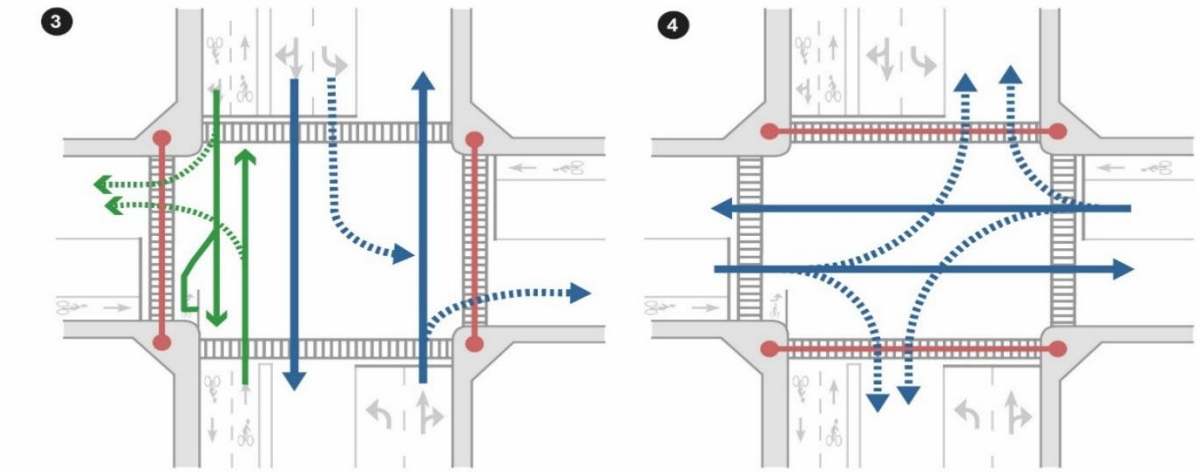

Phase 3 (left) shows a protected through movement for the major street and permissive northbound right turns and southbound left turns, yielding to parallel pedestrian movement. The bicycle signal is green, allowing protected through movement and permissive northbound left turns and permissive southbound right turns, yielding to conflicting pedestrian and bicycle movements. The major streets and side streets are operating with a NO RIGHT TURN ON RED (R10-11) blank-out sign to restrict turning movements across bicycle green. Southbound bicyclists looking to make a left turn can access the two-stage bicycle turn box on the side street approach.

Phase 4 (right) shows protected through movements for the side street and permissive right and left turns to the major streets, yielding to conflicting pedestrian movements. The bicycle signal is red.

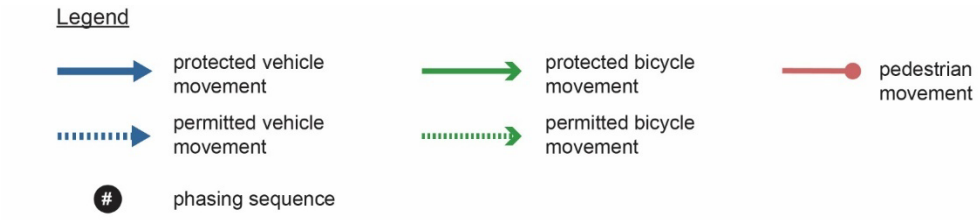

Note: Based on the ***FHWA Separated Bike Lane Planning & Design Guide***, Signal Phasing Example 3.