



☑ Rotate entire section so that gutter cross slope matches slope of adjacent circulating roadway pavement.

For use adjacent to concrete or flexible pavement. For details depicting usage adjacent to flexible pavement, see Sheet 2. Expansion joint, preformed joint filler and joint seal are required between curb & gutter and concrete pavement only, see Sheet 2.

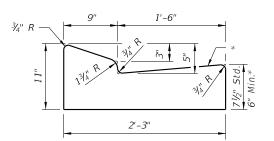


TYPE E 1'-6" TYPE F

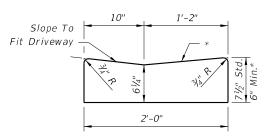


Note: To be paid for as parent curb.

DROP CURB Standard Shoulder Line Earth Berm Shoulder Pavement 3'-6" SHOULDER GUTTER

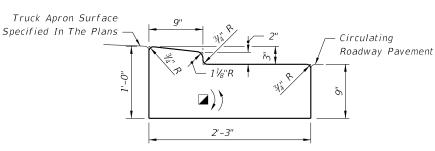


TRAFFIC BEARING SECTION FOR USE IN ROUNDABOUT CENTRAL ISLAND CONSTRUCTION TYPE RA

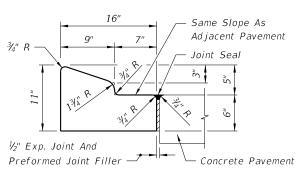


For details depicting usage adjacent to flexible pavement, see Sheet 2.

TYPE A

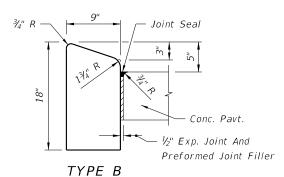

Joint Seal ½" Exp. Joint And Preformed Joint Filler TYPE D

Note: For use adjacent to concrete or flexible pavement, concrete shown. Expansion joint, preformed joint filler and joint seal are required between curbs and concrete pavement only, see Sheet 2.

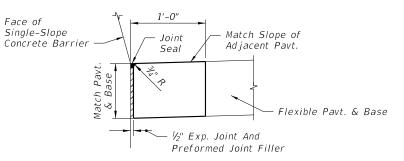

TOLL HEADER CURB (See the toll site details for conduit requirements)

CONCRETE CURB AND GUTTER

REVISION 11/01/20

DESCRIPTION:



FY 2021-22 STANDARD PLANS

CURB AND GUTTER

INDEX *520-001*

SHEET 1 of 2

