

Florida Greenbook

Manual of Uniform Minimum Standards for Design,
Construction and Maintenance for Streets and Highways

Subcommittee Meeting

Chapter 4 – Roadside Design

Agenda

July 29, 2026
2:00 PM – 3:00 PM

Virtual on Microsoft Teams
[MS Teams Link](#)

2:00 PM	Welcome and Introductions	Jacqui Morris
2:10 PM	Chapter 4 Review (17 th Edition)	Jacqui Morris, Kittelson Staff
2:30 PM	Subcommittee Discussion	Chapter 4 Subcommittee
2:40 PM	Action Items and Next Steps	Jacqui Morris, Kittelson Staff
2:50 PM	Closing remarks • Public Comment	Jacqui Morris

Florida Greenbook

Manual of Uniform Minimum Standards for Design,
Construction and Maintenance for Streets and Highways

Chapter 4 Subcommittee Meeting

Roadside Design

Agenda

July 29, 2026
2:00 PM – 3:00 PM

Virtual on Microsoft Teams

Attendees

Andy Garganta
Bee Thao
Chad Johnson
Clint Capps
Daniel Ashworth
Daniel Eichler
Fazal Qureshi
Kevin Ingle
Jerry Jackson Jr.
Jane Dai
Marlene Messam
Tiffany Menard
Nicole Monies
Malcom Moyse, Jr.
Nathan George

Felix Padilla
Susan Poplin
Keith Riddle
Robert Hatton
Alexandra Scroggin
Sean Kingston
Leyna Stemle
Richard Stepp
Kathy Thomas
Allan Urbonas
Kevin Walford

Jacqueline Morris
Jennifer Musselman
Morgan Dean

Topic

1

Welcome and Introduction
[Slide #1 – 3]

Jacqui Morris

Jacqui Morris introduced herself and welcomed everyone. Jacqui invited committee members and FDOT technical staff to introduce themselves. She asked guests to put their information in the chat.

Florida Greenbook

Manual of Uniform Minimum Standards for Design, Construction and Maintenance for Streets and Highways

2

Chapter 4 Review [Slide #4-15]

Jacqui Morris, Kittelson Staff

- Morgan reviewed new changes since the subcommittee last met including:
 - Removed crash statistics from introduction
 - Separating sections for clear zone and roadside hazard to clarify the concepts
 - Figures styles have been updated
 - New illustrations to demonstrate how clear zone, lateral offset, and border area
 - Andy asked for the right side of the urban section why the clear zone and border width look the same and asked if the clear zone should be measured from the lip of gutter
 - Allan mentioned historically the bike lane has been part of the clear zone
 - Richard recommended, when they are added to the chapter, to include some text describing the illustrations and that they are intended to demonstrate concepts, not provide design guidance
 - Jacqui noted we may include some additional features in the urban example (e.g., a utility pole)
 - Updates to lateral offset tables
 - Bus benches and shelter updates
 - Malcolm asked for clarification on placement of shelter criteria
 - Morgan clarified that guidance in Chapter 3 and 13 is consolidated in Chapter 4. Chapter 3 and 13 will refer readers to Chapter 4. Jacqui clarified the placement of this guidance is based on previous sub-committee discussions.
 - Changed utility pole criterion from “must” to “shall”
 - Andy asked if there was different guidance for RRR criteria.
 - Morgan noted the Greenbook does not currently have RRR specific criteria in Chapter 4.
 - Richard clarified that the FDM has different criteria for RRR.
 - Flipped order of clear zone tables
 - Flipped end treatment table columns
 - Filled in Standard Plans lists

Florida Greenbook

Manual of Uniform Minimum Standards for Design,
Construction and Maintenance for Streets and Highways

	○ Reference list	
3	Subcommittee Discussion [Slide #16]	Chapter 4 Subcommittee
	• Andy shared the new graphics look good. Robert agreed. • Andy mentioned that border width often extends 1-2 feet beyond the back of sidewalk and suggested updating to not tie the dimension to the sidewalk. • Richard shared the chapter is coming together nicely and we're in the final stages of polishing the chapter. He mentioned a couple small changes for the committee to consider: ○ Cross references ○ Updates to drainage structures language • The team will research suggestions and provide a draft final chapter to the committee in the next few months. ○ Andy and Allan agreed with the approach. ○ Jacqui suggested regrouping in October.	
4	Closing Remarks Public Comment [Slide #17-18]	Jacqui Morris
	Jacqui provided a reminder that this is a public meeting and provided an opportunity for public comment. • Malcolm asked about the clear zone and whether trees greater than 4 inches in diameter can be in the clear zone ○ Morgan clarified trees can sometimes be in the clear zone ○ Typically in a curbed area it can be placed within the clear zone, outside the lateral offset ○ Malcolm suggested another illustration for a local neighborhood context ○ Daniel clarified that the illustration is currently showing a high speed roadway • Nathan asked about bus benches and shelters and noted it is helpful to have the information in this chapter. On high speed roadways greater than 45 mph there is not a lot of roadside space and moving the bus benches and shelters outside the clear zone may not be feasible. Nathan asked for clarification if the “should” language is a requirement and if different criteria could be used for local streets. ○ Jennifer clarified that the “should” statement is not a requirement, it is encouraged or an ideal condition.	

Florida Greenbook

Manual of Uniform Minimum Standards for Design,
Construction and Maintenance for Streets and Highways

- Nathan suggested adding another reference to lateral offset.

Meeting adjourned at 2:51 pm.

Florida Greenbook

Subcommittee Meeting

Chapter 4 Roadside Design

July 29, 2026



Public Meeting

Welcome

Agenda

July 29, 2026

2:00 PM	Welcome and Introductions	Jacqui Morris
2:10 PM	Chapter 4 Review (17 th Edition)	Jacqui Morris, Kittelson Staff
2:30 PM	Subcommittee Discussion	Chapter 4 Subcommittee
2:40 PM	Action Items and Next Steps	Jacqui Morris, Kittelson Staff
2:50 PM	Closing Remarks and Public Comment	Jacqui Morris

Online Attendees *Meeting Logistics*



The chat feature can be used to ask questions to the presenters or share resources.



Be sure to mute your microphone unless you are asking a question.



You may turn on or off your video camera accordingly.



Raise your virtual hand to ask a live question.

Chapter 4

Ch. 4 Updates

1. Removed crash statistics

4.1 Introduction

4.1.1 Overview of Roadside Safety Design

Roadside safety is vital to the goal of reducing fatalities and serious injuries on our roadway facilities. Accordingly, this chapter focuses on preventing and mitigating roadway departure crashes. Roadway departure crashes are the result of errant vehicles exiting the intended traveled way before ultimately colliding with another vehicle, rolling over, or encountering hazards such as fixed objects or drop-offs.

The Federal Highway Administration (FHWA) identifies a hierarchy of three types of countermeasures to address roadway departure crashes: (1) keep vehicles on the roadway; (2) provide for safe recovery; and (3) reduce crash severity. These concepts generally form the basis for roadside safety design.

Further, roadside safety supports the USDOT Safe System Approach and FDOT Target Zero initiatives, which both have the goal of eliminating fatal and serious injuries on Florida's roadways.

Ch. 4 Updates

1. Removed crash statistics
2. **Separate sections for Clear Zone and Roadside Hazards**


Chapter 4

Roadside Safety Design

4.1	Introduction.....	4-3
4.1.1	Overview of Roadside Safety Design	4-3
4.1.2	Context-Based Design	4-3
4.1.3	How to Use This Chapter	4-3
4.2	Keep Vehicles on the Roadway	4-4
4.3	Provide for Safe Recovery	4-6
4.3.1	The Clear Zone	4-6
4.3.2	Roadside Hazards	4-9
4.3.3	Design Option Hierarchy for Treating Roadside Hazards in the Clear Zone	4-9
4.3.4	Slopes in the Clear Zone	4-9
4.3.5	SafetyEdge Technology	4-14
4.3.6	Minimum Lateral Offset.....	4-14
4.3.7	Border Width (Area).....	4-16



Ch. 4 Updates

1. Removed crash statistics
2. Separate sections for Clear Zone and Roadside Hazards
3. Graphic styles updated

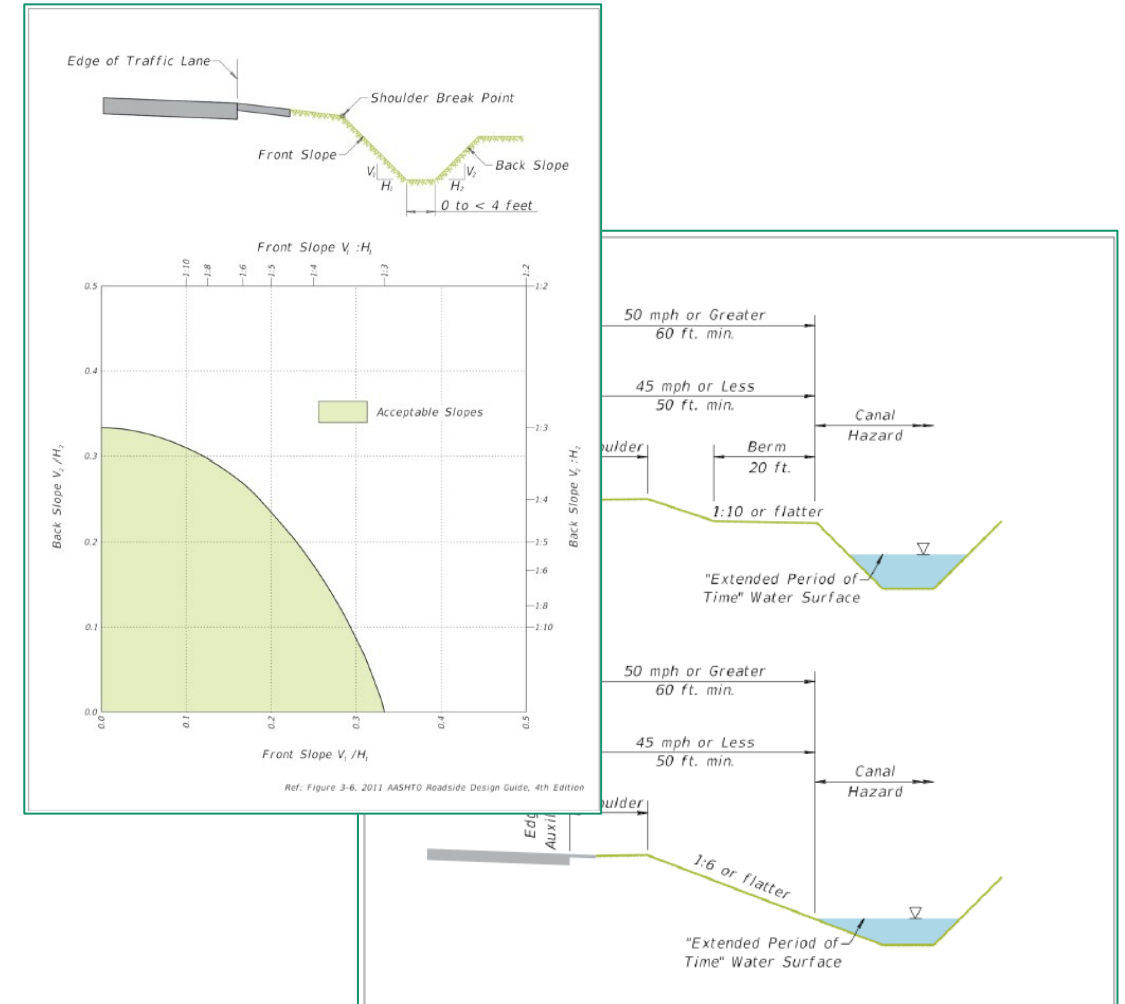

Ch. 4 Updates

1. Removed crash statistics
2. Separate sections for Clear Zone and Roadside Hazards
3. Graphic styles updated
4. **Figures for LO, CZ, and border area**

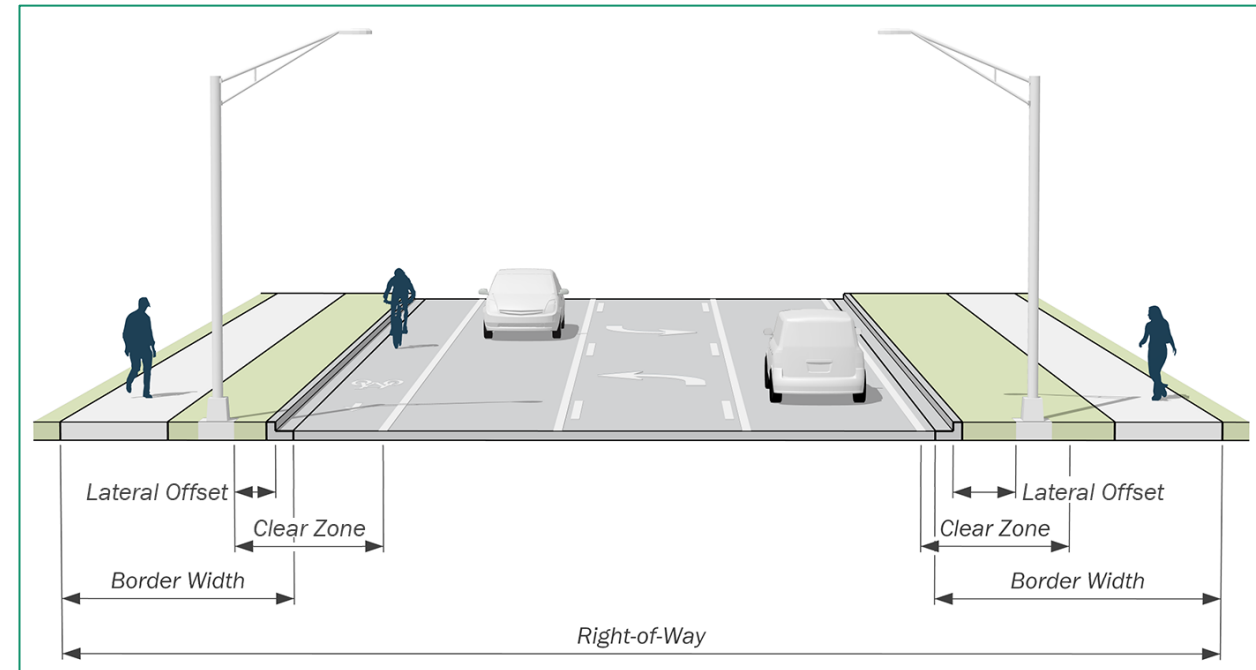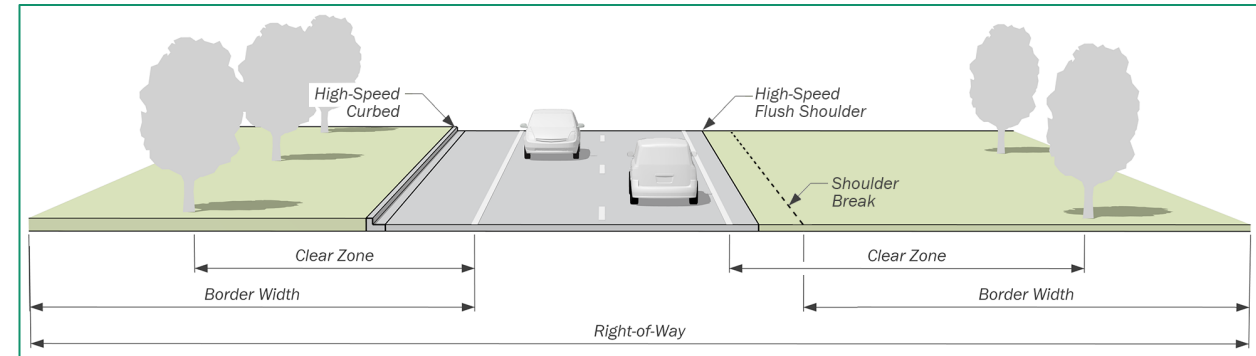

Ch. 4 Updates

1. Removed crash statistics
2. Separate sections for Clear Zone and Roadside Hazards
3. Graphic styles updated
4. Figures for LO, CZ, and border area
5. Lateral offset table updates

Added references to Section 4.4 and Ch. 14.

Previously a table in a table

Table 4-3. Minimum Lateral Offset Distances (ft)

Roadside Feature	Minimum Lateral Offset (Distance from Face of Curb or Edge of Traveled Way, ft)			
	Urban Curbed Roadways			All Other
	Design Speed ≤ 25 mph Context Classification: Urban Center (C5) or Urban Core (C6)	Design Speed ≤ 45 mph		
Aboveground Objects - See Section 4.4 for applicable roadside items. - For urban curbed areas ≤ 45 mph, this generally includes only crashworthy or breakaway objects except those necessary for the safe operation of the roadway, per Section 4.4. - Aboveground features include bridge piers, abutments, and other aboveground structures. Note: A design variation for failure to meet clear zone criteria is not required for existing, low-speed, curbed roadways if the requirements for the placement of aboveground fixed objects are met. See Chapter 14 for more details on design exceptions and variations.	1.5	Preferred: 1.5 Exception: 6" where corridor is constrained See: AASHTO's Guidelines for Geometric Design of Very Low-Volume Local Roads (ADT ≤ 400)	Preferred: 4 Exception: 1.5 where 4 cannot be reasonably obtained and other alternatives are impractical	Clear zone width
Drop-Off Hazards, which include... - Any vertical faced structure with a drop-off (e.g., retaining wall, wing wall, etc.) that is located within the clear zone. - Slopes that are steeper than 1V:3H and higher than 6 feet that are located within the clear zone. - Slopes steeper than 1V:2H. - Any drop-off with a significant crash history.	Clear zone width			
Water Bodies	Clear zone width			
Canal Hazards Canal hazard lateral offset is the distance from the edge of travel lane, auxiliary lane or ramp to the top of the canal side slope nearest the road. See Section 4.4.14 for more information.	For design speed ≤ 45 mph: 40 feet on curbed roadways 50 feet on flush shoulder roadways For design speed 50+ mph: 60 feet on all roadways			

Ch. 4 Updates

1. Removed crash statistics
2. Separate sections for Clear Zone and Roadside Hazards
3. Graphic styles updated
4. Figures for LO, CZ, and border area
5. Lateral offset table updates
6. **Bus benches and shelters**

4.4.11 Bus Benches and Shelters

Shelters should be installed in accordance with the following:

- Curbed roadways:
 - Posted speed $\leq$ 45 mph: As close to the ROW as practicable and at least 4 feet from back of curb
 - Posted speed $>$ 45 mph: Outside the clear zone (Table 4-1 and Table 4-2) and as close to the ROW as practicable
- Flush shoulder roadways: Outside the clear zone (Table 4-1 and Table 4-2) and as close to the ROW as practicable

Information comes from the Florida Administrative Code 14-20.003 (Placement of Shelters) and 14-20.0032 (Placement of Benches).

Ch. 3 (Geometric Design) and Ch. 13 (Transit) now reference the information in this chapter.

Ch. 4 Updates

1. Removed crash statistics
2. Separate sections for Clear Zone and Roadside Hazards
3. Graphic styles updated
4. Figures for LO, CZ, and border area
5. Lateral offset table updates
6. Bus benches and shelters
7. **Utility pole criterion from “must” to “shall”**

4.4.6 Utility Poles

Utility poles:

- shall be located to meet minimum lateral offset requirements provided in Table 4-3;
- should be located as close as practical to the right-of-way line; and

Roadside Safety Design | 4-19

Florida Greenbook—17th Edition

- should be installed per the permitting agency's requirements.

8. Flipped order of clear zone tables

Design Speed (mph)	Design ADT	Front Slopes			Back Slopes		
		1V:6H or Flatter	1V:5H to 1V:4H	1V:3H	1V:3H	1V:5H to 1V:4H	1V:6H or Flatter
20	Under 750	2-6	3-7	See "Note 1" below	2-6		3-7
	750-1,500	3-7	5-8		2-6		3-7
	1,500-6,000	5-8	6-10		3-7		5-8
	Over 6,000	7-10	7-10		5-8		7-10
25-30	Under 750	3-7	5-8	See "Note 1" below	2-6		3-7
	750-1,500	5-8	6-10		3-7		5-8
	1,500-6,000	7-10	7-10		5-8		7-10
	Over 6,000	7-10	10-12		7-10		7-10
35	Under 750	5-8	6-10		3-7		5-8
	750-1,500	7-10	7-12		5-8		7-10
	1,500-6,000	10-12	12-14		7-10		10-12
	Over 6,000	12-14	14-16		10-12		12-14

Note 2: This guidance is sourced from the FHWA's 2005 [Barrier Guide for Low Volume and Low Speed Roads](#).

Design Speed (mph)	AADT ≥ 1500 Travel Lanes & Multilane Ramps		Aux Lanes & Single Lane Ramps	AADT < 1500 Travel Lanes & Multilane Ramps		Aux Lanes & Single Lane Ramps	AADT ≤ 400
	1V:6H or Flatter	1V:5H to 1V:4H	1V:4H or Flatter	1V:6H or Flatter	1V:5H to 1V:4H	1V:4H or Flatter	
≤ 35	See Table 4-2: Minimum Clear Zone Distance (ft) (20–35 mph)						
40	14	16	10	10	12	10	Preferred: 6 Exception: Less than 6 where constraints of cost, terrain, right of way, or potential social/environmental impacts make the provision of a 6 feet clear zone impractical.
45–50	20	24	14	7 if AADT < 750 vehicles/day			
55	22	26	18	16	20	14	
60	30	30 ¹	24	20	26	18	
65–70	30	30 ¹	24	24	28	18	

1. Greater clear zone widths provide additional safety for higher-speed and -volume roads. See Section 3.1 of the [AASHTO RDG 4th Edition \(2011\)](#) for further information.

Ch. 4 Updates (Editing)

8. Flipped order of clear zone tables

9. Flipped end treatment table columns

Table 4-4. End Treatment Methods for Each Barrier Type

Barrier Type	End Treatment(s)
Metal Guardrail	• Approach terminal (proprietary) • Trailing anchorage (FDOT) • CRT assembly (FDOT, for radius end) • Crash cushion (proprietary)
Concrete Barrier	• Crash cushion (proprietary)
Metal Guardrail to Concrete Barrier	• Transition connections (FDOT)
High-Tension Cable Barrier	• End terminal (proprietary)
Note: For more information and options, see FDM Chapter 215 and the Standard Plans for the corresponding barrier types.	

Ch. 4 Updates (Editing)

8. Flipped order of clear zone tables

9. Flipped end treatment table columns

10. Filled in Standard Plans lists

The FDOT [Standard Plans](#) listed below provide details and instructions for the design of traffic signal supports:

- Index 641-010: Concrete poles
- Index 641-020: Concrete CCTV pole
- Index 646-001: Aluminum post and pedestal mounted pedestrian detectors and signals
- Index 649-010: Steel strain pole
- Index 649-020: Steel CCTV pole
- Index 649-030: Standard mast arm assemblies
- Index 649-031: Mast arm assemblies
- Index 653-001: Pedestrian control signal installation details
- Index 654-001: RRFB assembly

4.7.1 FDOT Concrete Systems

The concrete barriers used in Florida are detailed in the following FDOT [Standard Plans](#):

- Index 521-001: Concrete Barrier
- Index 521-002: Pier Protection Barrier
- Index D521-005: Concrete Barrier at Toll Sites
- Index 521-010: Opaque Visual Barrier
- Index 521-510, 521-511, 521-512, 521-513, 521-514, 521-515: Concrete Barrier/Noise Walls
- Index 521-600: MSE Wall Coping (Precast or C-I-P)
- Index 521-610, 521-611: Concrete Barrier/Junction Slab—Wall Coping
- Index 521-620: Concrete Barrier/Raised Sidewalk—Wall Coping
- Index 521-630: Parapet With C-I-P Sidewalk—Wall Coping
- Index 521-640: Drainage Inlet Openings in Junction Slab—Wall Coping
- Index 521-650: Light Pole Pedestal—Wall Coping

Ch. 4 Updates (Editing)

8. Flipped order of clear zone tables
9. Flipped end treatment table columns
10. Filled in Standard Plans lists
11. Reference list

4.12 References for Informational Purposes

American Association of State Highway and Transportation Officials (AASHTO)

- [Manual for Assessing Safety Hardware 2nd Edition \(2016\)](#)
- [Roadside Design Guide 4th Edition \(2011\)](#)
- [Guide for Pavement Friction](#)
- [Guidelines for Geometric Design of Very Low-Volume Local Roads \(ADT \$\leq\$ 400\) \(1999\)](#)

Florida Department of Transportation (FDOT)

- [Approved Products List](#)
- [FDOT Design Manual \(2026\)](#)
- [Developmental Standard Plans](#)
- [Developmental Specifications](#)
- [Drainage Manual \(2016\)](#)
- [High Friction Surface Treatment Guidelines](#)
- [Standard Plans and Standard Plans Instructions](#)
- [Standard Specifications for Road and Bridge Construction](#)
- [Structures Design Guidelines](#)
- [Target Zero](#)
- [Utility Accommodation Manual \(2017\)](#)

Federal Highway Administration (FHWA)

- [Barrier Guide for Low Volume and Low Speed Roads \(2005\)](#)

Excerpt. More references
provided in chapter.



Committee Discussion & Next Steps

General Discussion

OPEN FOR PUBLIC COMMENT



Online Attendees *Meeting Logistics*



The chat feature can be used to ask questions to the presenters or share resources.



Be sure to mute your microphone unless you are asking a question.



You may turn on or off your video camera accordingly.



Raise your virtual hand to ask a live question.



CONTACT

If you have any questions, comments or suggestions regarding the ***Florida Greenbook***, please contact:

Derwood Sheppard, P.E.

State Roadway Design Engineer

Email: Derwood.Sheppard@dot.state.fl.us

Phone: (850) 414-4334

Jacqui Morris, CPM, CNUa

Criteria Publications Coordinator

Email: jacqueline.Morris@dot.state.fl.us

Phone: (850) 414-4352

Thank you for attending!



Chapter 4

Roadside Safety Design

4.1	Introduction.....	4-3
4.1.1	Overview of Roadside Safety Design	4-3
4.1.2	Context-Based Design	4-3
4.1.3	How to Use This Chapter	4-3
4.2	Keep Vehicles on the Roadway	4-4
4.3	Provide for Safe Recovery.....	4-6
4.3.1	The Clear Zone.....	4-6
4.3.2	Roadside Hazards	4-9
4.3.3	Design Option Hierarchy for Treating Roadside Hazards in the Clear Zone	4-9
4.3.4	Slopes in the Clear Zone	4-9
4.3.5	SafetyEdge Technology	4-14
4.3.6	Minimum Lateral Offset.....	4-14
4.3.7	Border Width (Area).....	4-16
4.4	Design Requirements for Functional Roadside Infrastructure	4-16
4.4.1	Performance Requirements for Breakaway Devices	4-16
4.4.2	Trees.....	4-16
4.4.3	Sign Supports	4-17
4.4.4	Traffic Signal Supports.....	4-18
4.4.5	Lighting Supports.....	4-18
4.4.6	Utility Poles	4-19
4.4.7	Midblock Crossing Infrastructure	4-20
4.4.8	Fire Hydrants	4-20
4.4.9	Railroad Crossing Warning Devices	4-20
4.4.10	Mailbox Supports	4-21
4.4.11	Bus Benches and Shelters.....	4-23
4.4.12	Curbs	4-23
4.4.13	Drainage Structures	4-24
4.4.14	Canals and Water Bodies	4-24
4.4.15	Retaining Walls and Noise Walls	4-27
4.4.16	Poles for Intelligent Transportation Systems.....	4-28
4.5	Longitudinal Barrier Evaluation, Selection, and Design	4-29
4.5.1	Overview of Roadside Barriers	4-29

4.5.2	Crash Test Criteria and Evaluation Criteria	4–30
4.5.3	Safety Hardware Upgrades	4–30
4.5.4	Barrier Selection Guidelines	4–31
4.5.5	Barrier Placement	4–31
4.5.6	Median Barrier Warrants	4–35
4.5.7	Attachments to Barriers	4–36
4.6	Semi-Rigid (Metal Guardrail) Barriers	4–37
4.6.1	FDOT Guardrail Systems	4–37
4.6.2	Installation Guidance and Considerations	4–38
4.6.3	Roadside Safety Hardware in Low-Speed Environments ...	4–38
4.7	Rigid (Concrete) Barriers	4–40
4.7.1	FDOT Concrete Systems	4–40
4.7.2	Installation Guidance and Considerations	4–41
4.8	Flexible (High-Tension Cable) Barriers	4–41
4.8.1	FDOT Systems	4–42
4.8.2	Installation Guidance and Considerations	4–42
4.9	Treating Barrier Ends	4–43
4.9.1	Overview and Types of Barrier Ends	4–43
4.9.2	Crash Test Criteria	4–45
4.9.3	Approach Terminals (for Flexible and Semi-Rigid Barriers)	4–45
4.9.4	Trailing Anchorages (for Flexible and Semi-Rigid Barriers)	4–45
4.9.5	Crash Cushions (for Rigid Barriers, Semi-Rigid Barriers, and Miscellaneous Hazards)	4–46
4.9.6	Barrier Transition Connections (from Semi-Rigid to Rigid Barriers)	4–47
4.10	Bridge Traffic Railings	4–47
4.11	Roadside Safety in Work Zones (Temporary Barriers)	4–47
4.11.1	Overview of Work Zone Roadside Safety	4–47
4.11.2	Clear Zone Width in Work Zones	4–48
4.11.3	Aboveground Hazards in Work Zones	4–48
4.11.4	Non-Traversable Edge Drop-Offs, Critical Slopes, and Roadside Excavations	4–49
4.11.5	Temporary Barrier Usage in Work Zones	4–50
4.11.6	End Treatments for Temporary Barriers	4–51
4.12	References for Informational Purposes	4–52

4 Roadside Safety Design

4.1 Introduction

4.1.1 Overview of Roadside Safety Design

Roadside safety is vital to the goal of reducing fatalities and serious injuries on our roadway facilities. Accordingly, this chapter focuses on preventing and mitigating roadway departure crashes. Roadway departure crashes are the result of errant vehicles exiting the intended traveled way before ultimately colliding with another vehicle, rolling over, or encountering hazards such as fixed objects or drop-offs.

The Federal Highway Administration (FHWA) identifies a hierarchy of [three types of countermeasures](#) to address roadway departure crashes: (1) keep vehicles on the roadway; (2) provide for safe recovery; and (3) reduce crash severity. These concepts generally form the basis for roadside safety design.

Further, roadside safety supports the [USDOT Safe System Approach](#) and [FDOT Target Zero](#) initiatives, which both have the goal of eliminating fatal and serious injuries on Florida's roadways.

4.1.2 Context-Based Design

Considering context classification generally means thinking about the way the roadway types, roadside areas, design speeds, and facility users might influence design decisions. For example, locations with high truck traffic and limited space may benefit from “rigid” concrete barriers, while locations with large and clear medians may benefit from a “flexible” cable barrier system. Alternatively, a “semi-rigid” guardrail system may offer the best solution for balancing the needs of cost and deflection space available. Next, some rural or natural locations may offer roadside conditions with clear and level terrain, so clear zone needs can be met with no barrier shielding needed. By contrast, more urbanized locations tend to have more roadside objects and hazardous features, so barrier shielding is more likely required to improve safety. The goal of this chapter is to provide roadway designers with the information needed to address a wide variety of contexts and conditions for roadside safety.

4.1.3 How to Use This Chapter

FDOT roadside safety and design criteria are provided in the following documents:

- This Florida Greenbook provides minimum requirements for roadways governed by local agencies, including cities and counties, that are *not* on state or national highway systems (i.e., off-system roadways).
- The FDOT Design Manual (FDM) provides design requirements for roadway facilities on Florida’s state or national highway systems (i.e., on-system roadways).
 - The FDM is supplemented by additional publications, including the FDOT Standard Plans, which includes Standard Plans Instructions (SPIs), and Standard Specifications for Road and Bridge Construction. These documents may be used for additional information at the discretion of local agencies.

In addition, national roadside safety and design guidance is provided in the following:

- The AASHTO Roadside Design Guide (RDG) 4th Edition (2011) provides guidance on roadside design elements, including different barrier types, tradeoffs, and use cases.
- The AASHTO Manual for Assessing Safety Hardware (MASH) 2nd Edition (2016) provides guidance on assessing and evaluating the performance of roadside safety hardware.
- Several additional resources are made available through [FHWA’s Roadway Departure Safety webpage](#).
- The FHWA Manual on Uniform Traffic Control Devices (MUTCD) 11th Edition (2023) specifies standards for traffic control devices, including traffic signs, signals, and surface markings, among others.

4.2 Keep Vehicles on the Roadway

The first consideration for roadside safety design concerns preventing roadway departures before they occur. Described below are some of the design features that can reduce the likelihood of vehicles departing the roadway:

- **Rumble strips:** Raised and ground-in rumble strips provide auditory and haptic warnings to drivers who have encroached on the lane boundary. Rumble strips can be used on their own or in conjunction with striping.
 - [Standard Plans](#), Index 546-001: Raised Rumble Strips
 - [Standard Plans](#), Index 546-010: Ground-In Rumble Strips—Limited Access
 - [Standard Plans](#), Index 546-020: Ground-In Rumble Strips—Arterials and Collectors
 - This option is designed with a “sinusoidal” wave pattern that reduces noise outside the vehicle while still being felt and heard inside the vehicle. This helps reduce disturbances to nearby homes and businesses.

- **Wider edge lines:** Edge lines are used to identify the boundaries of travel lanes. Increasing the width of edge lines from 4 to 6 inches has been shown to reduce road departure crashes.
 - [Standard Plans](#), Index 711-001: Pavement Markings
 - [FHWA Proven Safety Countermeasure: Wider Edge Lines](#) (FHWA-SA-21-055)
- **Pavement friction:** Pavement friction treatments are used to enhance friction and skid resistance. These treatments can be particularly helpful where vehicles are frequently turning, slowing, and stopping.
 - [FDOT High Friction Surface Treatment Guidelines](#)
 - [AASHTO Guide for Pavement Friction \(2022\)](#)
 - [FHWA Proven Safety Countermeasure: Pavement Friction Management](#) (FHWA-SA-21-052)
 - [FHWA High Friction Surface Treatment Site Selection and Installation Guide](#) (FHWA-SA-21-093)
- **Horizontal curve safety:** Horizontal curve safety countermeasures help drivers identify the location and nature of horizontal curves so they can safely adjust their speed and direction to successfully negotiate the curve. Examples of horizontal curve safety countermeasures include reflective pavement markers, chevron signs, speed advisory signs and pavement markings, and speed feedback signs. For a more comprehensive list, see the resources below.
 - [FHWA Horizontal Curve Safety](#)
 - [FHWA Proven Safety Countermeasure: Roadside Design Improvement at Curves](#) (FHWA-SA-21-029)
- **Nighttime visibility:** Nighttime visibility countermeasures help improve visibility of and for all road users. This includes visibility of other road users as well as roadway characteristics and facilities.
 - [Standard Plans](#), Index 706-001: Typical Placement of Raised Pavement Markers
 - [FHWA Proven Safety Countermeasure: Lighting](#) (FHWA-SA-21-050)

In addition to road-based countermeasures, there are also in-vehicle systems that aim to reduce and eliminate road departure events. For example, some newer vehicles offer lane departure warning (LDW) and lane keep assist (LKA) systems that use a combination of haptic, auditory, and visual warnings to alert drivers when they are encroaching on the lane boundary. In addition to warning cues, LKA systems will provide minor steering assistance to

redirect the vehicle to stay in the appropriate travel lane. Maintaining MUTCD-compliant lane and edge lines help these systems to perform as intended.

4.3 Provide for Safe Recovery

Should an errant vehicle depart the roadway, the ideal scenario would result in the driver returning their vehicle safely to the roadway without rolling over or colliding with any roadside hazards. This section provides information on roadside features and clear areas required to help errant vehicles safely recover from roadway departures.

4.3.1 The Clear Zone

The clear zone is the portion of the roadside that shall be kept clear of hazards to help avoid roadway departure crashes (see Section 4.3.2: Roadside Hazards). The clear zone is measured from the outside edge of traveled way and includes shoulders and bicycle lanes if present. Refer to the following tables, figures, and chapter sections for additional guidance related to the clear zone and roadside hazards:

- See Table 4-1 and Table 4-2 for minimum clear zone width requirements. Clear zone width requirements depend on annual average daily traffic (AADT), design speed, and roadside slope conditions.
- See Figure 4-1 and Figure 4-2 for additional clear zone location information.
- See Section 4.3.2: Design Option Hierarchy for Treating Roadside Hazards in the Clear Zone.
- See Section 4.3.3: Slopes in the Clear Zone.
- See Section 4.4: Design Requirements for Functional Roadside Infrastructure for clear zone guidance for specific types of hazards.

Note that not all fixed objects are considered hazards, and not all fixed objects require treatment if within the clear zone. For more information on roadside hazards and these special considerations, see Section 4.3.2: Roadside Hazards Section 4.3.4: Minimum Lateral Offset and Section 4.4: Design Requirements for Functional Roadside Infrastructure.

Table 4-1. Minimum Clear Zone Distance (ft) (20–35 mph)

Design Speed (mph)	Design ADT	Front Slopes			Back Slopes		
		1V:6H or Flatter	1V:5H to 1V:4H	1V:3H	1V:3H	1V:5H to 1V:4H	1V:6H or Flatter
20	Under 750 750–1,500 1,500–6,000 Over 6,000	2–6 3–7 5–8 7–10	3–7 5–8 6–10 7–10	See “Note 1” below	2–6 2–6 3–7 5–8		3–7 3–7 5–8 7–10
25–30	Under 750 750–1,500 1,500–6,000 Over 6,000	3–7 5–8 7–10 7–10	5–8 6–10 7–10 10–12		2–6 3–7 5–8 7–10		3–7 5–8 7–10 7–10
35	Under 750 750–1,500 1,500–6,000 Over 6,000	5–8 7–10 10–12 12–14	6–10 7–12 12–14 14–16		3–7 5–8 7–10 10–12		5–8 7–10 10–12 12–14
Note 1: Front slopes between 1V:4H and 1V:3H are traversable but non-recoverable. Since vehicles will not reduce speed or change direction on these slopes, the needed clear zone is determined by the slopes above and below the non-recoverable slope and extended by the width of the non-recoverable slope. See the AASHTO RDG 4th Edition (2011) for more information on this procedure. Front slopes steeper than 1V:3H are considered hazards. Note 2: This guidance is sourced from the FHWA's 2005 Barrier Guide for Low Volume and Low Speed Roads.							

Table 4-2. Minimum Clear Zone Distance (ft) (40–70 mph)

Design Speed (mph)	AADT ≥ 1500			AADT < 1500			AADT ≤ 400
	Travel Lanes & Multilane Ramps		Aux Lanes & Single Lane Ramps	Travel Lanes & Multilane Ramps		Aux Lanes & Single Lane Ramps	
	1V:6H or Flatter	1V:5H to 1V:4H	1V:4H or Flatter	1V:6H or Flatter	1V:5H to 1V:4H	1V:4H or Flatter	
≤ 35	See Table 4-2: Minimum Clear Zone Distance (ft) (20–35 mph)						
40	14	16	10	10	12	10	Preferred: 6 Exception: Less than 6 where constraints of cost, terrain, right of way, or potential social/environmental impacts make the provision of a 6 feet clear zone impractical.
				7 if AADT < 750 vehicles/day			
45–50	20	24	14	14	16	14	
55	22	26	18	16	20	14	
60	30	30 ¹	24	20	26	18	
65–70	30	30 ¹	24	24	28	18	
1. Greater clear zone widths provide additional safety for higher-speed and -volume roads. See Section 3.1 of the <u>AASHTO RDG 4th Edition (2011)</u> for further information.							

Figure 4-1. Clear Zone Plan View (Two-Lane, Two-Way Roadway)


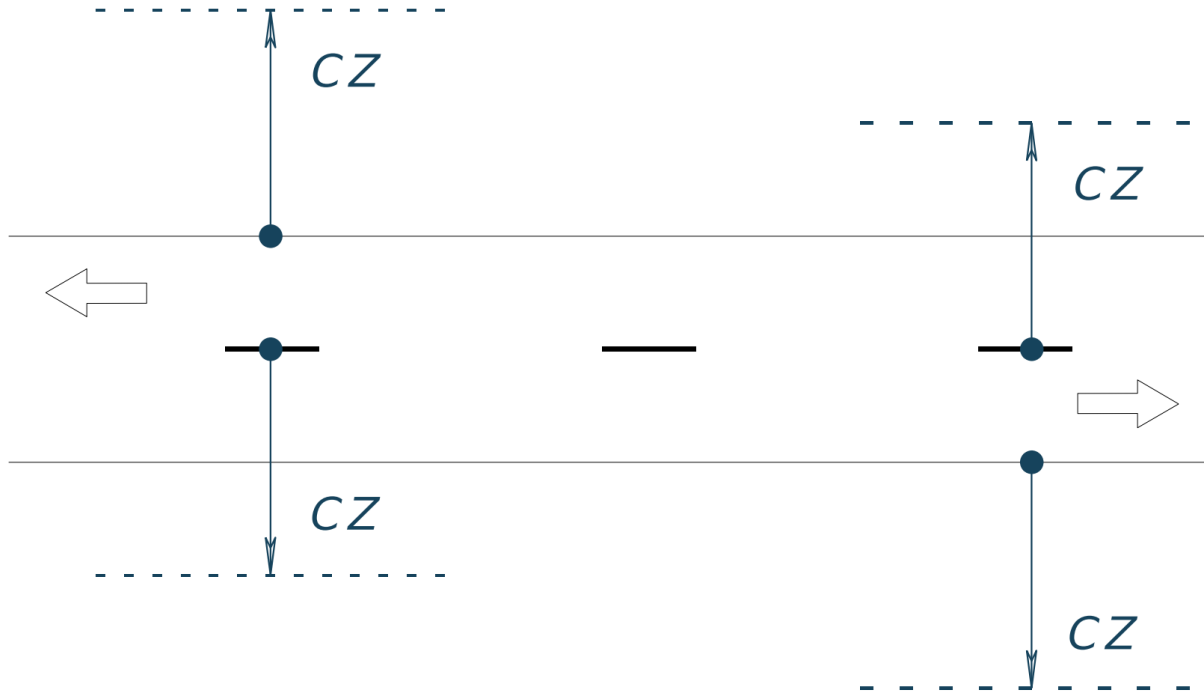


Figure 4-2. Clear Zone Plan View (Multilane, Two-Way Roadway)

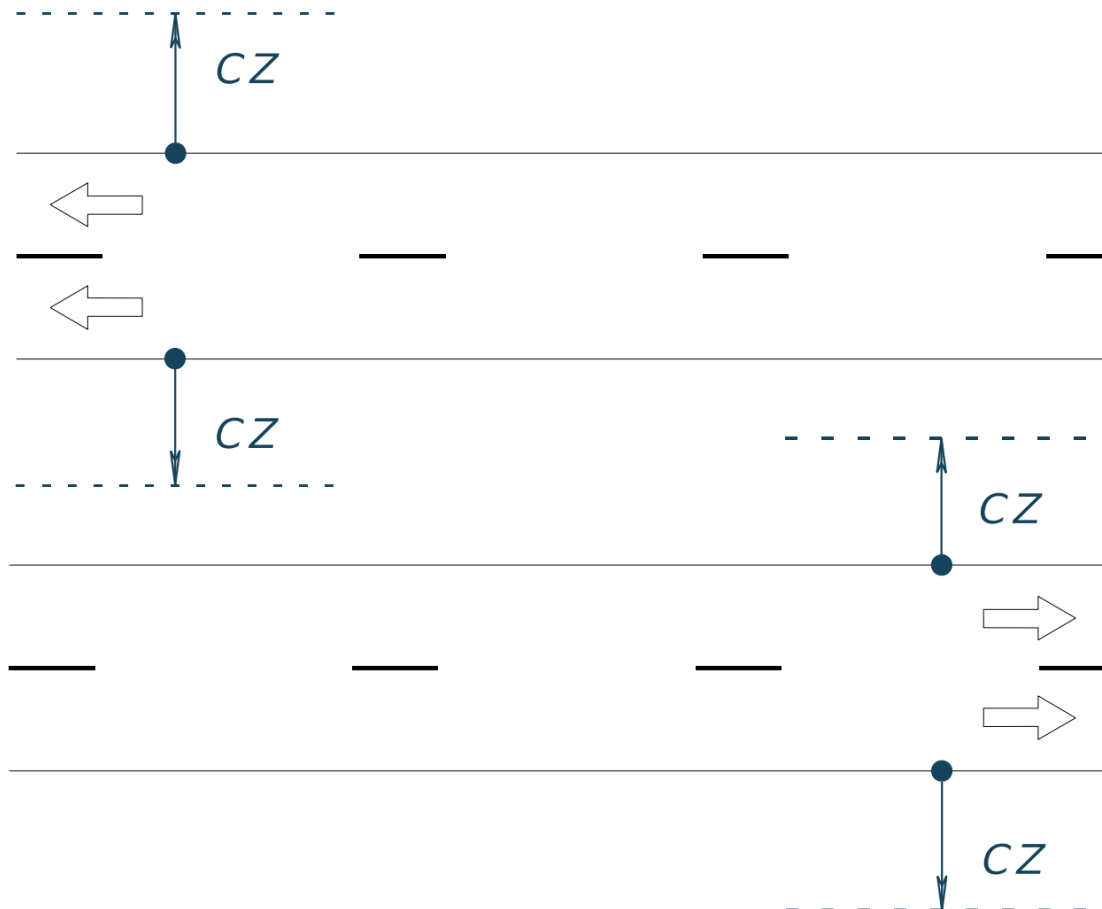

4.3.2 Roadside Hazards

A roadside **hazard** is a feature on the roadside that could pose harm to the occupant(s) of an errant vehicle departing the roadway. Such hazardous features include:

1. **Aboveground fixed objects** taller than 4 inches that are firm and unyielding
2. **Steep cross slopes** not meeting the requirements of Section 4.3.3.2
3. **Roadside ditches** not meeting the requirements of Section 4.3.3.2
4. **Drop-off hazards**, per Table 4-3
5. **Water bodies and canal hazards**, per Section 4.4.14

4.3.3 Design Option Hierarchy for Treating Roadside Hazards in the Clear Zone

There are several design options that can be used to address hazards within the clear zone. The following design options are adapted from the AASHTO RDG 4th Edition (2011). This hierarchy should be used to determine the appropriate course of action to protect vehicle occupants from roadside hazards:

1. **Remove** the roadside feature.
2. **Redesign** the feature so it can be traversed safely (including steep slopes, ditches, and drop-offs).
3. **Relocate** the feature to a point where it is less likely to be encountered.
4. **Reduce** impact severity by using an appropriate breakaway device or crash cushion.
5. **Shield** the feature with a longitudinal traffic barrier if it cannot be eliminated, relocated, or redesigned.
6. **Delineate** the feature if the above alternatives are not practical or cost effective.

In addition to the design option hierarchy, the AASHTO RDG 4th Edition (2011) provides guidance on the preferred treatments for different types of hazards.

4.3.4 Slopes in the Clear Zone

In addition to being free from roadside hazards, per Section 4.3.1: The Clear Zone and Roadside Hazards and Section 4.3.2: Design Option Hierarchy for Treating Roadside Hazards in the Clear Zone, clear zones shall also consider any roadside slopes.

4.3.4.1 Types of Slopes

Roadside slopes are described in three ways:

1. **Front Slope (i.e., Foreslope):** A cross slope measured in the direction perpendicular to the roadway, resulting in a decreasing finished grade elevation with increasing distance from the roadway. This is often the slope that is closest to the roadway, and the bottom of this slope is generally referred to as the toe.
2. **Back Slope:** A cross slope measured in the direction perpendicular to the roadway, resulting in an increasing finished grade elevation with increasing distance from the roadway. This slope is generally farther from the roadway than the front slope, but not always.
3. **Transverse Slope:** A slope that is measured in the direction parallel to the roadway. This is often created by a side street or driveway.

For additional information and visuals regarding roadside slope terminology, see Figure 4-5 and Figure 4-6 below and consult the AASHTO RDG 4th Edition (2011).

4.3.4.2 Slope Grade Categories

Slopes may be traversable (recoverable or non-recoverable) or non-traversable. The following summarizes these categories of slope grading:

1. **Traversable Slope**—Smooth terrain, unobstructed by fixed objects:
 - a. **Traversable, Recoverable**, 1V:4H or flatter
 - b. **Traversable, Non-Recoverable**, 1V:3H or flatter and steeper than 1V:4H
2. **Non-Traversable Slope**—Rough terrain, obstructed, or slopes steeper than 1V:3H

Roadside front slopes shall generally be considered “Traversable, Recoverable” for the entire clear zone width per Figure 4-3. Where a steeper slope is needed within the clear zone, “Traversable, Non-Recoverable” slope may be used, but the overall clear zone width shall then be extended by the width of this steeper slope, per Figure 4-4. Additionally, the outermost 10 feet of this adjusted clear zone should be “Traversable, Recoverable” slope where practical, as shown in Figure 4-4.

For curbed roadways with restricted right-of-way area, front slopes of 1V:2H or flatter may be used only as necessary to meet the finished grade elevation at the right-of-way line. Where possible, use flatter slopes and place the steepest slopes as far from the roadway as practical.

Back slopes of 1V:3H or flatter may be located within the clear zone width. However, when the combination of front slope and back slope creates a roadside ditch condition per Figure 4-5 and Figure 4-6, all the requirements in the provided chart shall be met.

Last, provide transverse slopes of 1V:10H or flatter for freeways and interstates. For all other roadways, slopes of 1V:4H or flatter may be used.

For drop-off hazard slope condition definitions, see **Table 4-3**.

Figure 4-3. Basic Clear Zone Concept

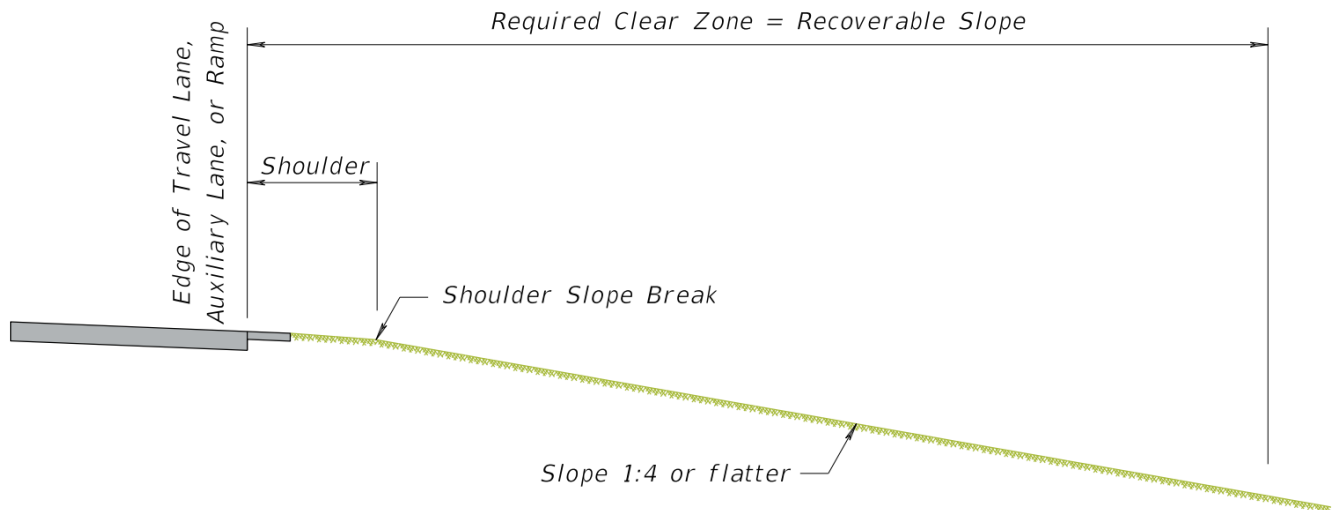


Figure 4-4. Adjusted Clear Zone Concept

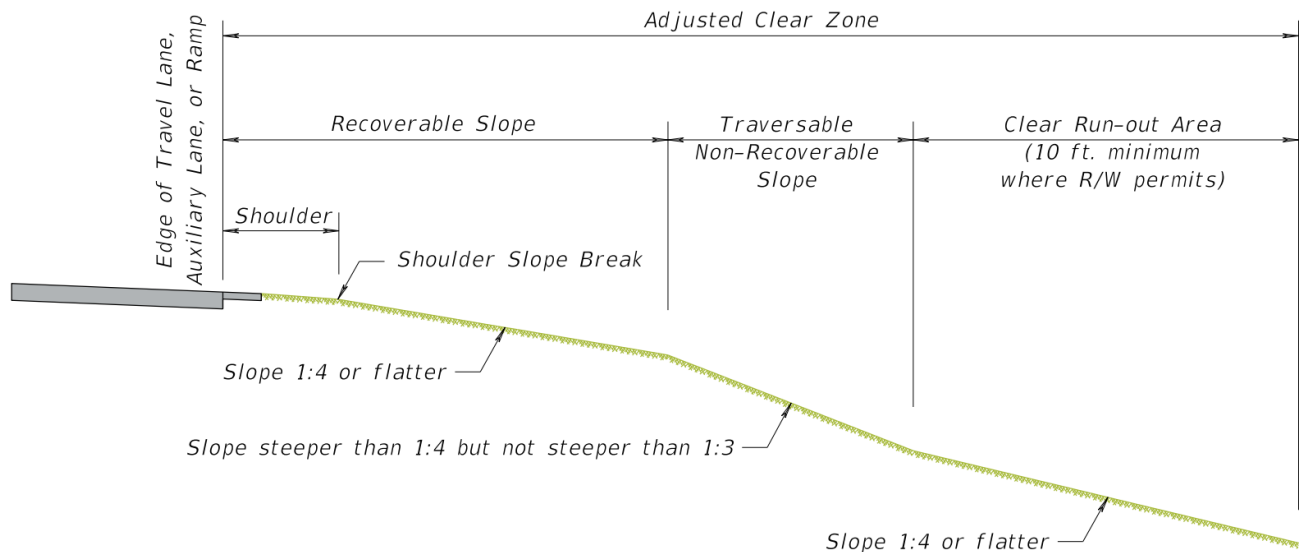


Figure 4-5. Roadside Ditches—Bottom Width 0 to < 4 ft (Source: Figure 3-6, AASHTO Roadside Design Guide 4th Edition [2011])


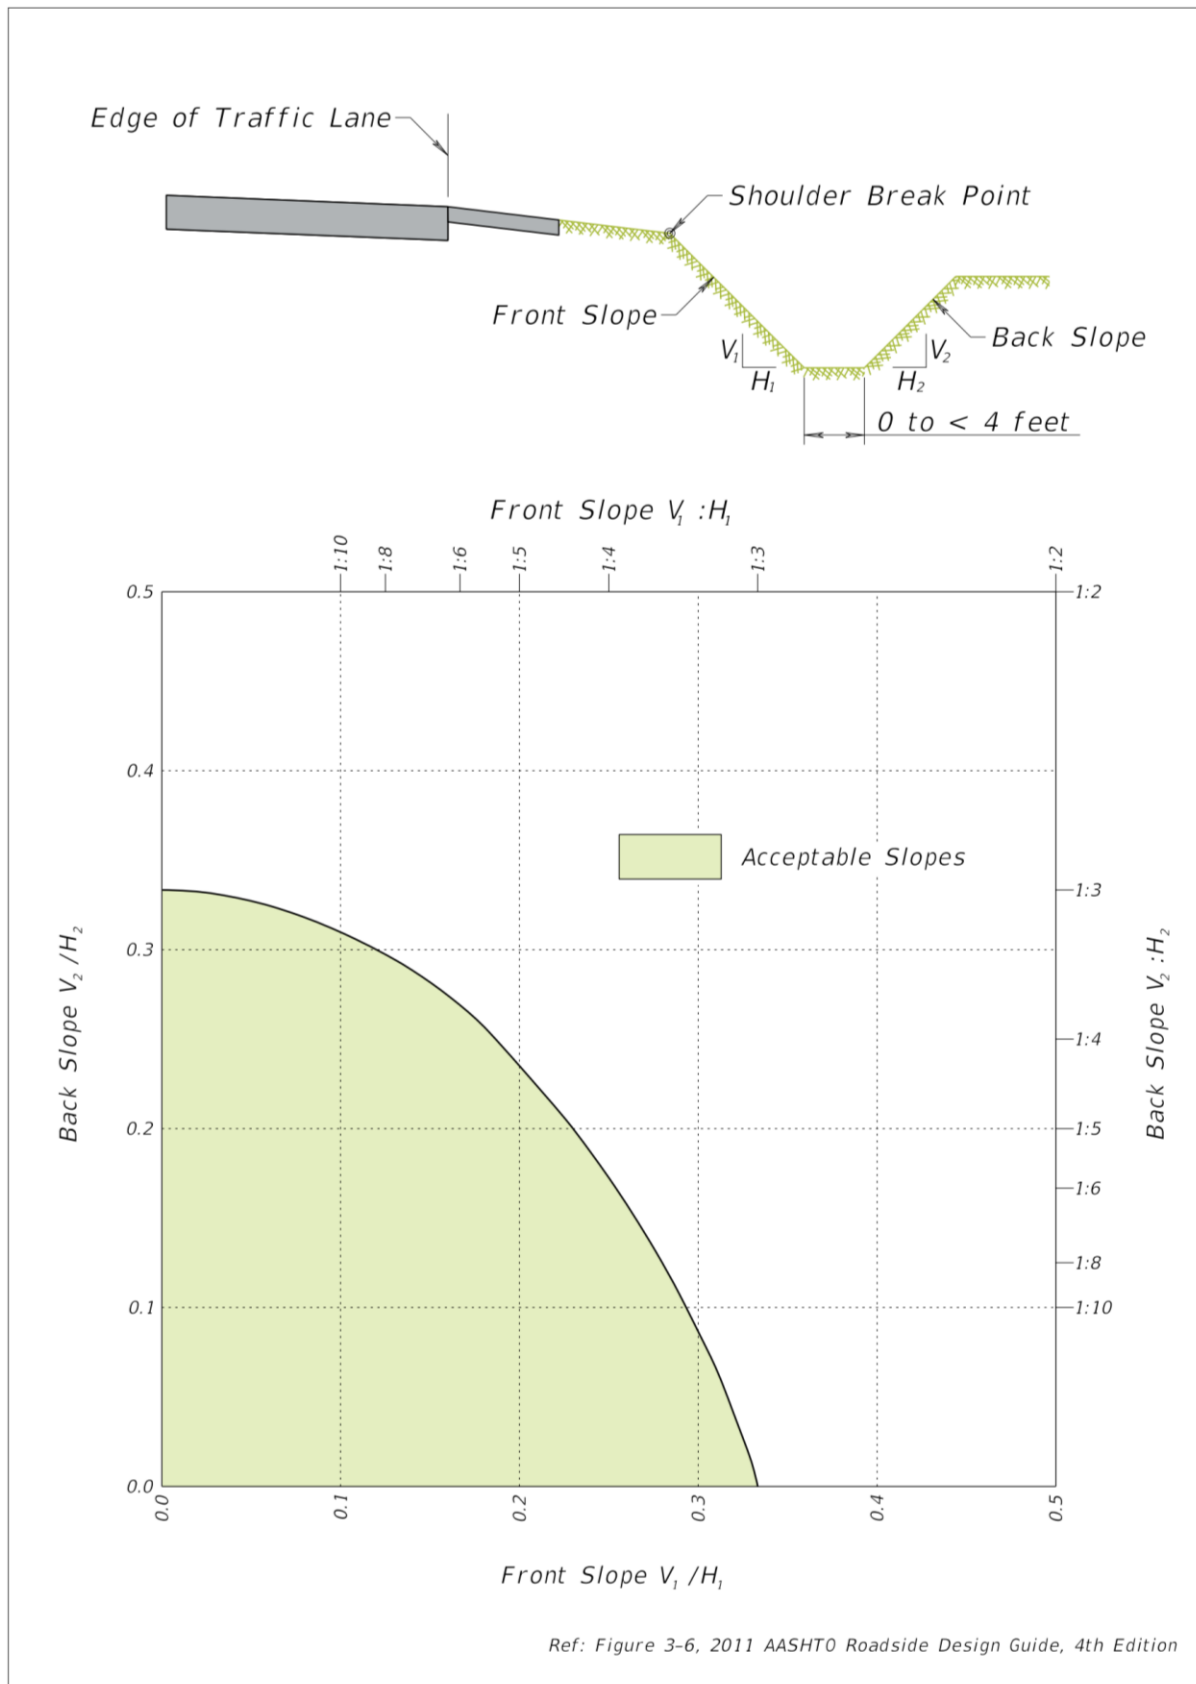


Figure 4-6. Roadside Ditches—Bottom Width ≥ 4 ft (Source: Figure 3-6, AASHTO Roadside Design Guide 4th Edition [2011])

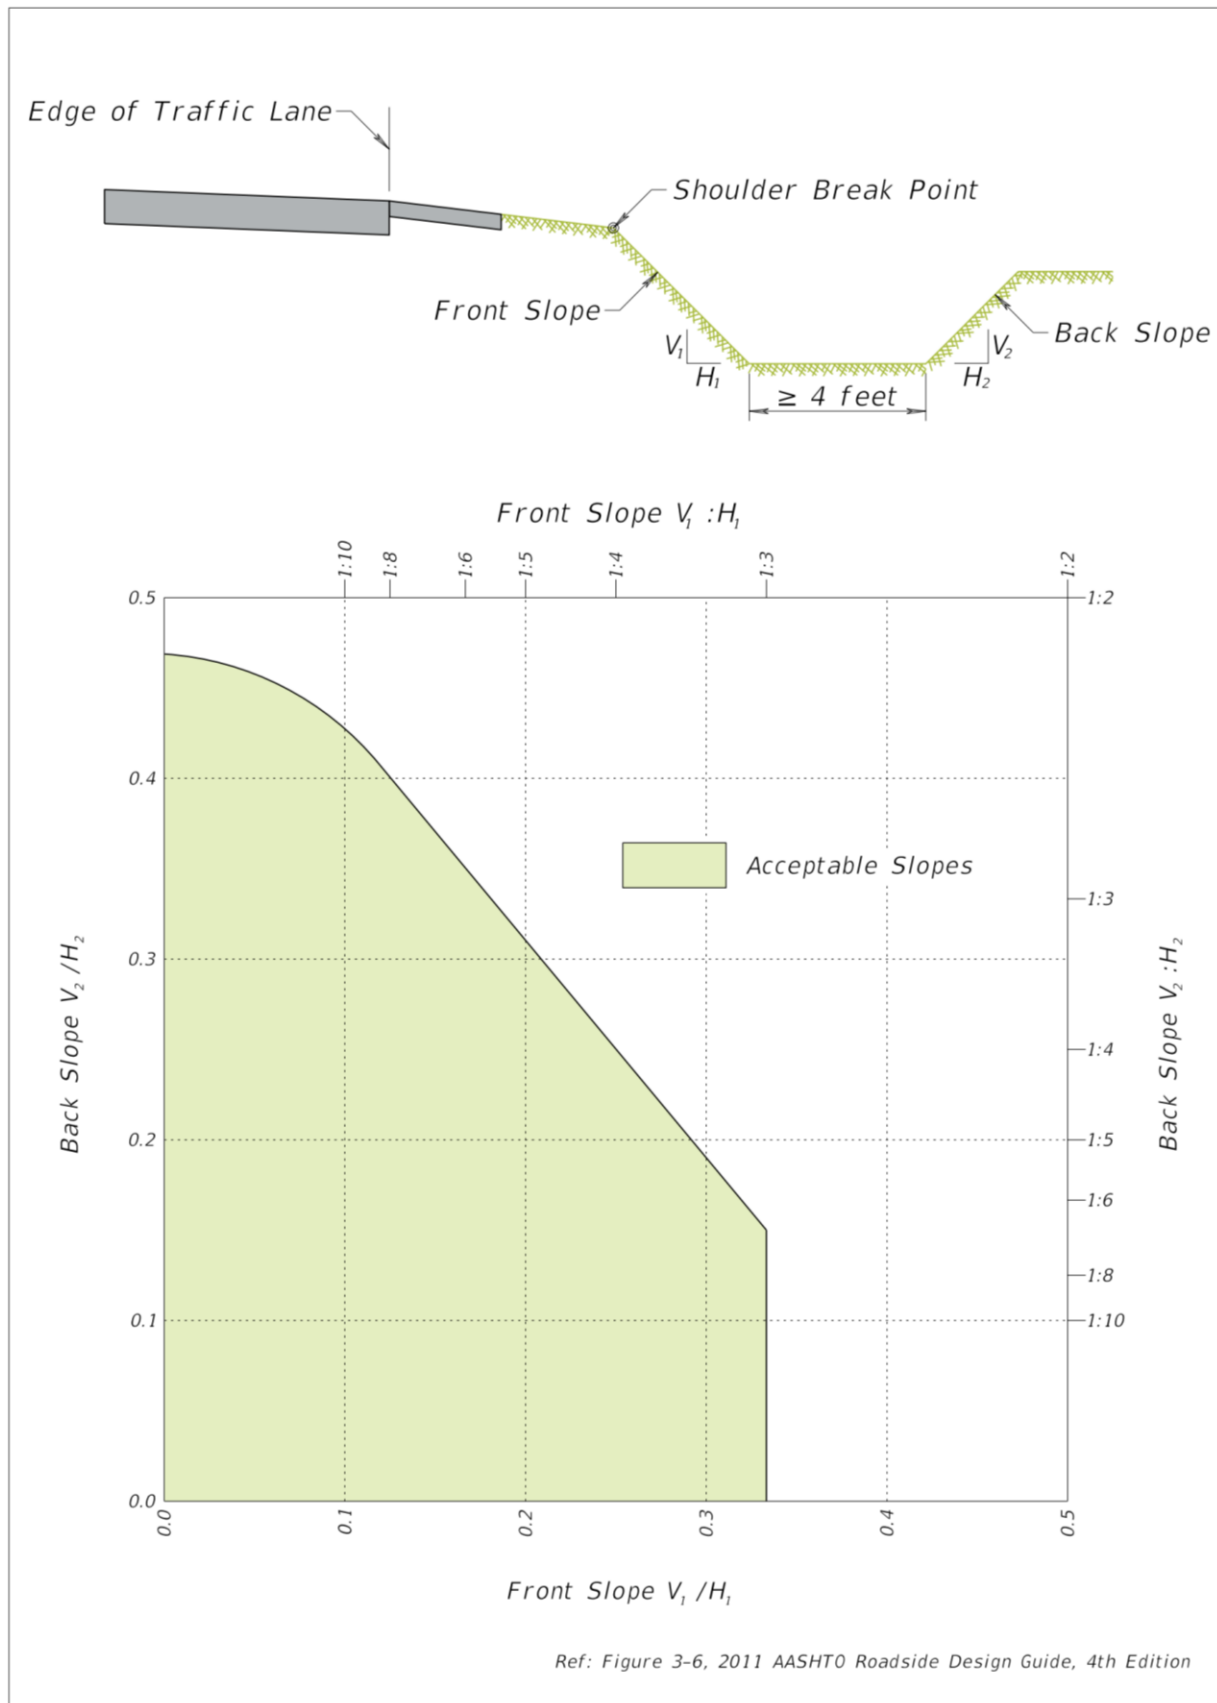

4.3.5 SafetyEdge Technology

When drivers mistakenly depart the roadway, small vertical drop-offs at the edge of pavement may prevent them from easily returning to the roadway. This issue is typically caused by soil erosion at the edge of pavement. To overcome such drop-offs, errant drivers may increase their steering and acceleration inputs. This can result in a loss of control, vehicle rollover, or steering overcorrection that may lead to a collision.

To help reduce such vertical drops and vehicle instability, SafetyEdge technology can be applied during the paving process to shape the pavement edge to 30-degree slopes. This treatment can also improve pavement durability by reducing edge raveling. See Chapter 10: Maintenance and Resurfacing for more detailed information on how and when to apply SafetyEdge. In addition, the following sources provide further information.

- [FHWA Proven Safety Countermeasure: SafetyEdge](#) (FHWA-SA-21-038)
- [Safety Evaluation of the SafetyEdge Treatment, Summary Report](#) (FHWA-HRT-11-025)

4.3.6 Minimum Lateral Offset

Due to right-of-way limitations, it is often necessary to place functional roadside components within the clear zone. Such roadside components include fixed objects that are integral to the safe and efficient operation of roadway operations, including but not limited to light poles, signal supports, and bridge piers.

These components are subject to the minimal lateral offset requirements per Table 4-3. The minimum lateral offset is the minimum distance that a hazardous feature shall be placed from the roadway. Minimum lateral offset requirements offer additional requirements and considerations which may supersede the clear zone concept. Like the clear zone, lateral offset is measured from the roadway's edge of traveled way or the face of curb, if present.

It's important to consider that these values are considered a “minimum” requirement, meaning hazards should be placed farther than the minimum lateral offset wherever practical.

For more information on the lateral offset requirements for individual roadside features, see Section 4.4: Design Requirements for Functional Roadside Infrastructure.

Table 4-3. Minimum Lateral Offset Distances (ft)

Roadside Feature	Minimum Lateral Offset (Distance from Face of Curb or Edge of Traveled Way, ft)			
	Urban Curbed Roadways			All Other
	Design Speed ≤ 25 mph Context Classification: Urban Center (C5) or Urban Core (C6)	Design Speed ≤ 45 mph		
		Low-Volume Roads (≤ 400 vpd)	All Roads	
Aboveground Objects - See Section 4.4 for applicable roadside items. - For urban curbed areas ≤ 45 mph, this generally includes only crashworthy or breakaway objects except those necessary for the safe operation of the roadway, per Section 4.4. - Aboveground features include bridge piers, abutments, and other aboveground structures. Note: A design variation for failure to meet clear zone criteria is not required for existing, low-speed, curbed roadways if the requirements for the placement of aboveground fixed objects are met. See Chapter 14 for more details on design exceptions and variations.	1.5	Preferred: 1.5 Exception: 6” where corridor is constrained See: AASHTO’s Guidelines for Geometric Design of Very Low-Volume Local Roads (ADT ≤ 400)	Preferred: 4 Exception: 1.5 where 4 cannot be reasonably obtained and other alternatives are impractical	Clear zone width
Drop-Off Hazards, which include... - Any vertical-faced structure with a drop-off (e.g., retaining wall, wing wall, etc.) that is located within the clear zone. - Slopes that are steeper than 1V:3H and higher than 6 feet that are located within the clear zone. - Slopes steeper than 1V:2H. - Any drop-off with a significant crash history.	Clear zone width			
Water Bodies	Clear zone width			
Canal Hazards Canal hazard lateral offset is the distance from the edge of travel lane, auxiliary lane, or ramp to the top of the canal side slope nearest the road. See Section 4.4.14 for more information.	For design speed ≤ 45 mph: 40 feet on curbed roadways 50 feet on flush shoulder roadways For design speed 50+ mph: 60 feet on all roadways			

4.3.7 Border Width (Area)

Border width, also known as border area, “provides space for roadside design components (e.g., signing, drainage features, sidewalks, and traffic control devices), a buffer between vehicles and pedestrians, and permitted public utilities. It also provides space for construction and maintenance of the facility.” For more details on border area, see Chapter 3: Geometric Design.

4.4 Design Requirements for Functional Roadside Infrastructure

In addition to the clear zone and minimum lateral offset requirements, roadside components and features often have unique considerations based on differing roadway contexts and historical best practices. This section provides this additional information for specific items.

4.4.1 Performance Requirements for Breakaway Devices

Except for some specific items permitted to follow minimum lateral offsets, roadside objects located within the clear zone shall meet breakaway criteria to reduce impact severity. If objects in the clear zone cannot meet breakaway criteria, then shielding with barriers may be warranted and shall be considered per Section 4.5: Longitudinal Barrier Evaluation, Selection, and Design.

The term “breakaway” generally refers to traffic sign, highway lighting, and other supports that are designed to yield, fracture, or separate when impacted by a vehicle. The release mechanism may be a slip plane, plastic hinge, fracture element, or combination thereof. Typically, the term “breakaway” inherently refers to *crashworthy* breakaway devices. This means that the device performs in such a way that it is compliant with the breakaway device performance requirements set forth in NCHRP Report 350 (NCHRP 350), the AASHTO Standard Specifications for Structural Supports for Highway Signs, Luminaries, and Traffic Signals, or the AASHTO MASH 2nd Edition (2016) (See 4.5.2: Section Crash Test Criteria and Evaluation Criteria). Devices that break away upon impact but that do not conform to the AASHTO MASH 2nd Edition (2016) guidelines should be treated as non-breakaway devices.

4.4.2 Trees

For flush shoulder roadways, trees with an expected diameter of greater than 4 inches (when measured 6 inches above grade) shall be located to meet clear zone requirements in Table 4-1 and Table 4-2. Trees with multiple trunks or groups of small trees may be considered as one single tree with their combined cross-sectional area.

For curbed roadways, trees may be located to meet the minimum lateral offset per Table 4-3. Large trees should ideally be removed from within the clear zone for new construction and reconstruction projects where practical.

A note on context: Trees are often integrated into the roadside environment along lower speed or multimodal roadways. Trees may be used to achieve speed management in these contexts and in areas transitioning from rural to suburban or from suburban to rural contexts (“gateways”). However, features that are desirable in gateways, such as raised flowerbeds, trees, large signs, and walls, could be considered potentially hazardous roadside features. When making design decisions for these contexts, consider the mature size of trees and shrubs and specifically how these plantings will affect safety, visibility, and maintenance cost. Additionally, consider that trees should be combined with other gateway and traffic-calming features to achieve the desired effect, rather than posing an additional hazard.

The most recent version of the AASHTO RDG 4th Edition (2011) should be considered for additional discussion and guidance on trees. This includes reviewing the treatment and barrier guidelines for trees as well as any other sections that discuss trees as they relate to roadside safety and road departure crashes.

4.4.3 Sign Supports

4.4.3.1 Traffic Signs and Sign Supports

Traffic signs and sign supports shall meet the requirements provided in the MUTCD 11th Edition (2023) as stated in Chapter 18: Signing and Marking. The MUTCD 11th Edition (2023) requires all sign supports within the clear zone (see Table 4-1 and Table 4-2) to be shielded or breakaway (see Section 4.4.1: Performance Requirements for Breakaway Devices). Only when the use of breakaway supports is not practical should a traffic barrier or crash cushion be used exclusively to shield sign supports. In addition, sign supports should be located where they are least likely to be hit. Where possible, signs should be placed behind existing roadside barriers beyond the design deflection distance or on existing structures.

FDOT [Standard Plans](#) provide details for breakaway supports for single- and multi-post ground-mounted signs that are acceptable for use within the clear zone. The most current version of these [Standard Plans](#) should be used as FDOT maintains and updates these details as necessary to comply with required implementation dates for changes in crash test criteria.

4.4.3.2 Overhead Signs and Cantilever Signs

Overhead signs and cantilever signs require relatively large sign support systems. The potential safety consequences of these systems falling necessitate a fixed-base design that cannot be made breakaway. Overhead sign and cantilever sign supports therefore are required to be located outside the clear zone (Table 4-1 and Table 4-2) or to be shielded with a

crashworthy barrier (Section 4.5: Longitudinal Barrier Evaluation, Selection, and Design). Where possible, these supports should be located behind traffic barriers shielding nearby overpasses or other existing structures, or the signs should be mounted on the nearby structure. The FDOT [Standard Plans](#) provide details and instructions for the design of these systems.

4.4.4 Traffic Signal Supports

The traffic signal supports commonly used in Florida:

- are fixed base;
- shall meet the minimum lateral offset criteria provided in Table 4-3; and
- should not be located within medians.

The FDOT [Standard Plans](#) listed below provide details and instructions for the design of traffic signal supports:

- Index 641-010: Concrete poles
- Index 641-020: Concrete CCTV pole
- Index 646-001: Aluminum post and pedestal mounted pedestrian detectors and signals
- Index 649-010: Steel strain pole
- Index 649-020: Steel CCTV pole
- Index 649-030: Standard mast arm assemblies
- Index 649-031: Mast arm assemblies
- Index 653-001: Pedestrian control signal installation details
- Index 654-001: RRFB assembly

4.4.5 Lighting Supports

The minimum lateral offset criteria for lighting supports depend on whether the support is breakaway or fixed base, as discussed below. See Chapter 6: Lighting for additional design criteria for lighting.

4.4.5.1 Conventional Lighting (Breakaway Supports)

Supports for conventional lighting (with heights up to 60 feet) shall be breakaway, which are typically frangible bases (cast aluminum transformer bases), slip bases, or frangible couplings (couplers). See FDOT [Standard Plans](#) Index 715-002 and 715-003 for examples of such breakaway poles.

Generally, a breakaway lighting support will fall near the line of the path of an impacting vehicle. The mast arm usually rotates and points away from the roadway when resting on the ground. For poles located on the outside of the roadway (not in medians), this action generally results in the pole not falling into other traffic lanes. However, the designer should remain aware that these falling poles may endanger other motorists or bystanders such as pedestrians and bicyclists.

The following guidance applies to light structures with conventional breakaway supports:

- On curbed roadways with design speeds of 45 mph or less, breakaway lighting supports shall be located to meet the minimum lateral offset requirements provided in Table 4-3.
- On flush shoulder roadways, breakaway lighting supports shall be located according to the smallest value of the following:
 - a minimum of 20 feet from the nearest travel lane or multi-lane ramp; or
 - 14 feet from the nearest auxiliary lane or single-lane ramp; or
 - outside the clear zone provided in Table 4-1 and Table 4-2.
- Where supports are located within the clear zone, the front slope shall be 1V:6H or flatter.
- Lighting should not be located in medians, except in conjunction with barriers that are justified for other reasons.
- The AASHTO RDG 4th Edition (2011) may be referenced for additional discussion on breakaway lighting supports.

4.4.5.2 High-Mast Lighting (Fixed-Base Supports)

High-mast or high-level lighting supports are fixed-base support systems that do not yield or break away on impact. High-mast lighting supports:

- shall be located outside the clear zone provided in Table 4-1 and Table 4-2; and
- shall not be located in medians except in conjunction with barriers that are justified for other reasons.

See the FDOT [Standard Plans](#) Index 715-010 for additional information.

4.4.6 Utility Poles

Utility poles:

- shall be located to meet minimum lateral offset requirements provided in Table 4-3;
- should be located as close as practical to the right-of-way line; and

- should be installed per the permitting agency's requirements.

In accordance with Florida Statute Section 337.403, existing utility poles shall be relocated when unreasonably interfering with the "convenient, safe, or continuous use, or the maintenance, improvement, extension, or expansion" of public roads.

Utility poles adjacent to but not directly interfering with the construction of road improvement projects should be considered for relocation (to the extent they can be relocated) to achieve the minimum lateral offset requirements in Table 4-3.

Utility poles that cannot be relocated and will remain within the minimum lateral offset should be approved through the exception process prescribed in Chapter 14: Design Exceptions and Variations.

The AASHTO RDG 4th Edition (2011) and FDOT [Utility Accommodation Manual](#) provide additional discussion and guidance on utility poles.

4.4.7 Midblock Crossing Infrastructure

Overhead structural supports serving midblock crosswalks (e.g., signals or pedestrian hybrid beacons) may be placed in medians if project constraints prevent placement elsewhere. Place the supports near the center of the median to the greatest extent practical while also meeting the minimum lateral offsets in Table 4-3. Also see the FDM Section 215.2.9.

4.4.8 Fire Hydrants

Most fire hydrants are made of cast iron and are expected to fracture upon impact; however, crash testing has not been done to verify that designs meet current breakaway criteria. For this reason, fire hydrants should be located:

- as far from the traveled way as practical;
- preferably outside the minimum lateral offset requirements listed in Table 4-3; and
- where they are still readily accessible to and usable by emergency personnel.

Any portion of the hydrant not designed to break away should be within 4 inches of the ground.

4.4.9 Railroad Crossing Warning Devices

See Chapter 7: Rail-Highway Crossings for location requirements for railroad crossing warning devices.

4.4.10 Mailbox Supports

Mailboxes and their locations are subject to U.S. Postal Service requirements. They are often located within the clear zone and pose a potential hazard. However, with proper design and placement, the severity of impacts with mailboxes can be reduced. To achieve consistency, it is recommended that each highway agency adopt regulations for the design and placement of mailboxes within the right-of-way of public highways. The AASHTO RDG 4th Edition (2011) provides a model regulation that is compatible with U.S. Postal Service requirements. The following requirements apply to mailbox installations on public roadways:

- No mailbox will be permitted where access is obtained from a freeway or where access is otherwise prohibited by law or regulation.
- Mailboxes shall be located on the right-hand side of the roadway and in the carrier's direction of travel *except* on one-way streets, where they may be placed on the left-hand side.
- Where a mailbox is located at a driveway entrance, it shall be placed on the far side of the driveway in the carrier's direction of travel.
- Where a mailbox is located at an intersecting road, it shall be located a minimum of 200 feet beyond the center of the intersecting road in the carrier's direction of travel. This distance may be decreased to 100 feet on very low-volume roads.
- When a mailbox is installed in the vicinity of an existing guardrail, it should, when practical, be placed behind the guardrail.
- The bottom of the box shall be set at a height established by the U.S. Postal Service, usually from 41 to 45 inches above the roadway surface.
- On flush shoulder roadways, the roadside face of the box should be offset from the edge of the traveled way at a distance no less than the greater of the following:
 - 8 feet where no paved shoulder exists and the shoulder cross slope is 10% or flatter; or
 - the width of the shoulder present plus 6 to 8 inches; or
 - the width of a turnout specified by the jurisdiction plus 6 to 8 inches.
- On very low-volume flush shoulder roads with low operating speeds, the offset may be reduced to 6 feet from the traveled way.
- On curbed streets, the roadside face of the mailbox should be set back from the face of the curb by 6–8 inches.

- On residential streets without curbs or all-weather shoulders that carry low traffic volumes operating at low speeds, the roadside face of the mailbox should be offset behind the edge of the pavement by between 8 and 12 inches.
- Design criteria for mailbox support structures located within the clear zone include the following:
 - Mailboxes shall be made of light sheet metal or plastic construction that conforms to the requirements of the U.S. Postal Service. Newspaper delivery boxes shall be made of light metal or plastic construction of dimensions minimally suitable for holding a newspaper.
 - No more than two mailboxes may be mounted on a support structure unless crash tests have shown the support structure and mailbox arrangement to be safe. However, lightweight newspaper boxes may be mounted below the mailbox on the side of the mailbox support.
 - A single wooden post (a 4-inch-by-4-inch square or a circle with a 4-inch-diameter) or metal post (Schedule 40, 2-inch, nominal Iron Pipe Size [external diameter 2-3/8 inch] [wall thickness 0.154 inches] or smaller) that is embedded no more than 24 inches into the ground shall be acceptable as a mailbox support. A metal post shall not be fitted with an anchor plate, but it may have an anti-twist device that extends no more than 10 inches below the ground surface.
 - Unyielding supports, such as heavy metal pipes, concrete posts, brick, stone, or other rigid foundation structures or encasements should be avoided.
 - The post-to-box attachment details should be of sufficient strength to prevent the box from separating from the post top if the installation is struck by a vehicle. The exact support hardware dimensions and design may vary, such as having a two-piece platform bracket or alternative slot-and-hole locations. The product shall result in a satisfactory attachment of the mailbox to the post, and all components shall fit together properly.
 - The minimum spacing between the centers of support posts should be the height of the posts above the ground line. Mailbox support designs not described in this regulation are acceptable if approved by the jurisdiction.

FDOT [Standard Plans](#) and the AASHTO RDG 4th Edition (2011) provide details on the hardware, supports, and attachment details that are acceptable for compliant mailboxes located within the clear zone.

Additional information on the design and construction of residential and commercial mailboxes, including outdoor cluster boxes, can be found on the [U.S. Postal Service's Delivery Growth Management](#) webpage.

4.4.11 Bus Benches and Shelters

Shelters should be installed in accordance with the following:

- Curbed roadways:
 - Posted speed $\leq$ 45 mph: As close to the ROW as practicable and at least 4 feet from back of curb
 - Posted speed $>$ 45 mph: Outside the clear zone (Table 4-1 and Table 4-2) and as close to the ROW as practicable
- Flush shoulder roadways: Outside the clear zone (Table 4-1 and Table 4-2) and as close to the ROW as practicable

4.4.12 Curbs

Curbs have no redirection capabilities except at very low speeds—less than the lowest design speeds typically used for urban streets. Therefore, do not use curbs to mitigate clear zone violations. The addition of curb for the sole purpose of achieving lateral offset criteria is prohibited.

Curbs with closed drainage systems provide a tangible definition of the roadway limits and delineation of access points. This makes curbs useful in urban areas due to the following features typically found in urban areas:

- Low design speed ($\leq$ 45 mph)
- Dense, abutting development
- Closely spaced intersections and accesses to property
- Higher number of motorized vehicle, bicyclist, and pedestrian volumes
- Restricted right-of-way

FDOT [Standard Plans](#), Index 520-001 provides details for curb shapes commonly used in Florida. Typical applications for urban roadways include Type E and Type F curbs. Note that these raised curb designs are not considered aboveground hazards due to their smooth edges and continuous design. Both curb types have a sloped face; however, Type E has a flatter face that allows vehicles to traverse it more easily.

Some raised curb types, such as Type E (with its height of 5 inches or less and a sloping face equal to or flatter than the Type F), may be used in some cases on high-speed roadways. In these cases, the face of the curb shall be placed no closer to the edge of the traveled way than the required shoulder width. The cases include the following:

- High-speed, multilane divided highways with design speeds of 55 mph or less; for examples, see the FDM Chapter 210: Arterials and Collectors
- Directional median openings; for examples, see the FDM Chapter 212: Intersections
- Transit stops (harmonize with flush shoulder accessible transit stops)

As an alternative to raised curb, shoulder gutter is also frequently used along roadway fill sections and bridge approaches to prevent excessive runoff down embankment slopes. This relatively flat feature is not speed restricted. Shoulder gutter does not have a raised face like Type E or Type F curbs, so its usage would not be considered a “curbed” roadway condition. The FDOT [Drainage Manual](#) may be referenced for direction on the use of shoulder gutter.

See Chapter 3: Geometric Design for additional criteria on the use of curbs and shoulder gutter.

4.4.13 Drainage Structures

Drainage structures and their associated end treatments along the roadside should be implemented using either a traversable design or located outside the required clear zone. An efficient drainage design typically contains curb inlets, ditch bottom inlets, endwalls, wingwalls, headwalls, and flared end sections or mitered end sections. If not adequately designed or properly located, these features can create hazardous conditions for vehicles, such as abrupt deceleration or rollovers.

For detailed background information concerning traversable designs, refer to the AASHTO RDG 4th Edition (2011). Standard details for drainage structures and end treatments commonly used in Florida are provided in the FDOT [Standard Plans](#). Drainage features shown in FDOT [Standard Plans](#) have the potential to conflict with a motor vehicle or bicyclist either departing the roadway or within a commonly traversed section of a roadway. The [FDOT Drainage Manual](#) identifies those standard drainage structures which are acceptable for use within the clear zone

4.4.14 Canals and Water Bodies

Wherever practical, avoid the placement of water bodies near roadways. If such placement is unavoidable, locate water bodies outside of the clear zone per Table 4-1 and Table 4-2.

Additionally, if the water body meets the following definition of a canal hazard, minimum lateral offsets shall be followed per Table 4-3. These required offsets will generally exceed clear zone width requirements.

A canal hazard is defined as an open ditch parallel to the roadway for a minimum distance of 1,000 feet and with seasonal water depth of more than 3 feet for extended periods of time (24 hours or more). See Figure 4-7 and Figure 4-8 and apply the following guidance:

- On new alignments and for new canals, greater distances should be provided to accommodate future widening of the roadway.
- On fill sections, a flat berm (maximum 1V:10H slope) no less than 20 feet in width between the toe of the roadway front slope and the top of the canal side slope nearest the roadway should be provided.
- When the slope between the roadway and the "extended period of time" water surface is 1V:6H or flatter, the minimum distance may be measured from the edge of the travel lane, auxiliary lane, or ramp to the "extended period of time" water surface. A berm is not required.
- On sections with ditch cuts, a minimum of 20 feet between the toe of the front slope and the top of the canal side slope nearest the roadway should be provided.
- When the required minimum lateral offset cannot be met, the canal hazard shall be shielded with a crashworthy roadside barrier. Barriers shall be located as far from the traveled way as practical. When shielding canal hazards, the barrier shall be located outside the clear zone where possible. Guardrail shall be located no closer than 6 feet from the canal front slope, and high-tension cable barrier shall be no closer than 15 feet from the canal front slope.
- If the above offset criteria would locate the barrier within the clear zone, instead follow the barrier offset requirements of Section 4.5.5: Barrier Placement.

Figure 4-7. Minimum Offsets for Canal Hazards (Flush Shoulders)

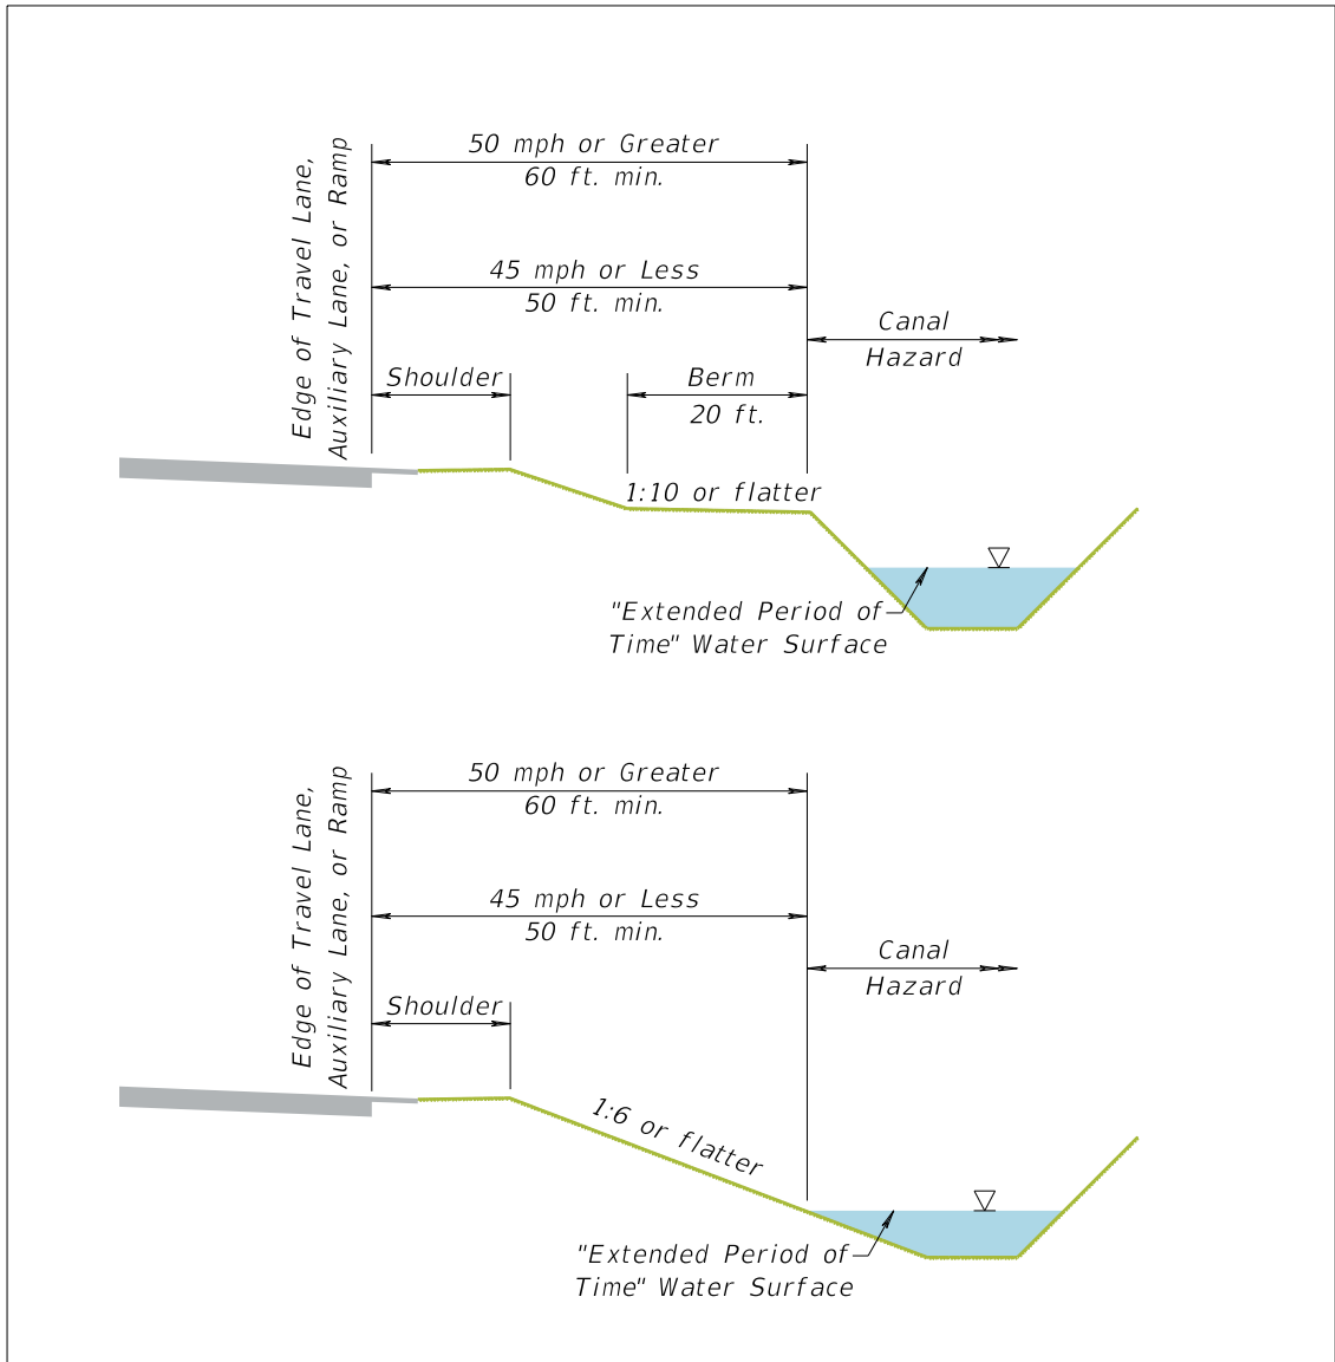
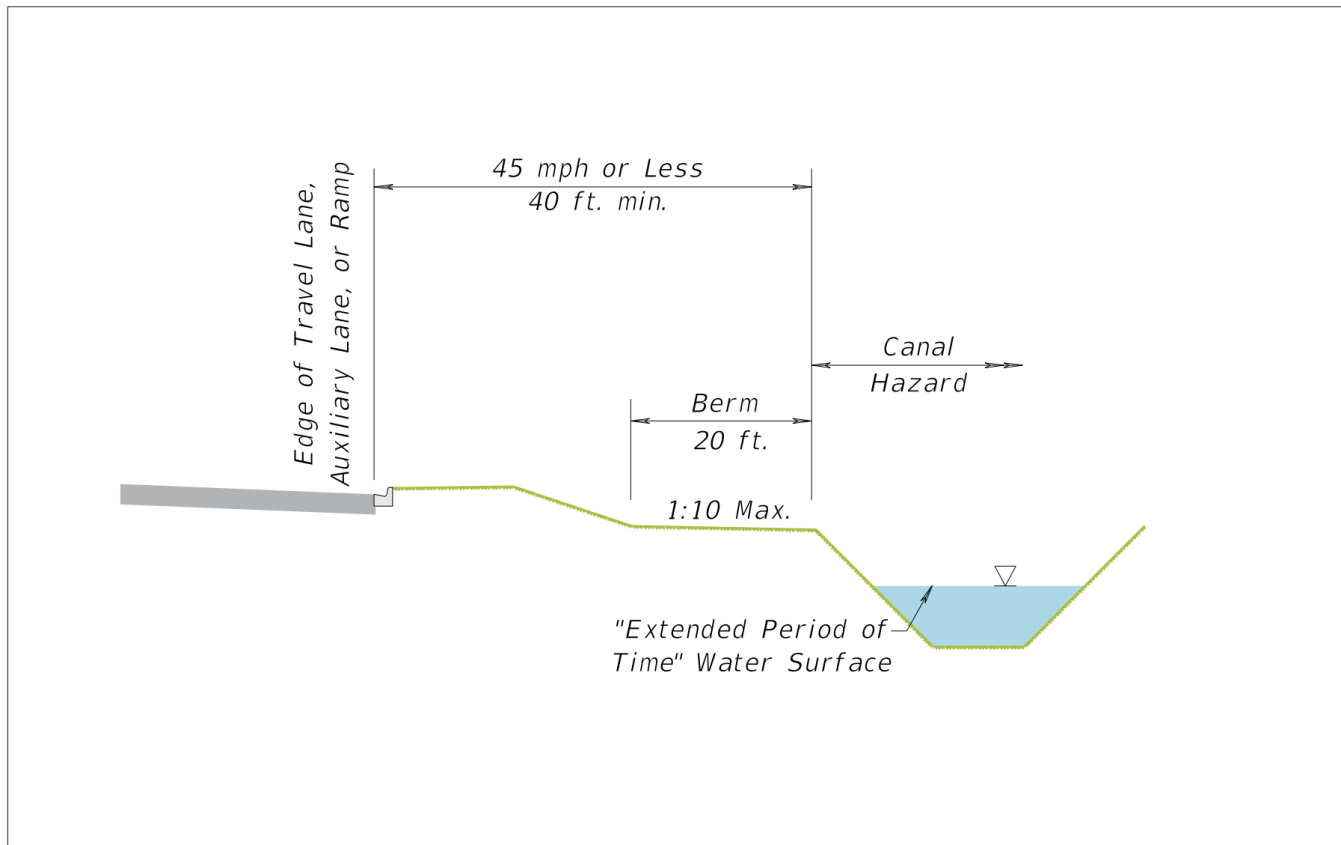


Figure 4-8. Minimum Offsets for Canal Hazards (Curbed)

4.4.15 Retaining Walls and Noise Walls

The design of conventional, anchored, mechanically stabilized, and prefabricated modular retaining wall structures shall meet the requirements of the latest version of the AASHTO Load and Resistance Factor Design (LRFD). Local agencies should consider using only wall types approved by FDOT. These are described in Section 3.12 of the FDOT [Structures Design Guidelines](#). Local agencies should also follow the design criteria for retaining walls found in Section 3.13 of the Structures Design Guide; the design of noise walls should meet the requirements of Section 3.16. The design of noise walls within the clear zone should comply with the following:

- For noise walls attached to the top of traffic railings, use only crash-tested systems consistent with the design speed of the facility. FDOT has standards for Test Level 4 systems that meet the requirements of NCHRP 350 or the AASHTO MASH 2nd Edition (2016). For more information on test levels, NCHRP 350, and the AASHTO MASH 2nd Edition, see Section 4.5.2: Crash Test Criteria and Evaluation Criteria.
- Non-crash-tested noise walls may be attached to structures if located behind an approved traffic railing and mounted at least 5 feet from the face of the traffic railing at deck level.

Potential existing offsite stormwater that inflows through the proposed wall location should be verified in the field and considered in the wall design. For railings on top of walls, see Chapter 17 Section C.3.c. Railings.

4.4.16 Poles for Intelligent Transportation Systems

“Intelligent transportation systems” (ITS) refer to technologies used to enhance roadway safety and operations, such as dynamic message signs, which use electronic signs to project real-time traffic alerts to drivers. See FDM Section 233 for information on ITS general usage and placement. ITS infrastructure should meet minimum lateral offset requirements per Table 4-3.

Refer to FDM Chapter 215 for information regarding proposed attachments to bridge traffic railings, concrete median barrier walls, concrete shoulder barrier walls, or the evaluation of existing attachments.

4.5 Longitudinal Barrier Evaluation, Selection, and Design

4.5.1 Overview of Roadside Barriers

Roadside barriers are used to shield motorists from roadside hazards and, in some cases, are used to protect bystanders, pedestrians, cyclists, and workers from vehicular traffic. In other cases, roadside barriers are used to prevent median crossover crashes or to shield bridge piers from vehicle impacts. When selecting the appropriate type of barrier, several factors shall be considered, including but not limited to vehicle design speeds, roadway context, and terrain features. When a barrier type is selected, there are several additional considerations related to system design and placement, including but not limited to the length of the system, the lateral offset of the system, and the system taper rate (i.e., flare rate).

This chapter discusses various factors that should be considered when selected and installing a longitudinal barrier system.

4.5.1.1 Barrier System Types and Components

The main types of longitudinal roadside barriers are metal guardrail (semi-rigid), concrete barrier (rigid), high-tension cable barrier (flexible), and portable/temporary barrier for work zone environments. See Section 4.6: Semi-Rigid (Metal Guardrail) Barriers, Section 4.7: Rigid (Concrete) Barriers, Section 4.8: Flexible (High-Tension Cable) Barriers, Section 4.11: Roadside Safety in Work Zones (Temporary Barriers), and the FDOT [Standard Plans](#) for more detailed information on each barrier type.

Specific types of longitudinal barriers may be best suited to median placement. For example, median barriers (i.e., double-faced barriers) are designed for vehicles to strike either side and are primarily used to separate opposing traffic on a divided highway. In limited cases, median barriers may also be used on heavily traveled roadways to separate through traffic from local traffic or to separate high-occupancy and managed lanes from general purpose lanes.

Additionally, most barrier ends require a special end treatment device. Primarily, untreated approach ends of barrier systems may pose a hazard. To increase crashworthiness, these upstream barrier ends shall be treated with either an approach terminal, crash cushion, or transition connection to a different barrier. Barrier transition connection segments are used to join different barrier types in order to mitigate their different deflection characteristics (see Section 4.9.6: Barrier Transition Connections (from semi-rigid to rigid barriers)). For example, a transition segment is needed where a semi-rigid guardrail attaches to the approach end of a rigid concrete bridge rail.

Last, trailing ends of semi-rigid or flexible barriers generally require an anchorage for effectively developing system strength and redirective capability. See Section 4.9: Treating Barrier Ends for more detailed information on these methods for treating barrier ends.

Work zones, due to being temporary designs, often require the use of temporary (portable) devices. For more information related to temporary (portable) devices for roadside safety and design in work zones, see Section 4.11: Roadside Safety in Work Zones (Temporary Barriers).

The FDOT [Approved Products List](#) (APL) provides a comprehensive list of products that are approved for use on FDOT roadways. Note that local designs are not required to follow the APL.

4.5.2 Crash Test Criteria and Evaluation Criteria

New roadside barriers, transitions, approach terminals, and crash cushions should be crashworthy as determined by full-scale crash testing in accordance with specific crash-test guidance provided in the AASHTO MASH 2nd Edition (2016). Existing systems are not required to be MASH compliant.

Before the AASHTO MASH 2nd Edition (2016), NCHRP Report 230 and then NCHRP 350 were the first documents to provide guidance on roadside hardware crash testing. Most recently, the AASHTO MASH 2nd Edition (2016) is the document that prescribes the modern process to 1) perform crash tests to assess roadside hardware performance and 2) evaluate roadside hardware performance.

The longitudinal barrier crash test matrix divides crash tests into six test levels (TL). TL-1 through TL-3 use two sizes of passenger vehicles, while TL-4 through TL-6 use heavy, commercial-grade vehicles. As the crash TL increases, so does the impact severity, which describes the magnitude of loading on the barrier. As a result, the TL of the barrier indicates what roadway speeds it is appropriate to install the barrier on.

Consult the AASHTO MASH 2nd Edition (2016) for the complete longitudinal barrier crash test matrix and additional details on crash testing and evaluation methods and criteria.

4.5.3 Safety Hardware Upgrades

The industry requires permanent installation of new barriers and full replacements on the National Highway System to meet the AASHTO MASH 2nd Edition (2016) criteria. This means that, for new construction and reconstruction projects, NCHRP 350 hardware shall be upgraded or replaced with MASH-approved hardware. Otherwise, an NCHRP 350-approved

system may remain on existing roadways until it becomes damaged beyond repair, or when an individual agency's maintenance policies require an upgrade to the safety hardware.

Chapter 215 of the FDOT Design Manual provides a list of considerations when investigating the need for upgrading barriers and other hardware. The FDOT [Standard Plans](#) provide details for transitioning new barriers to existing barriers. The AASHTO RDG 4th Edition (2011) also provides guidelines for upgrading hardware.

4.5.4 Barrier Selection Guidelines

Numerous factors may be considered to ensure that the appropriate barrier type is selected for a given application. Consideration should be given to the following factors when evaluating each site:

- Barrier placement requirements (see Section 4.5.5: Barrier Placement)
- Traffic characteristics (e.g., common vehicle sizes, volume, and growth)
- Site characteristics (e.g., terrain, geometry, facility type, design speed, etc.)
- Expected frequency of roadway departures
- Installation and replacement/repair costs
- Ease of maintenance
- Aesthetics

For additional information about considerations for barrier selection, refer to the AASHTO RDG 4th Edition (2011). Document all barrier type selection decisions and warrants.

4.5.5 Barrier Placement

This section contains additional requirements and considerations for barrier placement.

4.5.5.1 Length of Need


Barrier length of need (LON) is the length of barrier needed in advance of a roadside hazard or a non-traversable terrain feature to prevent a vehicle that has left the roadway from striking the hazard or feature.

The LON for a particular barrier type is calculated based on several factors, including the length of the hazard, the lateral area of concern, run-out length, and other factors. LON shall consider traffic and clear zones for both directions of traffic where applicable. LON is calculated using the guidance provided in AASHTO RDG 4th Edition (2011), equation 5-3.

To assist with calculating LON, a spreadsheet is provided on FDOT's [Standard Plans](#) webpage, adjacent to Index 536-001, in the Design Tools column.

4.5.5.2 Barrier Offsets

See the FDM Chapter 215: Roadside Safety and [Standard Plans](#) for proper barrier placement. Figure 4-9 provides information on the offset of guardrail on curbed and flush shoulder roadways.

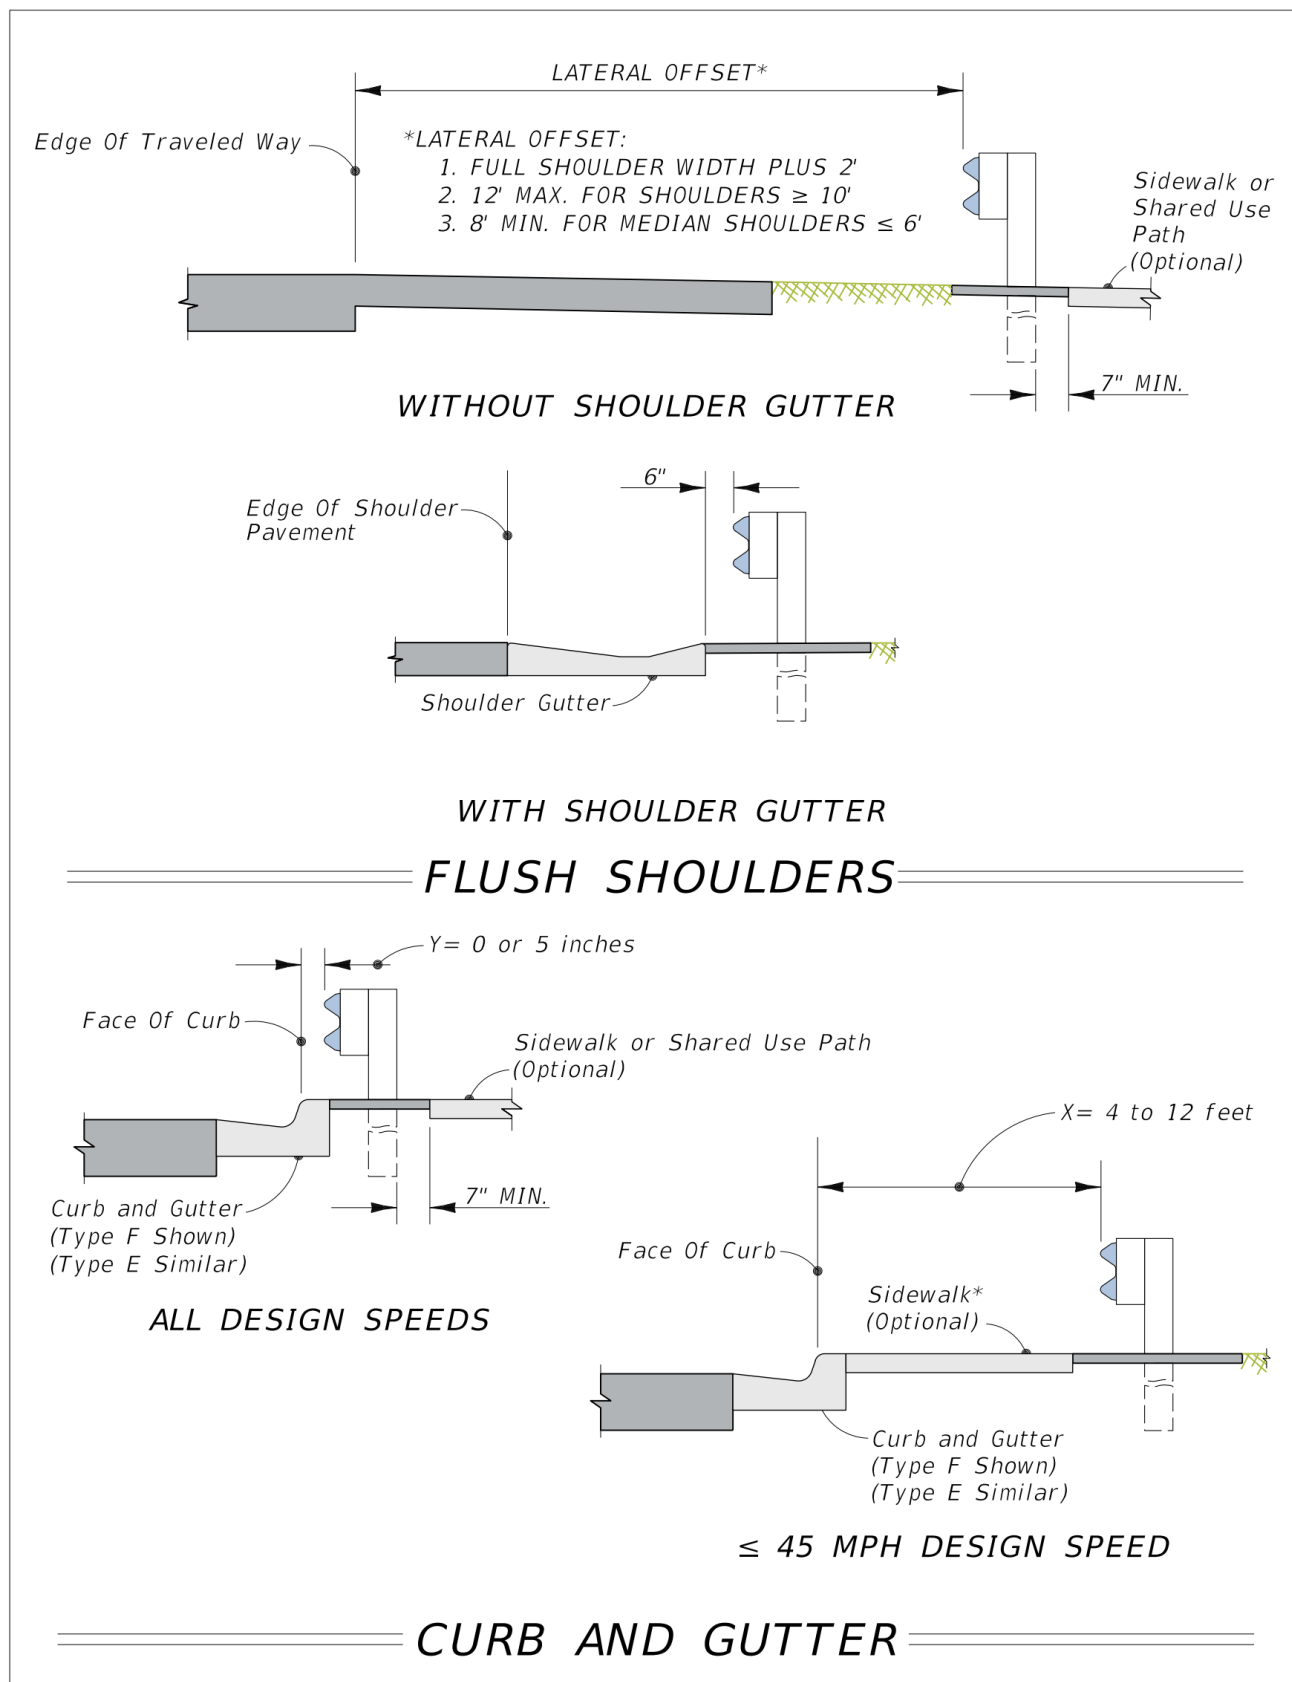Figure 4-9. Location of Guardrail

*When a sidewalk is present or planned, see Chapter 8: Pedestrian Facilities and Chapter 9: Bicycle Facilities for criteria for sidewalks and shared use paths (e.g., width of facility plus clear, graded areas adjacent to the path or sidewalk).

4.5.5.3 Taper Rate

In general, longitudinal barriers shall remain parallel to the roadway to achieve crashworthiness as defined by crash test assumptions for impact angle. That said, gradual tapers are permitted to meet roadway needs as described below. A tapered barrier is defined as being not parallel to the edge of the traveled way. “Taper rate” (or “flare rate”) describes the rate at which the barrier deviates from parallel. A tapered barrier may be necessary for several reasons:

- To locate the barrier terminal farther from the roadway
- To transition a roadside barrier to an obstacle nearer the roadway such as a bridge parapet or railing
- To reduce the total barrier LON, assuming “flared” approach terminals are available to meet the needed test criteria (See Section 4.5.5.1: Length of Need)
- To reduce the potential for barrier and terminal impacts and provide additional roadside space for an errant motorist to recover

Disadvantages associated with flaring a barrier installation include the following:

- As the taper rate increases, so does the angle at which the barrier can be hit, which in turn increases crash severity. This is especially the case for rigid and semi-rigid barrier systems.
- Tapering a barrier installation may increase the likelihood that a vehicle will be redirected back into or across the roadway following an impact.

See the FDM Chapter 215: Roadside Safety for acceptable taper rates. Additional information on flare rates is provided in the AASHTO RDG 4th Edition (2011).

4.5.5.4 Setback and Zone of Intrusion

In addition to travel lane lateral offset considerations, an adequate setback shall be provided behind the barrier to ensure proper barrier function. This setback is based on the zone of intrusion (ZOI) concept as described in the AASHTO RDG 4th Edition (2011). ZOI describes the region above and behind the face of the barrier where an impacting vehicle may extend during an impact and is influenced by several factors, including barrier height, barrier profile, and vehicle size, speed, and impact angle.

- For flexible and semi-rigid barriers, the setback is based on deflection tolerances and is required to prevent the barrier from contacting aboveground objects.
- For rigid barriers, the setback is required to keep the area above and behind the barrier face free of obstructions that could penetrate or damage the vehicle compartment.

These requirements do not apply to objects located within the setback distances detailed in the FDOT [Standard Plans](#) (e.g., pedestrian/bicycle railing, fencing, noise walls, etc.).

See FDM Chapter 215: Roadside Safety for acceptable barrier setback distances for objects behind the barrier face. Additional information on setback distances is provided in the AASHTO RDG 4th Edition (2011).

4.5.5.5 Barriers on Slopes

While barriers may be used to shield roadside slopes, the slope between the traveled way and a barrier can have a significant effect on the barrier performance. When barriers are placed on slopes that exceed the maximum allowable slope, it increases the likelihood that the vehicle will interact with the barrier in a way that's not intended (e.g., underide or override the barrier). For FDOT's standardized rigid and semi-rigid barriers, the general permitted approach slope is 1V:10H or flatter. Additional information on allowable slopes for guardrail and high-tension cable barrier may be found in the FDOT Standard Plans Index 563-001 and Index D540-001, respectively. See Section 4.3.3: Slopes for guidance on when barriers should be used to shield hazardous slope conditions.

4.5.5.6 Barriers Near and On Curbs

As with grading, the presence of curb in combination with barriers deserves special attention. A vehicle that traverses a curb prior to impact may override the barrier if it is partially airborne upon impact. Conversely, the vehicle may underide the rail element of a guardrail system and snag on the support posts if it strikes the barrier too low. In general, guardrail is the barrier most commonly used adjacent to curb. See Figure 4-9 for guardrail placement requirements with respect to the face of curb.

4.5.6 Median Barrier Warrants

In addition to the shielding of hazards, median barriers may also be used for the prevention of cross-median crashes into oncoming vehicles. As such, median barriers shall be used on high-speed, limited-access facilities where the median width is less than the minimum values given in Table 3-32 (Cross Section Criteria for Freeways) in Chapter 3: Geometric Design. For locations where median widths are equal to or greater than the minimum requirement, median barriers are not normally used except in special circumstances, such as a location with a significant history of cross-median crashes. Any determination to use a median barrier on limited-access facilities shall consider the need for barrier openings for median crossovers that are appropriately spaced to avoid excessive travel distances by emergency vehicles, law enforcement vehicles, and maintenance vehicles. The FDM may be referenced for additional

criteria and guidelines for locating and designing median crossovers on limited-access facilities.

On high-speed divided arterials and collectors, median barriers are not normally used due to several challenging factors, including right-of-way constraints, property access needs, presence of at-grade intersections and driveways, adjacent commercial development, intersection sight distance, and barrier end termination. However, provided these factors can be properly addressed, median barriers for these facilities may be considered where median widths are less than the requirement or where barriers are otherwise justified due to a significant crossover crash history.

4.5.7 Attachments to Barriers

Attachments to barriers such as signs, light poles, and other objects will affect the crash performance of the barrier and should be avoided where practical. When they are used, attachments should meet the AASHTO MASH 2nd Edition (2016) crash test criteria. See the FDM Chapter 215: Roadside Safety for additional information on attachments to barriers.

4.6 Semi-Rigid (Metal Guardrail) Barriers

Metal Guardrail Summary:

Metal guardrails use a combination of bending and tension to absorb impact energy. The systems are comprised of metal **rail** mounted to wood or metal **posts** with wood or composite **blockouts** and an **end treatment**.

Metal rail may be a w-beam rail (two-wave design; the most common design) or a thrie-beam rail (three-wave design). Thrie-beam rails provide some additional strength to the system and are generally used for approach transition connections to rigid barrier (see Section 4.9.6: Barrier Transition Connections (from Semi-Rigid to Rigid Barriers)).

Offset blocks are mounted between the rail and the posts, providing an offset between these two components.

End treatments for metal guardrails include approach terminals, trailing anchorages, and crash cushions. See Section 4.9: Treating Barrier Ends for details on end treatments.

Posts may be wooden or steel per [Standard Plans](#) Index 536-001.

4.6.1 FDOT Guardrail Systems

The most commonly used barrier on new construction projects in Florida is the TL-3 w-beam guardrail system, shown in FDOT [Standard Plans](#) Index 536.001. This semi-rigid, w-beam, strong post guardrail system was developed based on the 31-inch Midwest Guardrail System (MGS) and exhibits the following characteristics:

- Post spacing: 6 feet 3 inches
- Offset blocks: 8 inches (nominal)
- Midspan splices
- Rail height to center of the panel: 2 feet 1 inch
- Can be used as a roadside barrier or in a double face configuration as a median barrier

This current 31-inch height system replaces the 27-inch height system (1 foot 9 inches to center of panel) that had been used for many years and is still present on roadways throughout Florida. See Section 4.5.3: Safety Hardware Upgrades for requirements for upgrading existing 27-inch height systems.

4.6.2 Installation Guidance and Considerations

Adhering to the following guidance and considerations will help determine whether a metal guardrail is the appropriate system to improve system performance:


- To achieve a minimum level of crash performance, guardrail installations shall have a minimum length of 75 feet on roadways with design speeds greater than 45 mph.
- Refer to deflection space requirements for this system in FDM Chapter 215: Roadside Safety.
- See FDOT Standard Specifications for Road and Bridge Construction, Section 536 and 967 for general installation and material needs.
- See FDOT [Standard Plans](#), Index 536 for construction details and options.

4.6.3 Roadside Safety Hardware in Low-Speed Environments

In lower-speed environments, it may be appropriate and cost-effective to use end treatments that are approved for lower-speed test levels (i.e., TL-2 systems).

The FDOT [Standard Plans](#) also provide details for TL-2 end treatments. While TL-2 systems may be used on low-speed roadways (45 mph or less), they preferably should only be used on roadways with design speeds of 35 mph and less.

When a new sidewalk or shared use path is within 4 feet of the back of a guardrail with steel posts, a pipe rail shall be installed on the back of the post. For a guardrail with timber posts, the bolt ends shall be trimmed flush with the post or recessed. See Figure 4-10 for an illustration of the spatial relationship between a guardrail outfitted with this pipe rail and a shared use path. Additional information on the design of guardrails adjacent to a sidewalk or shared use path can be found in the FDOT [Standard Plans](#).

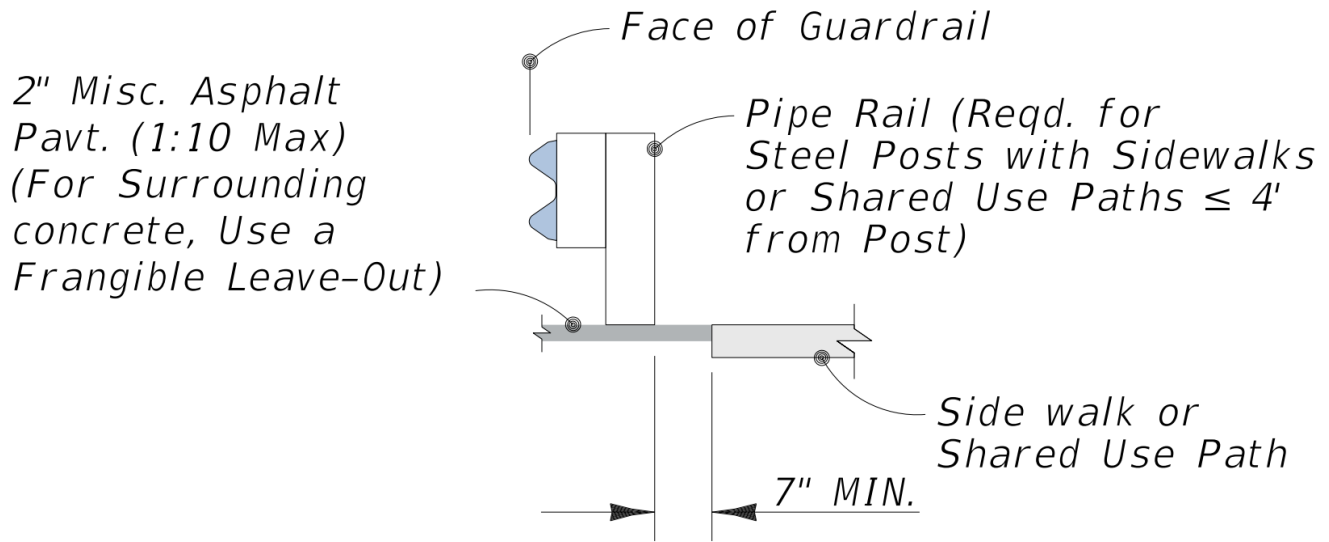Figure 4-10. Guardrail with Pipe Rail Detail

4.7 Rigid (Concrete) Barriers

Concrete Barrier Summary:

Concrete barriers maintain their shape and redirect impacting vehicles. They come in various shapes, including **single-slope**, **Jersey shape**, and **F-shape**. The ends of concrete barriers should be shielded either by a crash cushion or a transition to another barrier.

Single-slope barriers have a uniform slope that redirects vehicles impacting at shallow angles but can cause instability in vehicles impacting at higher speeds or higher angles.

Jersey shape barriers have a profile comprised of two slopes of differing angles.

F-shape barriers improve upon the Jersey barrier design to reduce vehicle climb in higher-severity impacts. This improves post-crash vehicle trajectories and reduces the likelihood that small cars will roll over due to the impact.

Crash cushions and **barrier transitions** are covered in Section 4.9: Treating Barrier Ends.

4.7.1 FDOT Concrete Systems

The concrete barriers used in Florida are detailed in the following FDOT [Standard Plans](#):

- Index 521-001: Concrete Barrier
- Index 521-002: Pier Protection Barrier
- Index D521-005: Concrete Barrier at Toll Sites
- Index 521-010: Opaque Visual Barrier
- Index 521-510, 521-511, 521-512, 521-513, 521-514, 521-515: Concrete Barrier/Noise Walls
- Index 521-600: MSE Wall Coping (Precast or C-I-P)
- Index 521-610, 521-611: Concrete Barrier/Junction Slab—Wall Coping
- Index 521-620: Concrete Barrier/Raised Sidewalk—Wall Coping
- Index 521-630: Parapet With C-I-P Sidewalk—Wall Coping
- Index 521-640: Drainage Inlet Openings in Junction Slab—Wall Coping
- Index 521-650: Light Pole Pedestal—Wall Coping

These [Standard Plans](#) include details for median application, shoulder application, and pier protection. Additional information on these barriers is provided in FDM Chapter 215: Roadside Safety.

FDOT's 32-inch-high F-shape concrete barrier system has been installed in prior years and meets both the NCHRP 350 TL-4 criteria and the AASHTO MASH 2nd Edition (2016) TL-3 criteria. More recently, FDOT has replaced this 32-inch F-shape system with a 38-inch-high, single-slope concrete barrier system that meets the AASHTO MASH 2nd Edition (2016) TL-4 criteria. In addition to improved crash test performance, the single-slope face provides for simpler construction connections.

While the shielding of bridge piers to protect motorists is often necessary, some bridge piers also need shielding to protect the pier ("pier protection") from impact damage due to their own design limitations (i.e., they have not been designed to withstand vehicular collision forces). Coordination with the Structural Engineer of Record is required to determine if pier protection is warranted. The FDOT [Standard Plans](#) provide details for crashworthy pier protection barriers, and Chapter 215: Roadside Safety of the FDM provides a process for determining the appropriate level of pier protection.

4.7.2 Installation Guidance and Considerations

Adhering to the following guidance and considerations will help determine whether a concrete barrier is appropriate:

- Concrete barriers should not be installed on slopes.
- While concrete barriers are more expensive to install, their rigidity allows them to maintain their shape upon impact, resulting in lower maintenance demands.
- Concrete barriers require less setback distance to an object behind the barrier due to their rigidity.
- Concrete barriers generally have more severe impacts than other barrier types due to their rigidity, but they offer a reduced likelihood of vehicle penetration through the barrier.
- See FDOT Standard Specifications for Road and Bridge Construction, Section 521 for general installation and material needs.
- See FDOT [Standard Plans](#) Index 521-002 & 521-002 for construction details and options.

4.8 Flexible (High-Tension Cable) Barriers

High-Tension Cable Barrier (HTCB) Summary:

HTCBs help to reduce injury potential by absorbing a vehicle's energy and redirecting the vehicle along the length of the barrier. HTCB systems are generally proprietary and are comprised of **cables**, **steel posts**, and **anchors**. **Anchors** are covered in Section 4.9: Treating Barrier Ends.

4.8.1 FDOT Systems

FDOT has used HTCBs in select locations and continues to install these systems using the [Developmental Standard Plans](#) and [Developmental Specifications](#) process. Detailed information on the usage requirements and design criteria of HTCB can be found in FDOT [Standard Plans](#) Index D540-001 and in [Developmental Standard Plans](#) Index D540-001.

4.8.2 Installation Guidance and Considerations

Adhering to the following guidance and considerations will help determine whether an HTCB is appropriate:

- HTCB systems may be used for both median and outside shoulder applications, provided large areas are available behind the barrier for deflection upon impact. Deflection space requirements are dependent on the system, system length, and post spacing. Place HTCBs such that there is 10 feet of space behind the barrier to accommodate larger deflection magnitudes.
- HTCB systems generally have the least severe impacts as compared to other barrier types, but they require large clear areas for deflection space (generally more ideal for wide medians).
- HTCBs are designed to be impacted without causing permanent damage to the barrier, minimizing the needed repairs and potentially resulting in cost savings.
- HTCB generally needs a maintenance operation to “reset” significant lengths of barrier after an impact. Because HTCB is generally not effective for these affected lengths after impact, maintenance plans should be in place to reset these systems relatively quickly after impact.
- On slopes steeper than 1V:10H, semi-rigid and flexible systems may be preferred over rigid barriers. Some systems have been tested for use on slopes as steep as 1V:4H.
- Because cable tension shall continue over the entire length of the barrier system, manufacturers generally place limitations on the length of continuous barriers. Limitations of horizontal and vertical curvature are also commonly placed to ensure posts are not dislodged from the cable tension.

- Since cable barrier systems tend to be proprietary, their components are not usually interchangeable between different makes and models.

4.9 Treating Barrier Ends

4.9.1 Overview and Types of Barrier Ends

Barrier ends may pose a hazard to motorists if not treated or shielded properly. This section discusses the treatment methods commonly used in Florida. Table 4-4 summarizes which treatment and shielding methods apply to the different barrier types.

Figure 4-11 and **Figure 4-12** illustrate how to determine placement of approach terminals and trailing anchorages for guardrail based on direction of travel for adjacent travel lanes within the clear zone.

Table 4-4. End Treatment Methods for Each Barrier Type

Barrier Type	End Treatment(s)
Metal Guardrail	• Approach terminal (proprietary) • Trailing anchorage (FDOT) • CRT assembly (FDOT, for radius end) • Crash cushion (proprietary)
Concrete Barrier	• Crash cushion (proprietary)
Metal Guardrail to Concrete Barrier	• Transition connections (FDOT)
High-Tension Cable Barrier	• End terminal (proprietary)
Note: For more information and options, see FDM Chapter 215 and the Standard Plans for the corresponding barrier types.	

Figure 4-11. Approach Terminal Usage When End of Guardrail Is Within Clear Zone of Approaching Near and Far Lanes (Two-Lane, Two-Way Road)


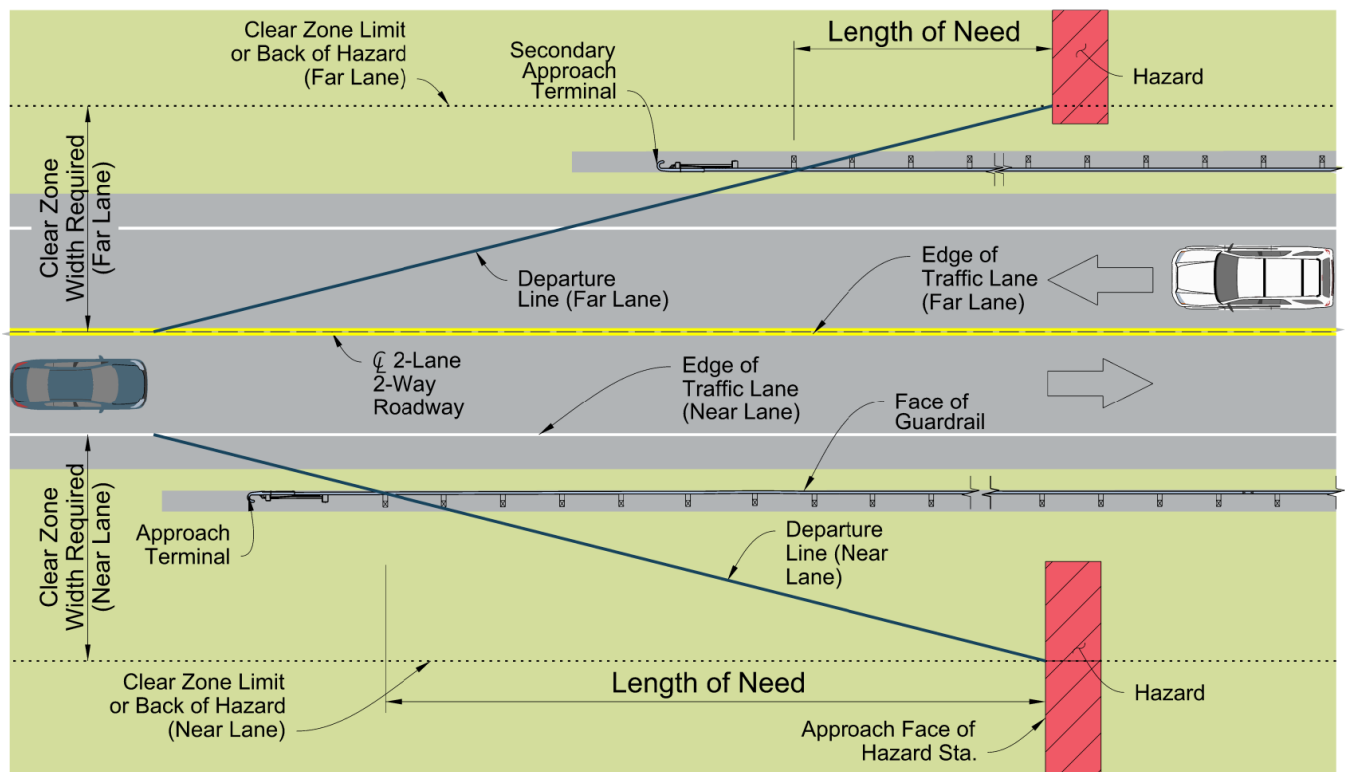


Figure 4-12. Approach Terminal and Trailing Anchorage Usage When End of Guardrail Is Within Clear Zone of Approaching Near Lane (Two-Lane, One-Way Road)

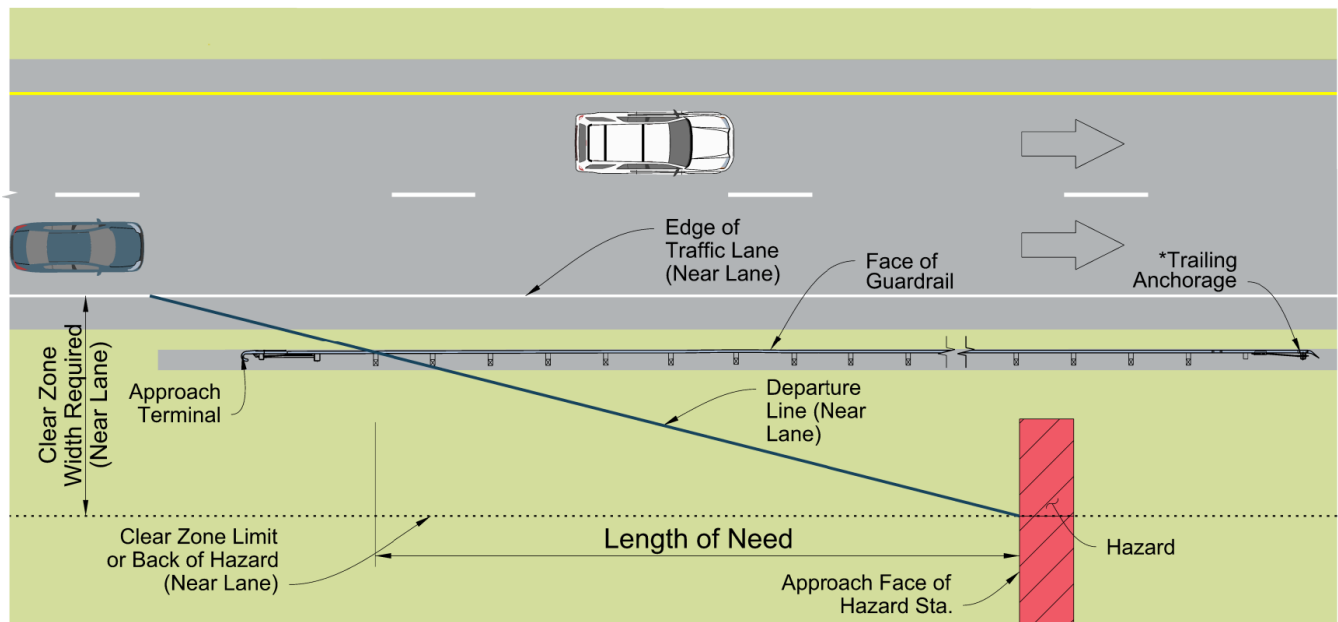

4.9.2 Crash Test Criteria

Like longitudinal barriers, approach terminal, crash cushion, and transition crashworthiness is determined by full-scale crash testing. The AASHTO MASH 2nd Edition (2016) provides the recommended test matrix for approach terminals and crash cushions. The test levels associated with FDOT end treatments are TL-2 and TL-3.

4.9.3 Approach Terminals (for Flexible and Semi-Rigid Barriers)

Purpose: Approach terminals are used to anchor a flexible or semi-rigid barrier to the ground at the end of a barrier that is within the minimum clear zone and exposed to approaching traffic.

Use Cases: Approach terminals are required for guardrail ends within the clear zone of approaching traffic. Most approach terminals are designed for vehicular impacts from only one side of the barrier; however, “double-faced” approach terminals are designed for median applications where there is potential for impact from either side.

Crashworthiness and Design: MASH-compliant approach terminals are classified by test level. TL-2 is intended for design speeds ≤ 45 mph, while TL-3 is intended for all design speeds.

FDOT Systems: See the [APL](#) for a list of FDOT-approved proprietary end terminals. For more information on using approach terminals with guardrail, see [Standard Plans](#) Index 536-001. Approach terminals for guardrail are classified by the following three types:

- **Flared terminals** are preferred for locations where sufficient space is available to offset the barrier end from approaching traffic.
- **Parallel terminals** should be used only when sufficient space is not available for a flared terminal.
- **Double-faced terminals** are the preferred end treatment for double-faced guardrail installations.

For more information on HTCB, see [Developmental Standard Plans](#) Index D550-804.

4.9.4 Trailing Anchorages (for Flexible and Semi-Rigid Barriers)

Purpose: Trailing anchorages are used to anchor a flexible or semi-rigid barrier to the ground to develop its tensile strength during an impact.

Use Cases: Trailing anchorages are typically used on the trailing end of a roadside barrier on one-way roadways, or on the approach or trailing end of a flexible or semi-rigid barrier that is

located outside the clear zone or that is shielded by another barrier system. They are required for anchoring the trailing ends of guardrail.

Crashworthiness and Design: As a result of their use cases, these anchorages are not crashworthy for approach ends and they are not permitted for use as an approach end treatment within the clear zone unless shielded by another run of barrier.

FDOT Systems: FDOT's Trailing Anchorage for guardrail is detailed in its [Standard Plans](#) Index 536-001. For more information on HTCB, see [Developmental Standard Plans](#) Index D550-804.

4.9.5 Crash Cushions (for Rigid Barriers, Semi-Rigid Barriers, and Miscellaneous Hazards)

Purpose: Crash cushions, sometimes referred to as “impact attenuators,” are crashworthy end treatments typically attached at the approach end of guardrail, concrete barriers, bridge traffic railings, or other rigid fixed objects, such as bridge piers.

Use Cases: Crash cushions may be used in a median, a ramp terminal gore area, or other roadside applications to shield barrier ends. Alternatively, a rigid barrier end may be shielded by transitioning into another barrier system (e.g., guardrail). Treatment of the trailing end of rigid barriers is not required unless additional hazards exist beyond the rigid barrier or the barrier is within the clear zone of opposing traffic.

Placement Considerations: An impacting vehicle should strike the systems at normal height, with the vehicle's suspension system neither collapsed nor extended. Therefore, the terrain surrounding crash cushions shall be relatively flat (i.e., 1V:10H or flatter) in advance of and along the entire design length of the system. Wherever practical, curbs should not be located within the approach area of a crash cushion.

Crashworthiness and Design: Crash cushions are classified based on test level and design speed. Each vendor's respective system drawings are posted on FDOT's [APL](#). The design of a crash cushion system shall not create a hazard to opposing traffic.

FDOT Systems: Details are provided in FDOT's [Standard Plans](#), Index 544-001. FDM Chapter 215: Roadside Safety provides additional information on permanent and temporary crash cushions.

4.9.6 Barrier Transition Connections (from Semi-Rigid to Rigid Barriers)

Purpose: The purpose of the guardrail transition is to provide a gradual stiffening of the approach to the concrete rigid barrier connection so that an impacting vehicle will not get snagged by guardrail pocketing or otherwise penetrate the guardrail. In addition to providing stiffer guardrail near the concrete connection point, guardrail transition systems also generally include a curb underneath the guardrail to help prevent vehicle wheels from snagging on the approach face of the concrete barrier.

Use Cases: Guardrail transitions are necessary whenever guardrail connects with the upstream, approach end of rigid barriers (including roadside concrete barrier or bridge traffic railings).

Crashworthiness and Design: See the FDOT [Standard Plans](#) for design requirements.

FDOT Systems: FDOT [Standard Plans](#) Index 536-001 and 536-002 provides details for several transitions for both permanent and rigid barriers that meet the AASHTO MASH 2nd Edition (2016) criteria. Further information on transitions is provided in the FDM Chapter 215: Roadside Safety and in the AASHTO RDG 4th Edition (2011).

4.10 Bridge Traffic Railings

Concrete bridge traffic railings are generally designed for AASHTO MASH 2nd Edition (2016) TL-3 or TL-4. See the [Standard Plans](#) Index 521 series for more information. For very low-volume roads with a design speed less than or equal to 45 mph, TL-2 designs may be considered. For additional requirements for bridge rails, see Chapter 17: Bridges and Other Structures. The FDM Chapter 215: Roadside Safety may be referenced for additional information and typical applications.

4.11 Roadside Safety in Work Zones (Temporary Barriers)

4.11.1 Overview of Work Zone Roadside Safety

The roadside design concepts presented in the previous sections shall be applied to work zones as appropriate for the type of work being done and to the extent existing roadside conditions allow. This includes providing appropriate clear zone and using traffic control infrastructure that is crashworthy or properly shielded with crashworthy barriers. However, because work zones are temporary and often involve restricted or limited space, there are modified criteria for clear zones, drop-off conditions, and aboveground hazards. Additionally, alternative barrier types may be used in work zone settings to channelize vehicles and protect

construction workers. Special considerations and requirements for these temporary conditions are provided below.

4.11.2 Clear Zone Width in Work Zones

Work zone clear zones shall be free of aboveground hazards, water bodies, non-traversable edge drop-offs, or critical slopes. Otherwise, shielding of hazards is required using permanent methods described above or temporary barriers as described below. Clear zone widths in work zones are measured from the edge of the traveled way or face of curb and, as a minimum, shall be the lesser of the following:

- Clear zone requirements in Table 4-1 and Table 4-2
- Clear zone requirements in Table 4-5
- Existing clear zone width

Table 4-5. Clear Zone Width Requirements for Work Zones (Feet)

Work Zone Posted Speed (mph)	Travel Lanes & Multilane Ramps	Auxiliary Lanes & Single- Lane Ramps
Curbed (measured from face of curb)		
≤ 45 mph	4	4
> 45 mph	Same as flush shoulder	Same as flush shoulder
Flush Shoulder (measured from edge of traveled way)		
≤ 40 mph	14	10
45–50 mph	18	10
55	24	14
60–70 mph	30	18
Note: The above clear zone widths do not apply for roadside canals. Where roadside canals are present, clear zone widths shall conform with the lateral offset distances for canals as described in this chapter.		

4.11.3 Aboveground Hazards in Work Zones

Aboveground hazards in work zones include any objects or equipment, other than temporary traffic control devices, that are greater than 4 inches in height and considered firm and unyielding. During working hours, aboveground hazards in the work zone should be treated with appropriate precautions.

During nonworking hours, all objects, materials, and equipment that constitute an aboveground hazard shall be stored/placed outside of the clear zone or be shielded by a barrier or crash cushion.

4.11.4 Non-Traversable Edge Drop-Offs, Critical Slopes, and Roadside Excavations

Non-traversable edge drop-offs, critical slopes, and roadside excavations located within the clear zone are to be addressed as follows:


- A drop-off is defined as a drop in elevation, parallel to the adjacent travel lanes, that is greater than 3 inches with a slope (A:B) that is steeper than 1V:4H (see Figure 4-12). In superelevated sections, the algebraic difference in slopes should not exceed 0.25.
- When an edge drop-off condition occurs within the clear zone, channelizing devices or temporary barriers shall be provided in accordance with Table 4-6.
- Drop-offs may be mitigated by placing slopes of optional base material. See FDOT Standard Specifications, Section 285 for further information. Slopes shallower than 1V:4H may be required to avoid an algebraic difference in slopes greater than 0.25.
- A setback distance appropriate for the type of barrier selected shall be provided. For further information on setback requirements for various types of barriers, see FDOT [Standard Plans](#) Index 102-100 and 102-110.
- Drop-offs adjacent to pedestrian facilities shall be accompanied by pedestrian longitudinal channelizing devices, temporary barrier wall, or approved handrail. Adjacent to pedestrian facilities, a drop-off is defined as:
 - a drop in elevation greater than 10 inches that is closer than 2 feet from the edge of the sidewalk or shared use path; or
 - a slope steeper than 1V:2H that begins closer than 2 feet from the edge of the sidewalk or shared use path when the total drop-off is greater than 60 inches.

Table 4-6. Device Requirements for Edge Drop-Offs (Use with Figure 4-12)

Condition	D (in)	C (ft)	Device Required
1*	> 3	0 – 12	Temporary barrier
2	> 3 to ≤ 5	12 – Clear Zone	Channelizing Device
3*	> 5	0 – Clear Zone	Temporary barrier
4	Removal of bridge or retaining wall barrier		Temporary barrier
5	Removal of portions of bridge deck		Temporary barrier
Permanent curb heights ≥ 6 inches			No channelizing devices required
All	Do not allow any drop-off conditions > 3 inches within 2 feet of the traveled way.		
*For conditions 1 and 3:			

- Channelizing devices and placement of slopes 1V:4H or flatter constructed of base material per the FDOT Specifications Section 285 may be used in lieu of temporary barriers. Slopes shallower than 1V:4H may be required to avoid algebraic difference in slopes greater than 0.25.
- Any drop-off condition that is created and restored within the same work period will not be subject to the use of temporary barriers. However, channelizing devices will be required.

Figure 4-12. Drop-Off Condition Detail (Use with Table 4-6)

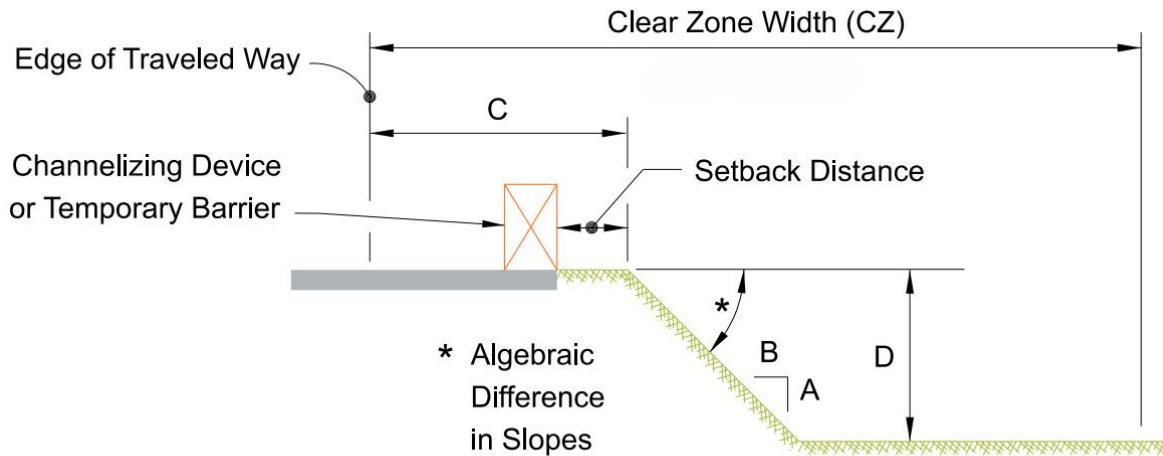

4.11.5 Temporary Barrier Usage in Work Zones

Where the clear zone requirements described above are not met, temporary barriers shall be used to shield features as described in FDOT [Standard Plans](#) Index 102-100 series and 102-600 series. Note that permanent barriers that are installed for use after construction may also be substituted for temporary barriers to provide shielding during construction. In summary, temporary barriers in work zones can serve several functions, including the following:

- Shield edge drop-offs and roadside excavations (see Section 4.11.2: Clear Zone Width in Work Zones)
- Shield aboveground hazards, including roadside structures, falsework for bridges, material storage sites, and other exposed objects
- Separate two-way traffic
- Separate pedestrians from vehicular traffic
- Provide positive protection for workers per below

Positive protection describes using devices for containing or redirecting errant vehicles in order to prevent any intrusion into work areas, thereby improving worker safety. The most common

form of positive protection is the use of temporary barriers to shield work areas from vehicles following LON concepts and layouts in the [Standard Plans](#) Index 102-100 series.

As work zones and work zone devices are generally temporary, barriers for work zones are also designed to be temporary and portable. Work zone barriers may be concrete safety-shape barriers, portable steel barriers, or plastic water-filled barriers. The most used temporary barriers in Florida are the following:

- Low-Profile Barrier—[Standard Plans](#), Index 102-120 (TL-2, NCHRP 350)
 - Applicable for work zone speeds of 45 mph or less
- Type K Barrier—[Standard Plans](#), Index 102-110 (TL-3, NCHRP 350)
- Proprietary Temporary Barrier [Standard Plans](#), Index 102-100 and the [APL](#) (TL-2 & TL-3, NCHRP 350)
 - May be concrete (freestanding or anchored), steel (anchored), or water-filled (freestanding)

The decision to use temporary barriers for conditions not specifically addressed in Section 4.11.2 should be based on engineering judgement and analysis. There are many factors, including traffic volume, traffic operating speed, offset, and duration, that affect barrier needs within work zones. The FDOT [Standard Plans](#), the FHWA MUTCD 11th Edition (2023), and the AASHTO RDG 4th Edition (2011) provide additional information and guidance on the use of temporary barriers in work zones.

Additional information on the proper use of these barriers is provided in the FDM and in the manufacturer's drawings on the FDOT [APL](#). Additional information on temporary barrier systems meeting NCHRP 350 or the AASHTO MASH 2nd Edition (2016) criteria can be found in the AASHTO MASH 2nd Edition (2016) and the AASHTO RDG 4th Edition (2011).

4.11.6 End Treatments for Temporary Barriers

Like permanent longitudinal barrier installations, the upstream approach end of a temporary barrier shall be treated with one of the following:

- Shield the end with a connected crash cushion.
- Shield the end behind another longitudinal barrier, meeting LON requirements of this chapter.
- Terminate the end outside of clear zone, which may include flaring the barrier with allowable taper rates.
- Connect the end to another barrier per FDOT requirements, creating a smooth and continuous impact surface over the connection.

For additional information on the above options, see FDOT [Standard Plans](#) Index 102-100 series.

4.12 References for Informational Purposes

American Association of State Highway and Transportation Officials (AASHTO)

- [Manual for Assessing Safety Hardware 2nd Edition \(2016\)](#)
- [Roadside Design Guide 4th Edition \(2011\)](#)
- [Guide for Pavement Friction](#)
- [Guidelines for Geometric Design of Very Low-Volume Local Roads \(ADT ≤ 400\) \(1999\)](#)

Florida Department of Transportation (FDOT)

- [Approved Products List](#)
- [FDOT Design Manual \(2026\)](#)
- [Developmental Standard Plans](#)
- [Developmental Specifications](#)
- [Drainage Manual \(2016\)](#)
- [High Friction Surface Treatment Guidelines](#)
- [Standard Plans and Standard Plans Instructions](#)
- [Standard Specifications for Road and Bridge Construction](#)
- [Structures Design Guidelines](#)
- [Target Zero](#)
- [Utility Accommodation Manual \(2017\)](#)

Federal Highway Administration (FHWA)

- [Barrier Guide for Low Volume and Low Speed Roads \(2005\)](#)
- [High Friction Surface Treatment Site Selection and Installation Guide \(2021\)](#)
- [Horizontal Curve Safety](#)
- [Manual on Uniform Traffic Control Devices 11th Edition \(2023\)](#)
- [Proven Safety Countermeasures](#)
- [Roadway Departure Safety](#)
- [Safety Evaluation of the SafetyEdge Treatment, Summary Report](#)

United State Department of Transportation (USDOT)

- [USDOT Safe System Approach](#)

National Cooperative Highway Research Program (NCHRP) Reports

- [Report 230](#)
- [Report 350](#)

Other References

- [Florida Statutes \(2025\)](#)
- [United States Postal Service's Delivery Growth Management](#)