


**SUPERELEVATION RATES (e) FOR URBAN HIGHWAYS AND HIGH SPEED URBAN STREETS**

$e_{max} = 0.05$

**GENERAL NOTES**

1. Maximum rate of superelevation for urban highways and high speed urban streets shall be 0.05.
2. Superelevation shall be obtained by rotating the plane successively about the break points of the section until the plane has attained a slope equal to that required by the chart. Should the rotation traverse the entire section and further superelevation be required, the remaining rotation of the plane shall be about the low edge of the inside travel lane.  
  
Crown is to be removed in the auxiliary lane to the outside of the curve only when the adjoining travel lanes require positive superelevation.
3. When positive superelevation is required, the slope of the gutter on the high side shall be a continuation of the slope of the superelevated pavement.
4. In construction, short vertical curves shall be placed at all angular profile breaks within the limits of the superelevation transition.
5. The variable superelevation transition length "L" shall have a minimum value of 50 feet for design speeds under 40 MPH and 75 feet for design speeds of 40 MPH or greater.
6. Roadway sections having lane arrangements different from those shown, but composed of a series of planes, shall be superelevated in a similar manner.
7. For superelevation of lower speed urban streets, see the FDOT 'Manual Of Uniform Minimum Standards For Design, Construction And Maintenance For Streets And Highways'. For superelevation of curves on rural highways, urban freeways and high speed urban highways, see Index No. 510.

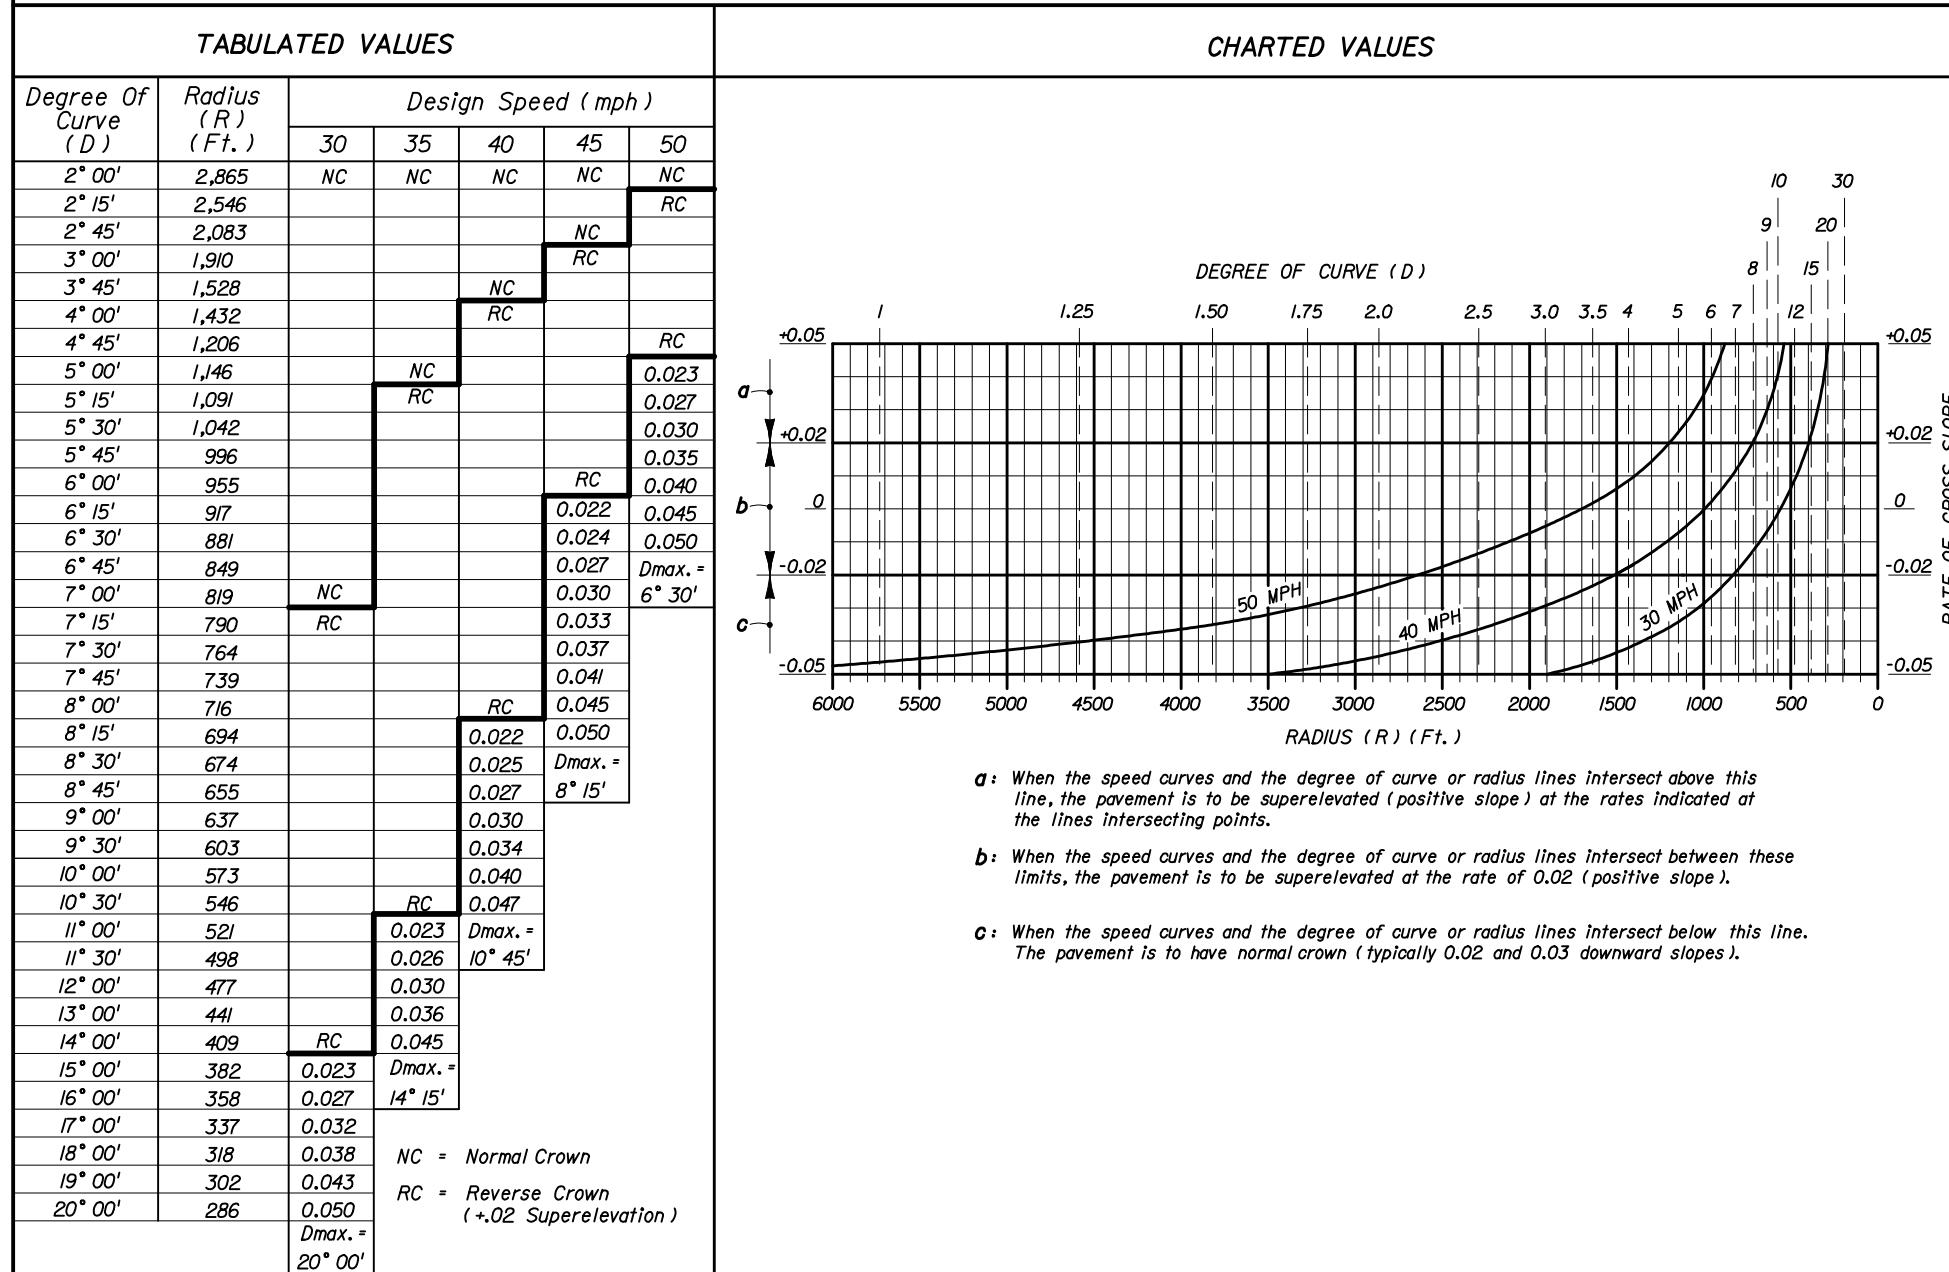

$e_{max} = 0.05$


**SUPERELEVATION FOR URBAN HIGHWAYS AND HIGH SPEED URBAN STREETS**




2006 FDOT Design Standards

**SUPERELEVATION**  
URBAN HIGHWAYS AND STREETS


Last Revision 00	Sheet No. 1 of 3
Index No. <b>511</b>	

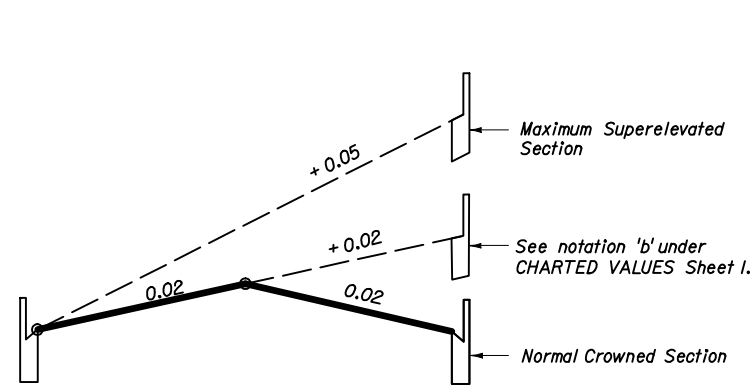


**TWO TRAVEL LANES EACH DIRECTION**

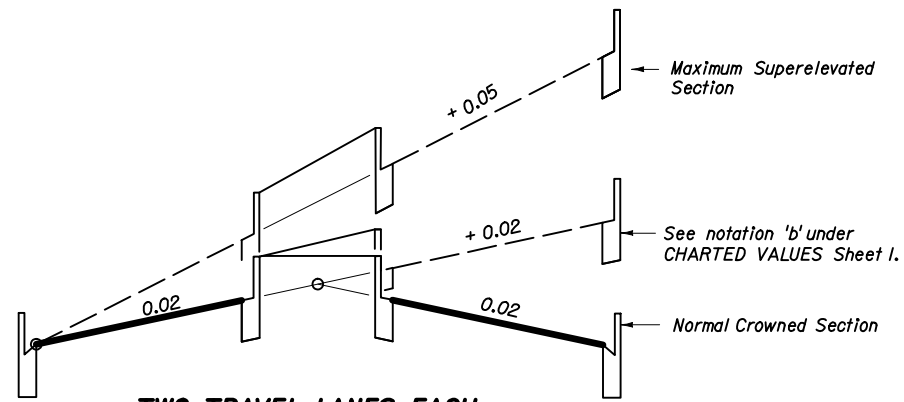


**TWO TRAVEL LANES EACH DIRECTION WITH MEDIAN**

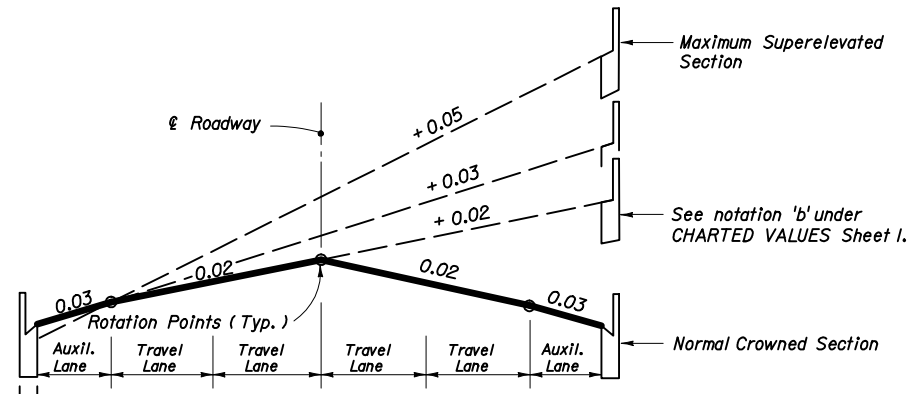

**TWO TRAVEL LANES EACH DIRECTION WITH AUXILIARY LANES**

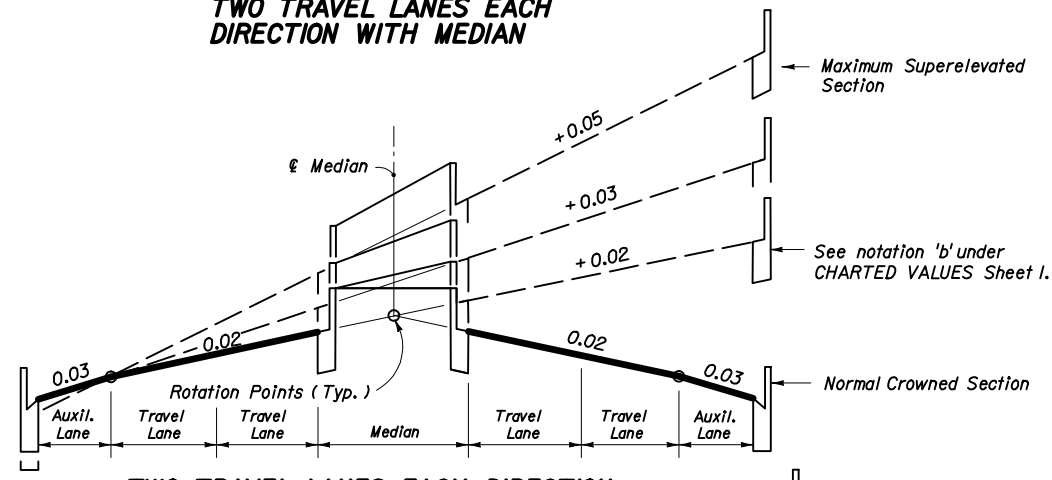


**TWO TRAVEL LANES EACH DIRECTION WITH MEDIAN AND AUXILIARY LANES**

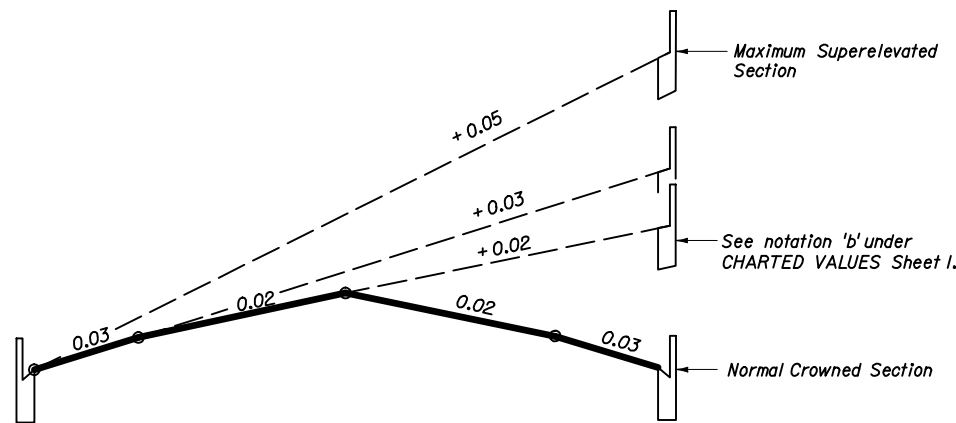


**THREE TRAVEL LANES EACH DIRECTION**

**UNDIVIDED FACILITIES**

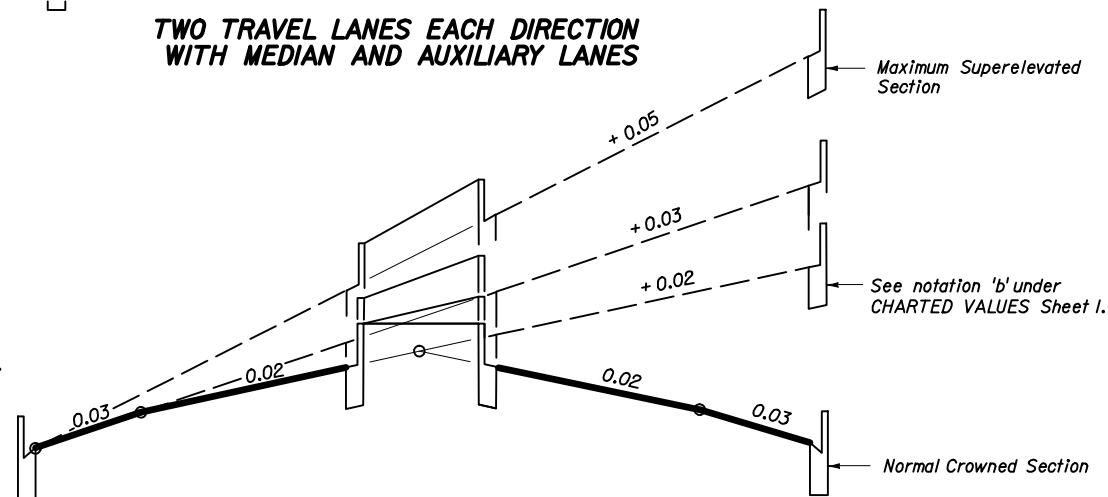

**THREE TRAVEL LANES EACH DIRECTION WITH MEDIAN**

**DIVIDED FACILITIES**

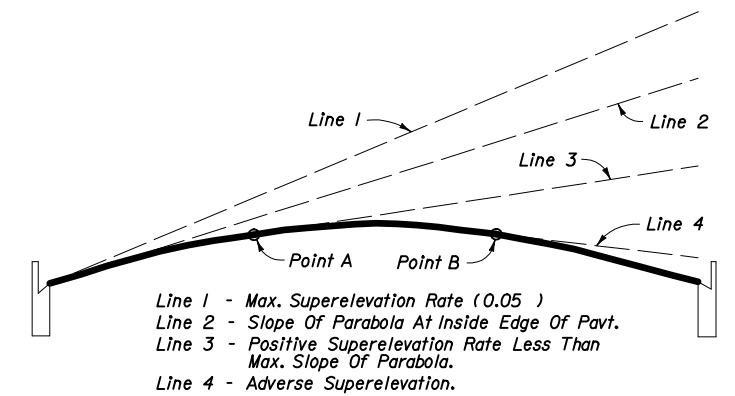

**PARABOLIC SECTION**

Superelevation rates obtained from the chart or table on Sheet I are also applicable to a parabolic crown section. When this section is used, superelevation is established by rotating a tangent about the arc of the parabolic crown until the desired slope is attained (points A & B on sketch). The normal parabolic crown will be maintained outside the limits of the plane thus formed.

**SUPERELEVATION TRANSITION SECTIONS FOR URBAN HIGHWAYS AND HIGH SPEED URBAN STREETS**




2006 FDOT Design Standards

**SUPERELEVATION**  
URBAN HIGHWAYS AND STREETS


Last Revision 00 Sheet No. 2 of 3

Index No. 511

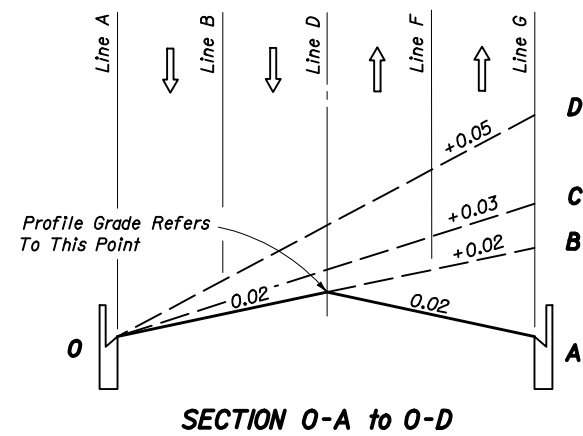

SECTION 0-A to 0-D


TWO LANES EACH DIRECTION

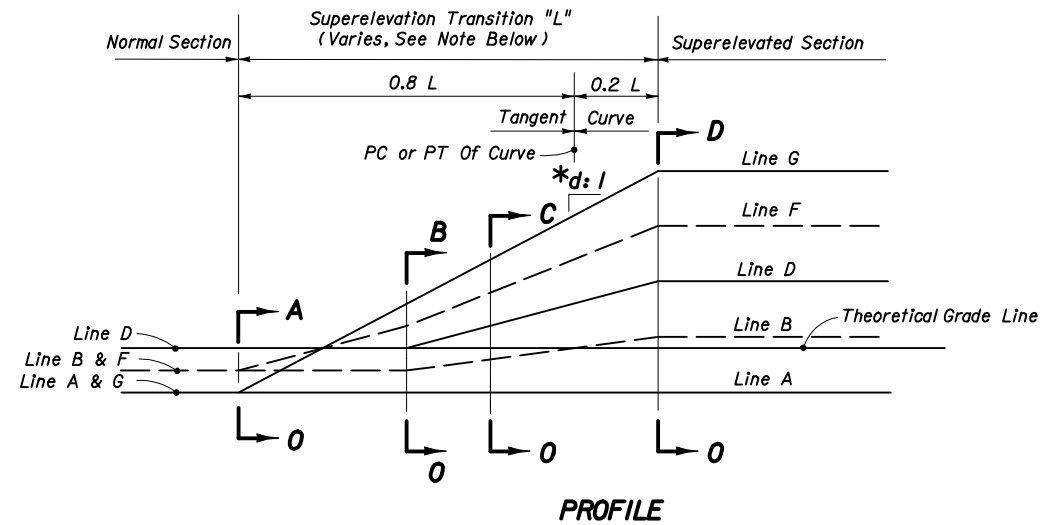

PROFILE


LINE	DESCRIPTION
A	Inside Travel Lane
B	Inside Lane Line
C	Inside Median Edge Pavement
D	℄ Construction
E	Outside Median Edge Pavement
F	Outside Lane Line
G	Outside Travel Lane

Inside And Outside Are Relative To Curve Center

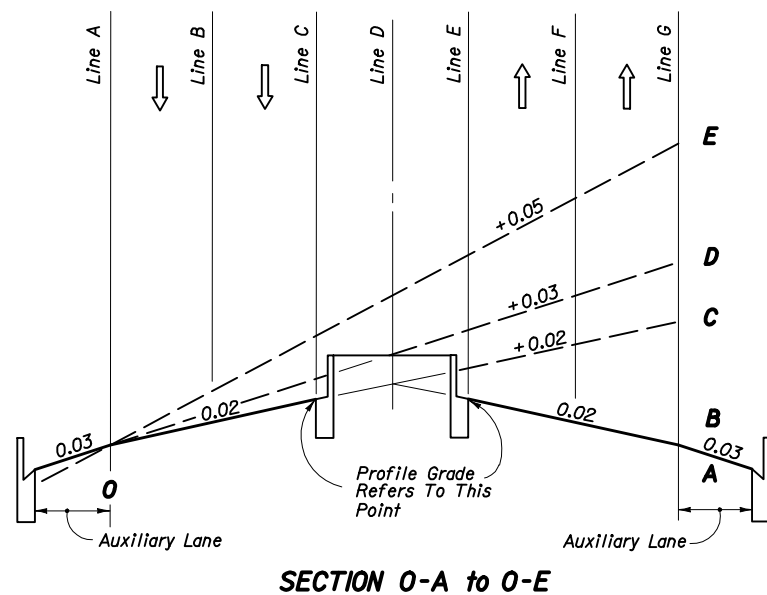

SECTION 0-A to 0-E

TWO LANES EACH DIRECTION WITH MEDIAN AND AUXILIARY LANE

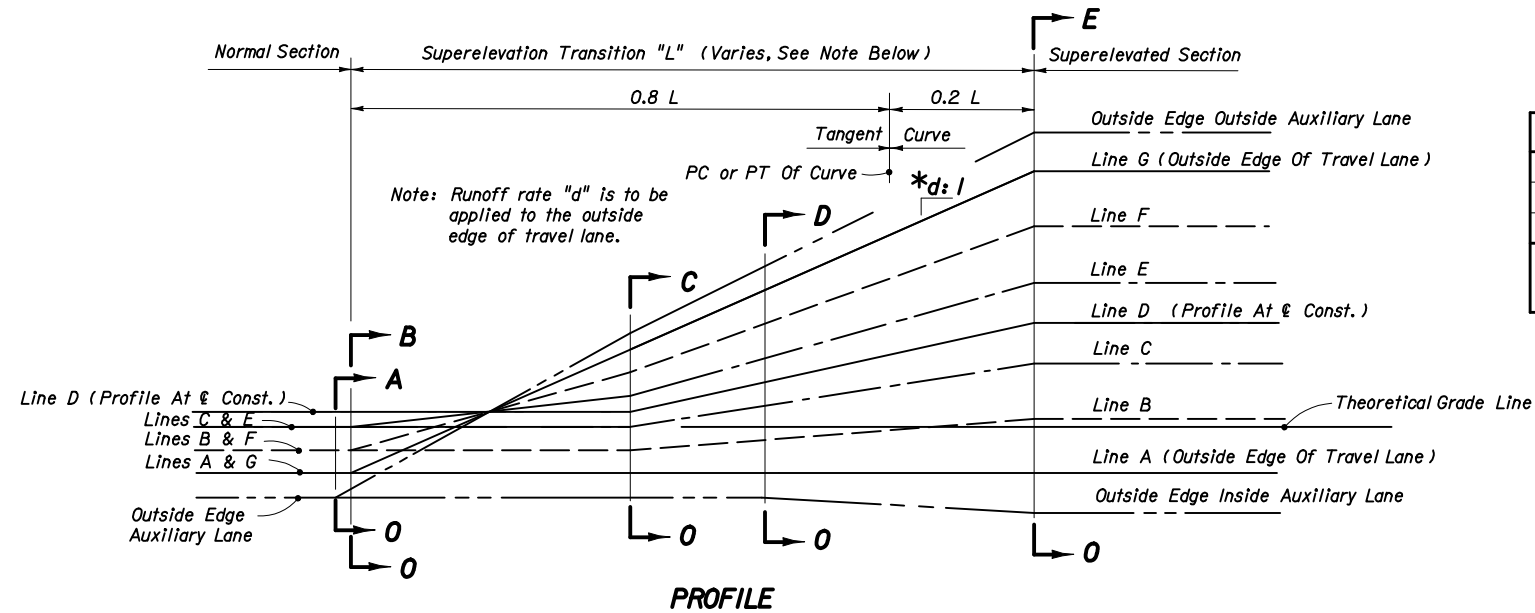

PROFILE

*d (Slope Ratio)	
30 MPH	1:100
40 MPH	1:125
45-50 MPH $\Delta$	1:150

$\Delta$  1:125 May Be Used For 45 MPH Under Restricted Conditions.

Note: The sections and profiles shown are examples of superelevation transitions. Similar schemes should be used for roadways having other sections.

### EXAMPLE SUPERELEVATION SECTIONS AND PROFILES FOR URBAN HIGHWAYS AND HIGH SPEED URBAN STREETS

